E. Mecca (303) x1725

# 8922A
# True RMS Voltmeter

Instruction Manual

FLUKE®

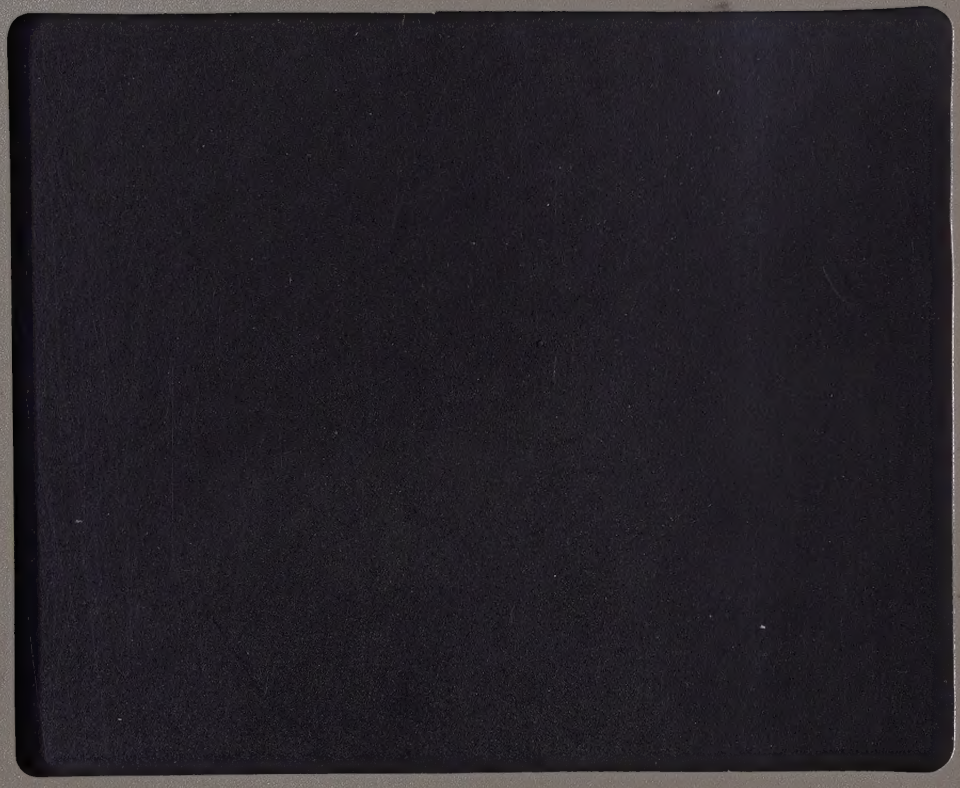

**NOTE**

**This manual documents the Model 8922A True RMS Voltmeter and its assemblies at the revision levels shown in Appendix 7A, Table 7A-1. If your instrument contains assemblies with different revision letters it will be necessary to either update or backdate this manual. Refer to the supplemental change/errata sheet for newer assemblies or to the backdating sheet (Appendix 7A) for older assemblies.**

E. Macur (303) x1725

# 8922A
# True RMS Voltmeter

## Instruction Manual

FLUKE®

P/N 522052
June 1979

©1981, John Fluke Mfg. Co., Inc., all rights reserved Litho in U.S.A.

# WARRANTY

Notwithstanding any provision of any agreement the following warranty is exclusive:

The JOHN FLUKE MFG. CO., INC., warrants each instrument it manufactures to be free from defects in material and workmanship under normal use and service for the period of 1-year from date of purchase. This warranty extends only to the original purchaser. This warranty shall not apply to fuses, disposable batteries (rechargeable type batteries are warranted for 90-days), or any product or parts which have been subject to misuse, neglect, accident, or abnormal conditions of operations.

In the event of failure of a product covered by this warranty, John Fluke Mfg. Co., Inc., will repair and calibrate an instrument returned to an authorized Service Facility within 1 year of the original purchase; provided the warrantor's examination discloses to its satisfaction that the product was defective. The warrantor may, at its option, replace the product in lieu of repair. With regard to any instrument returned within 1 year of the original purchase, said repairs or replacement will be made without charge. If the failure has been caused by misuse, neglect, accident, or abnormal conditions of operations, repairs will be billed at a nominal cost. In such case, an estimate will be submitted before work is started, if requested.

THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. JOHN FLUKE MFG. CO., INC., SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE.

**If any failure occurs, the following steps should be taken:**

1. Notify the JOHN FLUKE MFG. CO., INC., or nearest Service facility, giving full details of the difficulty, and include the model number, type number, and serial number. On receipt of this information, service data, or shipping instructions will be forwarded to you.

2. On receipt of the shipping instructions, forward the instrument, transportation prepaid. Repairs will be made at the Service Facility and the instrument returned, transportation prepaid.

**SHIPPING TO MANUFACTURER FOR REPAIR OR ADJUSTMENT**

All shipments of JOHN FLUKE MFG. CO., INC., instruments should be made via United Parcel Service or "Best Way"* prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid and of adequate size. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

**CLAIM FOR DAMAGE IN SHIPMENT TO ORIGINAL PURCHASER**

The instrument should be thoroughly inspected immediately upon original delivery to purchaser. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument is damaged in any way, a claim should be filed with the carrier immediately. (To obtain a quotation to repair shipment damage, contact the nearest Fluke Technical Center.) Final claim and negotiations with the carrier must be completed by the customer.

The JOHN FLUKE MFG. CO., INC, will be happy to answer all applications or use questions, which will enhance your use of this instrument. Please address your requests or correspondence to: JOHN FLUKE MFG. CO., INC., P.O. BOX C9090, EVERETT, WASHINGTON 98206, ATTN: Sales Dept. For European Customers: Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands.

*For European customers, Air Freight prepaid.

**John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, Washington 98206**

Rev. 6/81

# Table of Contents


| SECTION | TITLE | PAGE |
|---|---|---|
| 1 | **INTRODUCTION AND SPECIFICATIONS** | 1-1 |
| | 1-1. INTRODUCTION | 1-1 |
| | 1-9. SPECIFICATIONS | 1-2 |
| 2 | **OPERATING INSTRUCTIONS** | 2-1 |
| | 2-1. INTRODUCTION | 2-1 |
| | 2-3. SHIPPING INFORMATION | 2-1 |
| | 2-6. INSTALLATION | 2-1 |
| | 2-8. INPUT POWER | 2-1 |
| | 2-10. CONTROLS AND INDICATORS | 2-1 |
| | 2-12. OPERATING NOTES | 2-4 |
| | 2-14. Fuse Replacement | 2-4 |
| | 2-16. Display Indications | 2-4 |
| | 2-21. Measurement Connections | 2-4 |
| | 2-36. Input Signal Considerations | 2-5 |
| | 2-43. Range Selection | 2-6 |
| | 2-50. Voltage Display Mode | 2-6 |
| | 2-53. dB Display Mode | 2-7 |
| | 2-56. dBm Measurements | 2-7 |
| | 2-61. Relative Measurements (REL) | 2-7 |
| | 2-68. Linear Analog Output | 2-8 |
| | 2-70. OPERATION | 2-8 |
| 3 | **THEORY OF OPERATION** | 3-1 |
| | 3-1. INTRODUCTION | 3-1 |
| | 3-3. OVERALL FUNCTIONAL DESCRIPTION | 3-1 |
| | 3-5. Analog Circuitry | 3-1 |
| | 3-10. Digital Circuitry | 3-3 |
| | 3-13. DETAILED BLOCK DIAGRAM DESCRIPTION | 3-3 |
| | 3-15. Signal Conditioner | 3-3 |
| | 3-17. RMS Converter | 3-4 |
| | 3-20. A/D Converter | 3-5 |
| | 3-24. Controller | 3-5 |
| | 3-41. Display and Annunciators | 3-10 |
| | 3-44. Power Supply | 3-10 |


*(continued on page ii)*

**TABLE OF CONTENTS,** *continued*


| SECTION | TITLE | PAGE |
|---|---|---|
| 4 | **MAINTENANCE** | 4-1 |
| | 4-1. INTRODUCTION | 4-1 |
| | 4-3. SERVICE INFORMATION | 4-1 |
| | 4-6. GENERAL MAINTENANCE | 4-1 |
| | 4-7. Access Information | 4-1 |
| | 4-9. INPUT POWER SELECTION | 4-1 |
| | 4-11. Cleaning | 4-3 |
| | 4-13. Fuse Replacement | 4-3 |
| | 4-15. PERFORMANCE CHECK | 4-3 |
| | 4-18. Low and Midband Performance Check (Volts Display Mode | 4-3 |
| | 4-20. dB Display Mode Check | 4-5 |
| | 4-22. DC Low Level Check | 4-5 |
| | 4-24. AC Low Level Check | 4-5 |
| | 4-26. High Frequency Response Check | 4-5 |
| | 4-28. CALIBRATION ADJUSTMENTS | 4-7 |
| | 4-32. Power Supply Calibration Adjustment | 4-10 |
| | 4-34. Low and Midband Accuracy Adjustment | 4-10 |
| | 4-36. Linear Analog Output | 4-11 |
| | 4-38. AC Low Level Calibration and Filter Check | 4-12 |
| | 4-40. High Frequency Calibration | 4-13 |
| | 4-42. RMS Protection Circuit Calibration | 4-14 |
| | 4-44. TROUBLESHOOTING | 4-14 |
| | 4-48. RMS Sensor Replacement | 4-18 |
| | 4-50. A/D Calibration Resistor Selection | 4-19 |
| | 4-52. DC Offset Resistor Selection | 4-19 |
| 5 | **LISTS OF REPLACEABLE PARTS** | 5-1 |
| | TABLE OF CONTENTS | 5-1 |
| | 5-1. INTRODUCTION | 5-2 |
| | 5-4. HOW TO OBTAIN PARTS | 5-2 |
| 6 | **OPTION AND ACCESSORY INFORMATION** | 6-1 |
| | TABLE OF CONTENTS | 6-1 |
| 7 | **GENERAL INFORMATION** | 7-1 |
| 7A | **MANUAL CHANGE INFORMATION** | 7A-1 |
| 8 | **SCHEMATIC DIAGRAMS** | 8-1 |
| | TABLE OF CONTENTS | 8-1 |

# List of Tables


| TABLE | TITLE | PAGE |
|---|---|---|
| 1-1. | 8922A Options and Accessories | 1-1 |
| 1-2. | Specifications | 1-2 |
| 1-3. | Specifications for 8922A Options | 1-6 |
| 2-1. | Controls, Indicators and Connectors | 2-3 |
| 3-1. | Signal Conditioner Gain Configuration | 3-4 |
| 3-2. | Controller Summary | 3-7 |
| 3-3. | Output Range Codes | 3-9 |
| 3-4. | Over/Under Conditions | 3-9 |
| 3-5. | Input Range Codes | 3-9 |
| 4-1. | Recommended Test Equipment | 4-2 |
| 4-2. | Input Power Selection | 4-2 |
| 4-3. | Low and Midband Performance Checks (Volts Display Mode) | 4-4 |
| 4-4. | dB Display Mode Check | 4-5 |
| 4-5. | DC Low Level Check | 4-6 |
| 4-6. | High Frequency Response Check | 4-7 |
| 4-7. | Low and Midband Accuracy Adjustments | 4-10 |
| 4-8. | High Frequency Calibration | 4-13 |
| 4-9. | 8922A Troubleshooting Procedure | 4-15 |
| 4-10. | Attenuator Logic States | 4-18 |
| 4-11. | R204 Resistive Values (mf, ±1%, 1/8W) | 4-19 |
| 4-12. | R19/R34, R66/R76 Resistive Values (mf, ±1%, 1/8W) | 4-19 |

# List of Illustrations


| FIGURE | TITLE | PAGE |
|---|---|---|
| Frontispiece | 8922A True RMS Voltmeter | *vi* |
| 2-1. | PTI Connection | 2-1 |
| 2-2. | Controls, Indicators, and Connectors | 2-2 |
| 2-3. | Matched Impedance Measurement Techniques | 2-5 |
| 2-4. | Typical 8922A Crest Factor Limitation Below 10 Hz | 2-6 |
| 2-5. | Typical Relative dB Measurements | 2-8 |
| 3-1. | Overall Block Diagram | 3-1 |
| 3-2. | Detailed Block Diagram | 3-2 |
| 3-3. | Signal Conditioner | 3-3 |
| 3-4. | RMS Converter | 3-4 |
| 3-5. | A/D Converter Simplified Schematic and Timing | 3-6 |
| 3-6. | Controller Timing (A/D Converter) | 3-7 |
| 3-7. | Controller Functions | 3-8 |
| 3-8. | Display and Annunciators | 3-10 |
| 4-1. | Low and Midband Performance Test Set-Up | 4-3 |
| 4-2. | DC Low Level Check | 4-6 |
| 4-3. | AC Low Level Check | 4-6 |
| 4-4. | High Frequency Response Check | 4-7 |
| 4-5. | Calibration and Test Point Locations | 4-8 |
| 4-6. | Linear Analog Output Check | 4-12 |
| 4-7. | High Frequency Calibration | 4-14 |
| 4-8. | A/D Waveforms (General Conditions) | 4-17 |

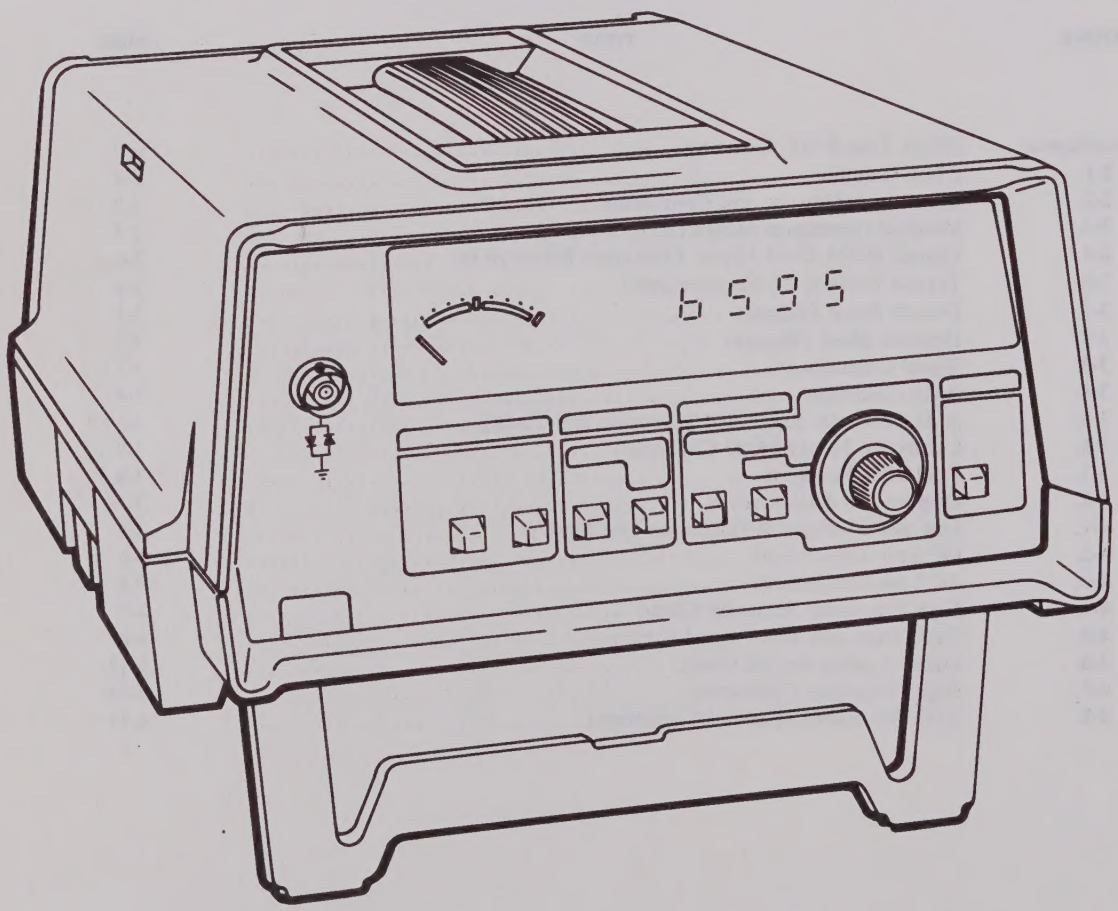


**8922A True RMS Voltmeter**

# Section 1
# Introduction & Specifications

## 1-1. INTRODUCTION

1-2. The Model 8922A is a Digital True RMS Voltmeter, capable of accurately measuring the true rms value of nonsinusoidal signals containing AC or AC + DC components. The instrument has a frequency range of 10 Hz to 11 MHz with a full-scale crest factor of seven, and is capable of displaying measurements in either volts or dB units.

1-3. Selecting the VOLTS position on the dB/VOLTs switch enables the volts display mode and two applicable front panel annunciators (V, mV). In this mode, the instrument displays up to a 3½ digit figure to indicate the true rms value of any AC or AC + DC input signal whose amplitude is between 180 $\mu$V and 700V rms (1000V peak).

1-4. The dB display mode (logarithmic) is enabled when dB is selected on the front panel dB/VOLTS display switch. In this mode, the instrument displays up to a 4½ digit dBm value of the input signal referenced to one-of-twelve manually selected impedances (50 to 1200 ohms). The dB display mode also uses two annunciators -- dB and RELATIVE REFERENCE -- and to establish the instrument's operating status. The RELATIVE REFERENCE annunciator lights whenever the REL switch is depressed to indicate that any further dB measurements will be referenced to the voltage present at the time the switch was pressed. An UNCAL annunciator lights with both display modes when internal protection circuits are energized. When AUTO is selected on the AUTO/HOLD switch (the out position) the autorange mode selects one-of-seven input ranges to optimize the display resolution.

1-5. Complementing the instrument's high digital resolution is an analog panel meter for use in applications that require peaking or nulling. This meter does not have calibration markings since it is intended for peaking and nulling indications only.

1-6. Note that the 8922A accomodates floating measurements up to approximately 0.6V peak with respect to earth ground. Isolation of 0.6V peak will accomodate the few hundred millivolts of typical common mode voltage. Full operator protection is maintained since -- under fault conditions -- the diode isolation circuitry conducts to insure that the common mode voltage is never greater than one diode drop.

1-7. Several options and accessories are available for use with the 8922A. The options and accessories are listed and described in Table 1-1. They may be ordered for factory or field installation. Detailed information concerning each option and accessory is given is Section 6 of this manual.

**Table 1-1. 8922A Options and Accessories**

| MODEL NO. | DESCRIPTION |
|---|---|
| **OPTIONS** | |
| 8922A-003 | Counter Output |
| 8922A-004 | Logarithmic Analog Output |
| 8922A-521 | DMM Digital Interface |
| 8922A-529 | DMM-IEEE-488 Interface |
| **ACCESSORIES** | |
| Y2014 | Rack Mounting Kit (single unit) |
| Y2015 | Rack Mounting Kit (double unit) |
| Y2020 | Panel Mount (DIN size) |

1-8. The PTI (Portable Test Instrument) case is a family of injection molded, plastic instrument packages of various sizes which may be stacked vertically and latched together to form portable test stations. When instruments are stacked the weight of the stack should be limited to 40 pounds total, and the instrument drawing the most power should be on the top. Stacked instruments have a horizontal air space between them to reduce heat conduction between instruments.

## 1-9. SPECIFICATIONS

1-10. Detailed specifications for the Model 8922A True RMS Voltmeter are given in Table 1-2. Specifications for the Model 8922A options are given in Table 1-3.

**Table 1-2. Specifications**

**ELECTRICAL (Basic)**

The electrical specifications given assume an operating temperature of 23°C ±5°C, relative humidity up to 80% and a minimum 90 day calibration cycle.

| | |
|---|---|
| FUNCTIONS: | AC true rms, AC + DC true rms (with 2 Hz damping for improved low frequency performance). |
| DISPLAYS: | Digital Display, Panel selectable for volts or dB.<br>Analog peaking/nulling meter. |
| RANGING: | Autoranging, HOLD to defeat Autoranging, STEP-UP for manual up-ranging. Ranges up at 2000 counts. Ranges down at 180 counts. |
| LOW PASS FILTER: | 200 kHz Low Pass Filter. |
| MAXIMUM INPUT: | 700V rms or 1000V peak, not to exceed 1 X $10^8$ volts-Hz product on any range. |
| RESPONSE TYPE: | True rms thermal converter will accept: sine, complex, pulse, or random waveforms. |
| RESPONSE TIME: | |
| AC: | 1.6 seconds typically to rated accuracy within a range, composed of 1 second settling time and 0.6 seconds macimum digitizing time. |
| AC + DC: | 7 seconds maximum to rated accuracy within a range, composed of 5 seconds settling time and 2 seconds maximum digitizing time. |
| INPUT IMPEDANCE: | 2 mV to 700V range = 10 MΩ/shunted by <30 pF. |
| CREST FACTOR: | 7 at full-scale, increasing proportionately as percent of scale decreases. See the Crest Factor portion of the Input Signal Considerations in Section 2. |
| FREQUENCY RANGE: | 2 mV – 20V range = 2 Hz to 11 MHz<br>200V – 700V range = 2 Hz to 1 MHz |

**ELECTRICAL (VOLTS Display Mode)**

| | |
|---|---|
| RANGES: | 2 mV, 20 mV, 200 mV, 2V, 20V, 200V, and 700V. |
| RESOLUTION: | 0.05% of range. (3½ digits). |

Table 1-2. Specifications (cont)

**ELECTRICAL (dB Display Mode)**

dB RANGE: In the autorange mode the instrument appears as though it has a single range spanning 132 dB. Transients will appear in the readout as the transition through which the analog voltage range points occur.

dB RANGE REFERENCES:

dBm REFERENCES: Twelve manually selectable impedances with which to reference a 0 dBm, 1mW signal level. Impedances are 50, 75, 93, 110, 124, 135, 150, 300, 600, 900, 1000 and 1200 ohms.

RELATIVE dB REFERENCE: A voltage present when this switch is depressed to its REL position is held as 0 dB reference for all other voltages.

dB RESOLUTION: 0.01 dB (4½ digits).

ACCURACY: The accuracy specifications given below apply to the volts and dB display modes at 9% to 100% of full-scale, 23°C ±5°C, 90 day. For 6 month specifications, multiply all values by 1.5.

**8922A Voltmeter Specifications 23°C ±5°C, 90 Days**

<table>
<tr><th rowspan="2">INPUT VOLTAGE</th><th rowspan="2">RANGE</th><th colspan="8">AC ACCURACY % OF VOLTAGE READING OR ±dB</th></tr>
<tr><th>2 Hz</th><th>10 Hz</th><th>20 Hz</th><th>50 Hz</th><th>10 kHz</th><th>200 kHz</th><th>1 MHz</th><th>2 MHz 11 MHz</th></tr>
<tr><td rowspan="2">180-700V<br>18.0-199.9V</td><td rowspan="2">700V<br>200V</td><td colspan="5">FILTER IN</td><td colspan="3">FILTER OUT</td></tr>
<tr><td rowspan="3">Damping* (3% or 0.35 dB)</td><td rowspan="2">5% or 0.5 dB Damping* (1% or 0.15 dB)</td><td rowspan="2">1% or 0.15 dB</td><td rowspan="2">0.5% or 0.1 dB</td><td rowspan="2">0.7% or 0.15 dB</td><td colspan="2">Not Specified</td></tr>
<tr><td>1.80-19.99V<br>.180-1.999V<br>18.0-199.9 mV</td><td>20V<br>2V<br>200 mV</td><td>3% or 0.35 dB</td><td rowspan="3">5% or 0.5 dB</td></tr>
<tr><td>1.80-19.99 mV</td><td>20 mV</td><td>5% or 0.5 dB Damping* (2% or 0.25 dB)</td><td>2% or 0.25 dB</td><td>1% or 0.15 dB</td><td>2% or 0.25 dB</td><td colspan="2"></td></tr>
<tr><td>.180-1.999 mV</td><td>2 mV</td><td>Damping* (5% or 0.5 dB)</td><td>5% or 0.5 dB</td><td>3% or 0.35 dB</td><td>2% or 0.25 dB</td><td colspan="3">4% or 0.4 dB</td></tr>
</table>

**AC + DC ACCURACY**
**(USE 50 Hz - 10 kHz SPEC FOR DC ONLY)**

ADD TO AC SPECIFICATION: ±10 Digits or 0.5 dB Above 2 mV.
±100 Digits or 5 dB Below 2 mV.

*Valid When AC + DC (Damping) is Selected and Input is AC Only.

Below 2 mV add: $\frac{5}{\text{mV Input}}$ digits or $\frac{0.05}{(\text{mV Input})^2}$ dB

Table 1-2. Specifications (cont)

**TEMPERATURE COEFFICIENTS at 0°C to 18°C, 28°C to 50°C (32 to 64.4°F, 82.4 to 122°F)**

FUNCTION

AC

| 2 Hz | 1 MHz | 11 MHz |
|---|---|---|
| 0.07%/°C or 0.006 dB/°C | 0.1%/°C or 0.01 dB/°C | |

AC + DC

| INPUT | ABOVE 2 mV | BELOW 2 mV |
|---|---|---|
| AC + DC | ±(2 digits/°C or 0.1 dB/°C) | ±(20 digits/°C or 1.0 dB/°C) |
| AC | Same as AC Function | $+\frac{2\text{ digits}}{\text{mV input}}$ /°C or $+\frac{2\text{ digits}}{(\text{mV input})^2}$ /°C |

**LOW PASS FILTER RESPONSE (Typical)**

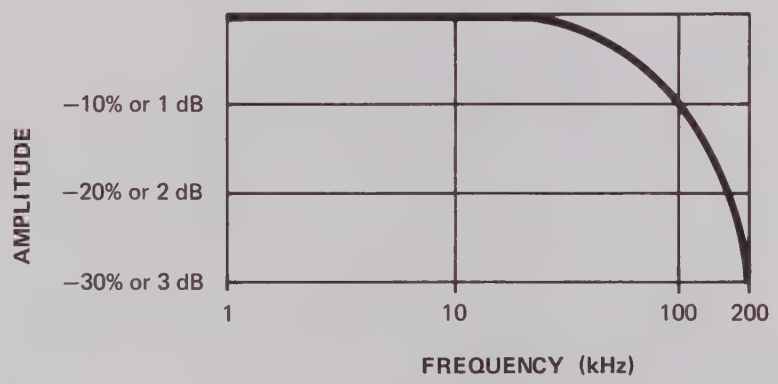


**GENERAL**

INPUT: Isolated BNC input floating up to .6V peak.

DISPLAYS: 5 (0.3" high) digit, 7-segment LED's with automatic decimal point location and mV, V, dB, RELATIVE REFERENCE, and UNCAL annunciators. The display also incorporates an uncalibrated analog meter for nulling and peaking.

AUTORANGING RATE:

VOLTS: AC 700 ms max/range change; 2.2 sec max for 6 range changes.
AC + DC 2.5 sec ac max/range change; 10 sec max for 6 range changes.

dB: AC 950 ms max/range change; 2.9 sec max for 6 range changes.
AC + DC 3.5 sec max/range change; 13 sec max for 6 range changes.

READING RATE: AC 2.5 readings per second.
AC + DC 1 reading per second.

OVERRANGE INDICATION: Flashes maximum allowed reading for that range.

UNDERRANGE INDICATION: Flashes decimal point, but continues to display the reading.

**Table 1-2. Specifications (cont)**

**GENERAL (cont):**

| | |
|---|---|
| UNCAL INDICATION: | Illuminates to indicate crest factor is exceeded. |
| MAXIMUM COMMON MODE: | |
| VOLTAGE: | 400 mV rms or 600 mV peak, diode clamped. |
| INPUT COMMON MODE: | |
| REJECTION: | > 80 dB @ 50 or 60 Hz (with 100 ohms in either lead). |
| LINEAR ANALOG OUTPUT: | Each range provides a linear output with 2V dc equal to 2000 counts on the readout, ±1.0% of reading relative to display; essentially 0 ohm output resistance into a > 10 kΩ load; non-isolated with output common the same as input common. |
| STORAGE TEMPERATURE: | −40°C to +75°C. |
| OPERATING TEMPERATURE: | 0°C to 50°C. |
| HUMIDITY RANGE: | 80% RH. |
| MTBF: | Greater than 10.000 hours. |
| POWER: | 100V ac ±10%, 120V ac ±10%, 220V ac ±10%, or 240V ac ±10% to 250V ac max. selected by internal switches, 45 to 440 Hz, 10 W max. |
| DIMENSIONS: | 32.7 cm (12.9 in.) L X 20.3 cm (8.0 in.) W X 10.8 cm (4.3 in.) H. |
| WEIGHT: | 2.47 kg (5 lb. 7 oz.). |

**Table 1-3. Specifications for 8922A Options**

| | |
|---|---|
| **OPTION –003, COUNTER OUTPUT OPTION** | |
| OUTPUT VOLTAGE: | 100 mV peak square wave. |
| OUTPUT IMPEDANCE: | 50 ohms. |
| MAXIMUM ISOLATED LEVEL: | Maintains instrument isolation with respect to earth ground. |
| **OPTION –004, LOGARITHMIC ANALOG OUTPUT OPTION** | |
| OUTPUT VOLTAGE DC: | 200 μV rms input = 0 dB, 0V dc out.<br>700V rms input = 131 dB, 13.1V dc out.<br>i.e., 100 mV = 1 dB.<br>Non-isolated, output common is the same as input common. |
| LINEARITY: | Within each range: ±0.35 dB.<br>Over all seven ranges: ±2 dB. |
| OUTPUT IMPEDANCE: | 1 kΩ. |
| **OPTION –521 DMM DIGITAL INTERFACE** | |
| DESCRIPTION: | Serial BCD output of all digits and annunciators. |
| OPTICAL ISOLATION: | Transfer reliable up to 500V ac rms common mode from dc to 440 Hz. |
| OPERATING POWER: | From DMM +5V and GND<br>From external device +5V at less than 10 mA and GND. |
| **OPTION –529 DMM-IEEE-488 INTERFACE** | |
| DESCRIPTION: | Option for interfacing the 8922A to IEEE 488-1978. Package consists of one pcb mounted in the 8922A, one pcb mounted in the 1120A Translator and one interconnect cable. The 1120A must be used to interface to the IEEE 488 General Purpose Bus. |
| FUNCTION: | Talker. |
| IEEE REPERTOIRE | SH1, AH1, T3, TE3. |

# static awareness

A Message From

**John Fluke Mfg. Co., Inc.**

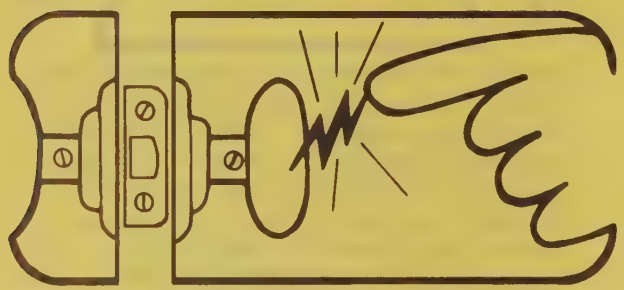

Some semiconductors and custom IC's can be damaged by electrostatic discharge during handling. This notice explains how you can minimize the chances of destroying such devices by:

1. Knowing that there is a problem.
2. Learning the guidelines for handling them.
3. Using the procedures, and packaging and bench techniques that are recommended.

The Static Sensitive (S.S.) devices are identified in the Fluke technical manual parts list with the symbol "⊗"

The following practices should be followed to minimize damage to S.S. devices.

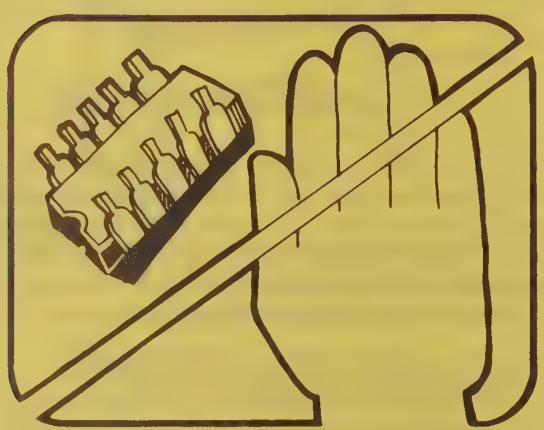

1. MINIMIZE HANDLING

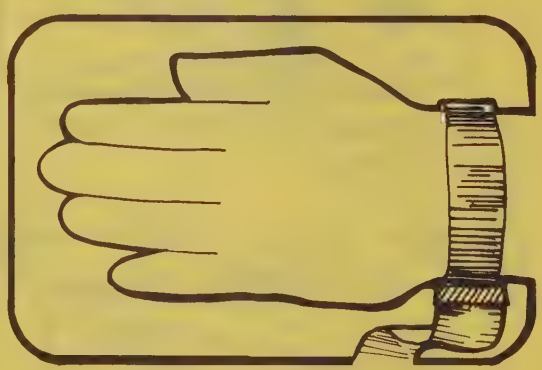

3. DISCHARGE PERSONAL STATIC BEFORE HANDLING DEVICES

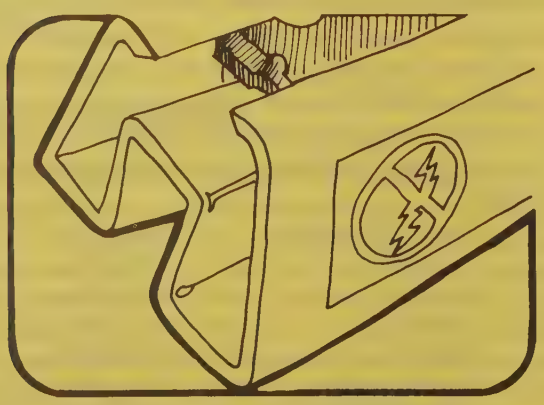

2. KEEP PARTS IN ORIGINAL CONTAINERS UNTIL READY FOR USE.

4. HANDLE S.S. DEVICES BY THE BODY

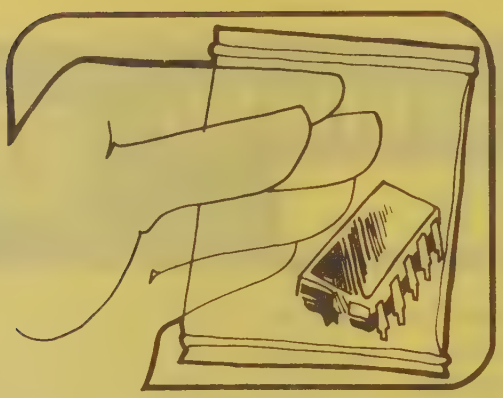

5. USE ANTI-STATIC CONTAINERS FOR HANDLING AND TRANSPORT

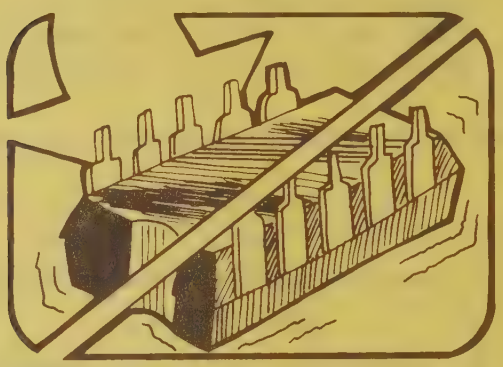

6. DO NOT SLIDE S.S. DEVICES OVER ANY SURFACE

7. AVOID PLASTIC, VINYL AND STYROFOAM® IN WORK AREA

PORTIONS REPRINTED
WITH PERMISSION FROM TEKTRONIX, INC.
AND GENERAL DYNAMICS, POMONA DIV.

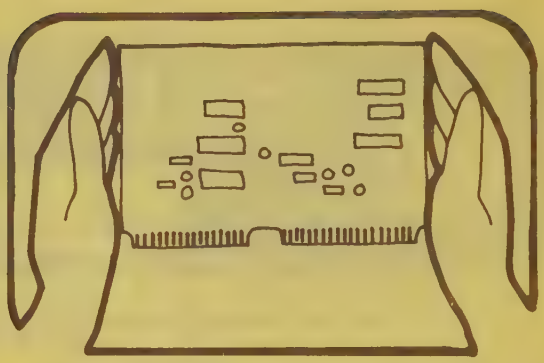

8. WHEN REMOVING PLUG-IN ASSEMBLIES, HANDLE ONLY BY NON-CONDUCTIVE EDGES AND NEVER TOUCH OPEN EDGE CONNECTOR EXCEPT AT STATIC-FREE WORK STATION. PLACING SHORTING STRIPS ON EDGE CONNECTOR USUALLY PROVIDES COMPLETE PROTECTION TO INSTALLED SS DEVICES.

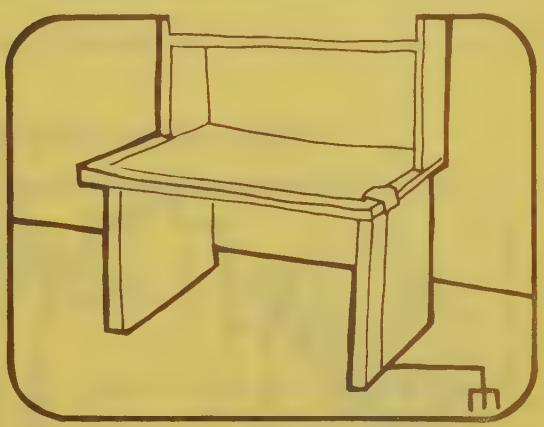

9. HANDLE S.S. DEVICES ONLY AT A STATIC-FREE WORK STATION

10. ONLY ANTI-STATIC TYPE SOLDER-SUCKERS SHOULD BE USED.

11. ONLY GROUNDED TIP SOLDERING IRONS SHOULD BE USED.

---

Anti-static bags, for storing S.S. devices or pcbs with these devices on them, can be ordered from the John Fluke Mfg. Co., Inc.. See section 5 in any Fluke technical manual for ordering instructions. Use the following part numbers when ordering these special bags.

| John Fluke Part No. | Description |
|---|---|
| 453522 | 6" X 8" Bag |
| 453530 | 8" X 12" Bag |
| 453548 | 16" X 24" Bag |
| 454025 | 12" X 15" Bag |
| Pink Poly Sheet 30"x60"x60 Mil P/N RC-AS-1200 $20.00 | Wrist Strap P/N TL6-60 $7.00 |

® Dow Chemical



J0089B-07U7810/SE EN Litho in U.S.A.

# Section 2
# Operating Instructions

## 2-1. INTRODUCTION

2-2. The information we have presented in this section is intended to familiarize you with the capabilities and limitations of the Model 8922A. We have included instructions for the installation and operation of your 8922A as well as a brief description and identification of each control and indicator on the instrument.

## 2-3. SHIPPING INFORMATION

2-4. The Model 8922A is packaged and shipped in a protective container. When you receive the equipment, make a thorough inspection for any possible shipping damage. If your 8922A was damaged in shipment contact your nearest John Fluke Service Center immediately. A list of these service centers may be found in Section 7.

2-5. If reshipment of the instrument is necessary, use the original container. If the original container is not available, a new one may be obtained from the John Fluke Mfg. Co., Inc. Please indicate the instrument's model number (8922A) when requesting a new shipping container.

## 2-6. INSTALLATION

2-7. The 8922A is designed for bench-top use, for installation in a standard 19-inch equipment rack, or for panel mounting into any DIN size opening. Available rack mounting kits are listed in Table 1-2. In bench-top environments the 8922A may be stacked with other Fluke products that use the PTI case. To connect two or more PTI cases, pull the side connectors out, place one case squarely on top of another and press in on the side connectors of the top case until they seat firmly into the slots on the case below. See Figure 2-1.

**CAUTION**

**Before you attempt to lift a series of stacked instruments, check each unit to ensure that its case connectors are properly mated and latched to the next lower instrument.**

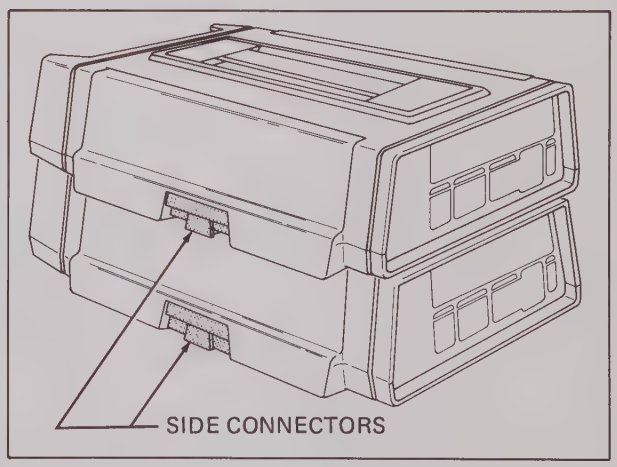


**Figure 2-1. PTI Connection**

## 2-8. INPUT POWER

2-9. The 8922A can be operated from one of several line voltages: 120, 100, 220, or 240V. Refer to the procedure in Section 4 to alter the line power configuration of the instrument. We recommend that this procedure be performed by qualified personnel only.

## 2-10. CONTROLS AND INDICATORS

2-11. The 8922A controls, indicators, and connectors are shown in Figure 2-2 and described in Table 2-1. Locate each feature on your DMM as you read the description.

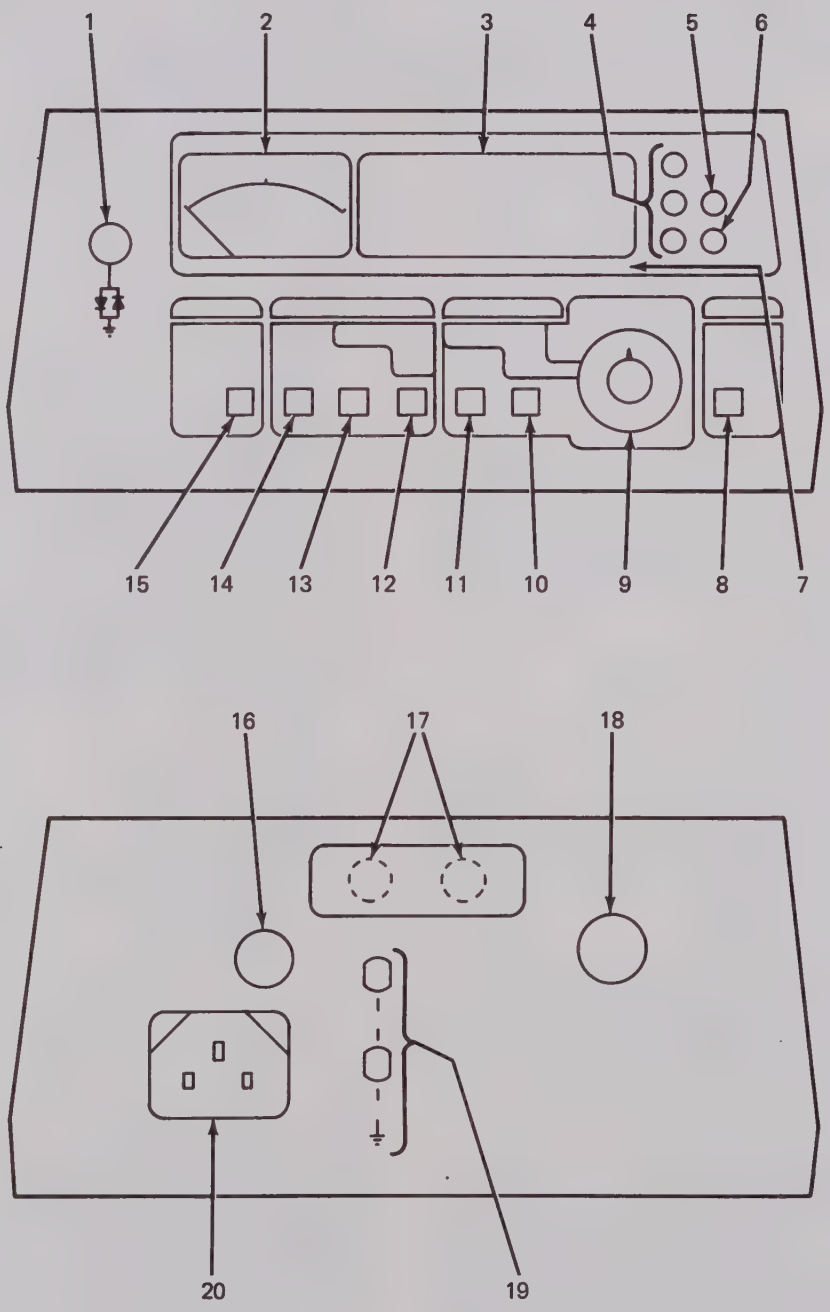


Figure 2-2. Controls, Indicators, and Connectors

**Table 2-1. Controls, Indicators, and Connectors (cont)**

| REF NO. | NAME | FUNCTION |
|---|---|---|
| 1 | INPUT | A BNC input connector. The low side is isolated from power ground through a pair of parallel diodes. |
| 2 | Analog Panel Meter | Uncalibrated panel meter provides analog tracking of input level; useful for peaking and nulling indications. |
| 3 | Digital Display | LED display provides a direct readout of the input signal level; includes decimal point and polarity. |
| 4 | Annunciators | LED's that light to indicate the selected measurement function V (volts), mV (millivolts) or dB (decibels). |
| 5 | UNCAL | An LED that light to indicate that the instrument's internal protection circuitry is energized, see Crest Factor, under operating instructions. |
| 6 | RELATIVE REFERENCE | An LED that lights to indicate that the voltmeter is in the dB display mode and using a relative voltage reference. |
| 7 | 2/20/200/700 | Indicate DMM range by decimal point locations. |
| 8 | POWER Switch | A push-push switch used to turn the instrument ON (in) and OFF (out). |
| 9 | dBm REFERENCE | Rotary switch used to manually select 1-of-12 reference impedances when the dBm and dB display modes are selected. |
| 10 | REL/dBm | A push-push switch used to select either the relative dB or the dBm display mode. When REL is depressed, the existing input level is used to establish a 0 dB reference. Subsequent level changes at the input are displayed in dB and referenced to the operator established 0 dB level. When dBm is selected, measurements are displayed in terms of dBm and the dBm REFERENCE setting. |
| 11 | dB/VOLTS | A push-push switch used to select either the voltage (out) or dB (in) display mode. |
| 12 | STEP UP | A momentary pushbutton switch used to incrementally step the voltmeter to its higher range. This switch is enabled only when the HOLD RANGE mode is selected. |
| 13 | HOLD/AUTO | A push-push switch used to select the manual (HOLD) or autorange (AUTO) mode. Selecting HOLD (in) enables manual upranging with the STEP UP switch. Selecting AUTO (out) enables the unit to autorange. |
| 14 | FILTER | A push-push switch which, when depressed, engages a single pole filter to reject unwanted high frequency signals. See the Specifications table for effect on accuracy. |
| 15 | AC/AC + DC (damping) | A push-push switch used to include (in) or delete (out) dc components as part of the input signal level. When AC + DC is selected (in) damping increases which extends low frequency operation down to 2 Hz. Reading and ranging rates are slower. |
| 16 | F1 | Line fuse, MDL 1/8A slo-blo.( 5 x 20 mm, 1/8A, slow acting for metric.) |

Table 2-1. Controls, Indicators, and Connectors (cont)

| REF. NO. | NAME | FUNCTION |
|---|---|---|
| 17 | DIGITAL OUTPUT/ LOG-ANALOG OUTPUT | An output port reserved for use with the Logarithmic Output Option-004-521 Option, or the -529 IEEE Interface Option, see Section 6 for details. |
| 18 | COUNTER OUTPUT | An output port reserved for use with the Counter Output Option -003. See Section 6 for details. |
| 19 | Linear Analog | A pair of banana jacks for output accessing the dc linear analog output voltage. This voltage is proportional to the V rms input and is linearly scaled; 2V dc out equals a 2000 count readout. The scale repeats for each range. |
| 20 | Input Power Connector | A 3-prong line power connector for connecting the unit to line power. |

## 2-12. OPERATING NOTES

2-13. The following paragraphs describe various conditions which you should be aware of before attempting to operate the 8922A.

### 2-14. Fuse Replacement

2-15. The Model 8922A is fuse protected from the power line. You can access the fuse by pressing and turning (CCW) the fuse cap located on the rear panel. When replacement is necessary use an MDL type 1/8 amp slo-blo fuse for all voltage configurations. (For metric fuse, use 1/8A, slow acting, 5 x 20 mm glass tube type.)

### 2-16. Display Indications

2-17. In addition to the standard digital readout, we have equipped the front panel display with a series of unique visual indicators. These include an overrange/overload indication, an underrange indication, and an analog meter. They function automatically to help you make error free measurements.

2-18. For example, when an input signal level exceeds the display limit for the selected range an overrange will occur. The display digits flash while the overrange is present. Selecting a higher range will eliminate the overrange condition.

2-19. Measurement accuracy is uncertain when the higher voltage ranges are used to measure low level signals. To alert you to this condition, the decimal point will flash when the input is too low for the selected range (less than 180 digits). You may eliminate this underrange indication by manually selecting a lower range or selecting autorange.

2-20. The uncalibrated analog panel meter complements the digital display by linearly tracking the input signal level. It provides a 0-to-100%-of-scale indication for the selected range. This feature will aid you in detecting the peak and null points of inputs having varying levels.

### 2-21. Measurement Connections

2-22. COAX OR OPEN LEADS

2-23. We recommend that shielded or coax leads be used at the input for low level or high frequency measurements. Open leads (unshielded) may pick up interference from other sources causing errors at low levels. You may reduce high frequency errors by minimizing inductance and capacitance between the source and the 8922A input connector.

2-24. SAFETY CONSIDERATIONS

2-25. Under normal operating conditions, the 8922A will not present a potential electrical shock hazard to the operator. However, careless use of input-lead connectors and/or adapters may create a shock hazard.

2-26. The low input on the 8922A is connected to power ground through a pair of diodes (see front panel connector). These diodes allow the low input terminal to float up to 400 mV rms. Their function is twofold; they provide isolation between input low and power ground, and they protect the operator from the possibility of hazardous voltages existing on the exposed low input connector.

2-27. At first glance, 400 mV of isolation does not appear significant. However, in most cases it provides

enough isolation to prevent ground loop currents and, therefore, measurement errors due to ground loops.

2-28. When you connect the low input of the 8922A to a potential greater than 400 mV above power ground, the diode pair conducts and effectively clamps the input common mode voltage.

**WARNING**

**TO AVOID ELECTRICAL SHOCK HAZARD DO NOT REMOVE OR OTHERWISE DEFEAT THE INPUT DIODE PAIR.**

2-29. Under no circumstances should you attempt to defeat the function of the diodes. Specifically, the diodes should not be removed, the ground return on the power cord should not be floated, and an isolation transformer should not be used to power the 8922A. If the diodes are defeated, a shock hazard will exist at the low input connector when the low input lead is floated above 30 volts.

2-30. IMPEDANCE MATCHING

2-31. Two types of ac voltage measurements are typically made; those involving matched impedance systems and those where voltmeter loading is minimized (high impedance measurements) and no impedance matching occurs.

2-32. When matched impedance systems are measured, the input cable should be terminated as close as possible to the 8922A input, thereby minimizing input capacitance and enhancing accuracy at high frequencies. This is accomplished by including the meter as an integral part of the circuit as shown in Figure 2-3A. Notice that the integrity of the 50Ω system is maintained by using a 50Ω broadband matching power splitter. An alternate solution is shown in Figure 2-3B. In this case, the source is alternately connected to the 8922A and the test circuit. This allows the source to be adjusted to a known level before being connected to the test circuit. Since both the meter and the test circuit are 50Ω loads the circuit integrity is maintained. In either method, the accuracy will be determined in part by the accuracy of the source impedance and the accuracy of the termination.

2-33. High impedance measurements are based on the assumption that the voltmeter's fixed 10 MΩ input resistance and low input capacitance will not appreciably load or otherwise affect the circuit being measured. If the measurement frequency is low, this assumption holds true.

2-34. COMMON MODE VOLTAGE MEASUREMENTS

2-35. The 8922A will accomodate common mode voltages as high as 600 mV peak, usually enough to eliminate ground loops in the power connections. Higher common mode voltages will be clamped to 600 mV up to a 25 amp maximum load capability.

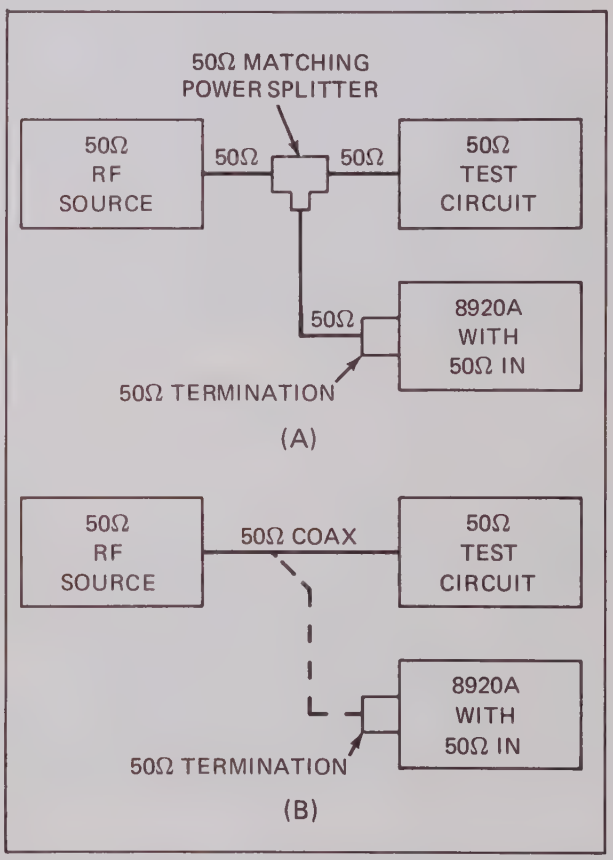


**Figure 2-3. Matched Impedance Measurement Techniques**

## 2-36. Input Signal Considerations

2-37. The 8922A is a true rms voltmeter, and as such, is subject to input conditions not encountered with the ordinary average-reading ac voltmeter. Of these, the two most important are crest factor and input coupling.

2-38. CREST FACTOR

2-39. Crest factor is the ratio of the peak voltage to the rms voltage with the dc component removed. Above 10 Hz, the crest factor is limited by the dynamic range of the amplifiers. Crest factor capability in this frequency range will be at least 7 for full-scale inputs and will increase

proportionally as the input goes down-scale. Use the following formula to calculate the crest factor of signals less than full-scale:

$$\text{Crest Factor} = \frac{7\ (\text{Range})}{\text{Input Level}}$$

For example, given the DMM is at the 20V range with a 10V input:

$$\text{Crest Factor} = \frac{>(20\text{V})}{10\text{V}} = \frac{140\text{V}}{10\text{V}} = 14$$

2-40 Below 10 Hz, crest factor is limited by the time required for the internal rms sensor protection circuit to energize and limit the sensor temperture. Typical low frequency crest factor limitation is shown in Figure 2-4. When the protection circuit does not energize, the UNCAL annunciator will light indicating that the protection circuit is introducing measurement errors. When this occurs, manually selecting a higher range may produce a better measurement.

2-41. INPUT COUPLING, AC/DC

2-42. The 8922A is equipped with a FUNCTION switch which allows you to select either AC or AC + DC coupling. When the switch is out, AC coupling is selected. In this function the dc component is removed from the input signal and is not measured or displayed. Depressing the FUNCTION switch selects AC + DC coupling. This function allows the 8922A to measure and display the true rms value for the total input signal; ac components and dc components. You should always consider the dc component when power dissipation is being determined. This function also increases the damping which is required for good performance below 10 Hz. This additional damping may also aid in the measurement of higher frequency signals when the level of the signal fluctuates.

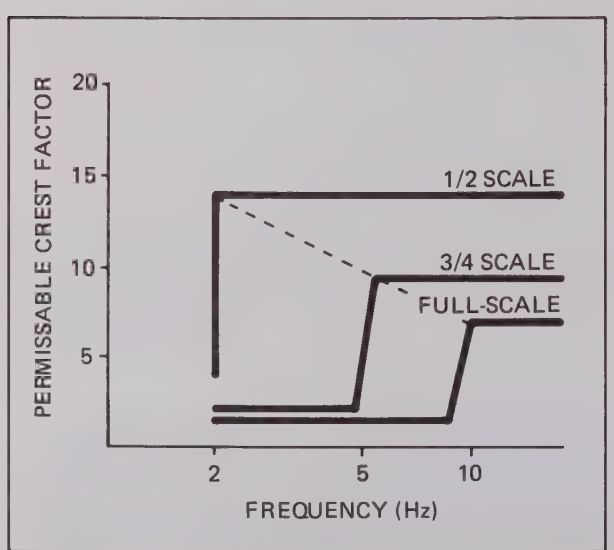


**Figure 2-4. Typical 8922A Crest Factor Limitation**

## 2-43. Range Selection

2-44. Seven voltage ranges, and what appears to be a single dB range spanning 132 dB are provided in the instrument. Range selection is normally accomplished automatically. Override switches, however, allow you to interrupt the autorange function and manually increment the range.

2-45. The autorange function optimizes the display reading for a given input. Each reading is displayed complete with decimal point and units' annunciator. The individual ranges are directly defined for the operator by labeled decimal points. Underrange (flashing decimal point) and overrange (flashing digits) indications are provided to indicate when a range change is necessary.

2-46. AUTORANGE

2-47. The proper measurement range is automatically selected when the HOLD/AUTO switch is in the AUTO (out) position. Both decimal point and units' annunciator change automatically with range.

2-48. MANUAL

2-49. Manual range determination is accomplished by selecting a range using the autorange mode and then depressing the HOLD/AUTO switch. The meter will stay in that range regardless of input level changes. If the range becomes invalid for a given input level, an overrange or underrange indication will flash. If an underrange is indicated, select autorange (AUTO). After the proper range is selected, press HOLD. For overrange conditions, momentarily press the STEP UP switch once for each desired range increment. Holding the switch in will increment the meter to the 700V range. Select autorange (AUTO) to downrange.

## 2-50. Voltage Display Mode

2-51. The 8922A will display a voltage input in one-of-two measurement units; volts or dB. To display the input voltage in units of volts, you must set the dB/VOLTS switch to VOLTS. The instrument will now display all input in units of volts or millivolts, as indicated by the front panel annunciators (V), (mV).

2-52. Two points of interest about the volts display mode are as follows: one, if the input is completely unknown, allow the autoranging circuit to select the appropriate range. Two, the selection of the volts display

mode will not affect any previous reference established in the dB display mode (see following paragraphs for additional information about establishing a dB reference).

## 2-53. dB Display Mode

2-54. When the instrument is in its dB display mode, all voltage inputs are referenced to a selected level, and displayed as deviations (in dB) above or below that level. If you wish to display the input voltage in dB units, set the dB/VOLTS switch to dB. The instrument's front panel dB annunciator will now light, indicating to you that the display is presenting a measurement in dB units.

2-55. The instrument references all inputs to a selected level. Before a meaningful measurement in dB units can be made, the desired reference level (0 dB) must be established. See RELATIVE REFERENCE Selection and dBm REFERENCE.

## 2-56. dBm Measurements

2-57. Measurements made to a fixed 1 milliwatt reference are defined as dBm. The 1 milliwatt reference is generally assumed, as indicated by m. However, the system impedance must be specified for a particular measurement. Once the impedance is selected, the instrument will display its measurements in dBm.

2-58. The 8922A is equipped with a rotary switch called dBm REFERENCE (Ω). By setting the switch to 1-of-12 possible standard reference impedances (50Ω, 75Ω, 93Ω, 110Ω, 124Ω, 135Ω, 150Ω, 300Ω, 600Ω, 900Ω, 1000Ω, and 1200Ω) you establish that impedance as a reference. When the system impedance and the reference are the same, the display is in terms of dBm.

*NOTE*

*If the 1000 ohm reference impedance is selected ("dBV" on the rotary switch), the 0 dB point will correspond to 1V.*

2-59. dBm REFERENCE SELECTION

2-60. Use the following procedure to select a reference impedance and enable the dBm display mode:

1. Depress the dB/VOLTS switch (in).

2. Release the REL/dBm switch (out).

3. Set the dBm REFERENCE (Ω) switch to correspond with the system impedance.

*NOTE*

*The dBm REFERENCE switch does not affect the fixed 10 MΩ input impedance of the 8922A. All impedance matching terminations must be added externally by the operator.*

## 2-61. Relative Measurements (REL)

2-62. This feature allows you to make any voltage input a "0 dB point" to which all other voltage inputs may be referenced. For measurements at a single test point, press the dB switch, then the REL switch and watch the dB change as you make adjustments or circuit changes.

2-63. A typical application for the dB measurement mode is shown in Figure 2-5. The relative reference (0 dB) has been established at TP2. Subsequent dB measurements at TP1, TP3, TP4, and TP5 are displayed (in dB) as shown.

2-64. RELATIVE REFERENCE SELECTION

2-65. Use the following procedure to enable the relative (REL) display mode and select a relative (0 dB) reference.

1. Connect the reference source to the 8922A input terminals. If desired, measure and adjust the reference supply voltage level.

2. Select the autorange mode (AUTO).

3. Release the REL/dBm switch (out).

4. Depress the dB/VOLTS switch (in).

5. With the reference level still connected to the input terminals, depress the REL switch. The display should now read 0 dB and the RELATIVE REFERENCE annunciator should be lit.

2-66. OTHER dBm REFERENCES

2-67. When a dBm reference, other than those given on the dBm REFERENCE switch is required, use the following procedure to establish the reference:

1. Define the reference impedance (R) and calculate V using the following formula:

$$V = 0.001 \times R$$

2. Apply an adjustable voltage source to the 8922A input and set the dB/VOLTS switch to the VOLTS position. Adjust the voltage source for a display reading equal to the calculated value of V.

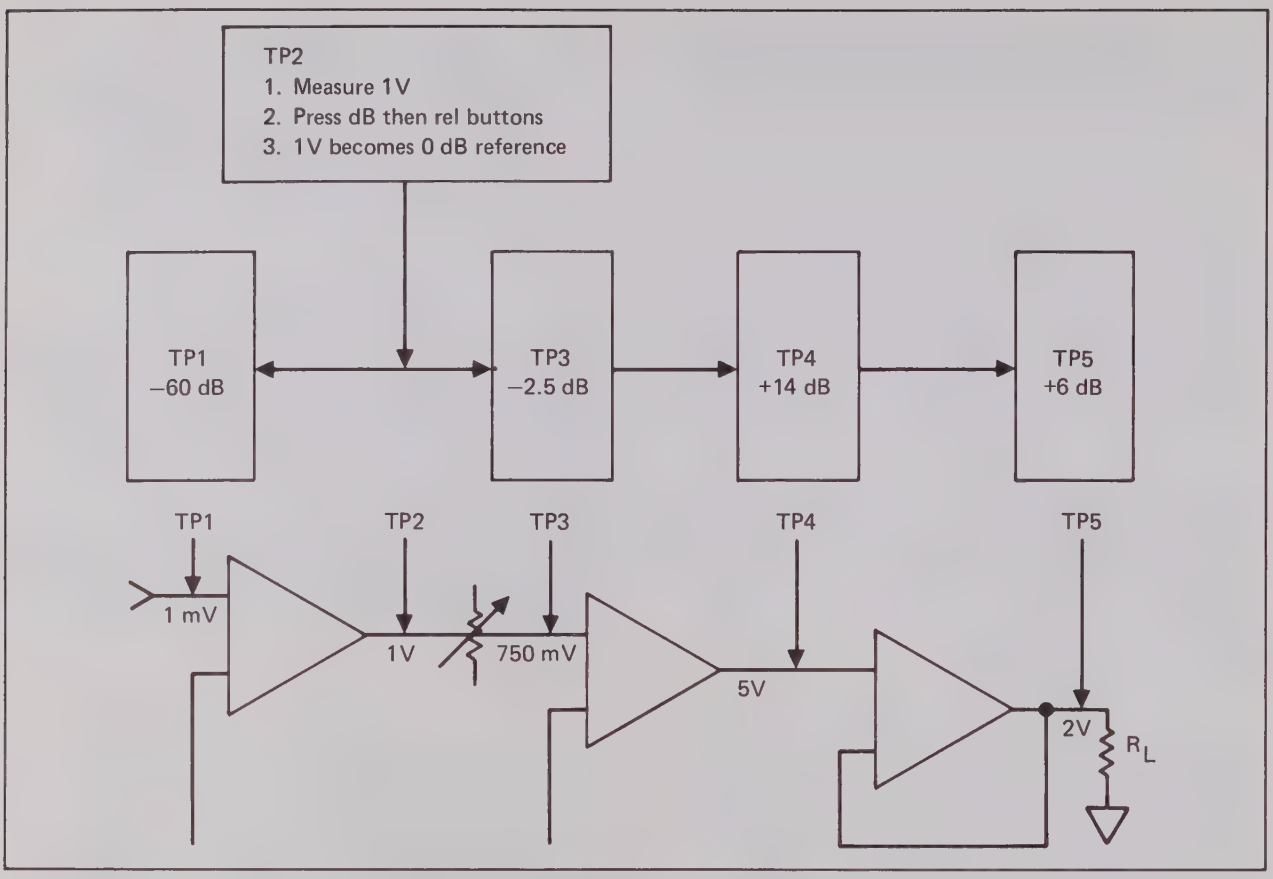


**Figure 2-5. Typical Relative dB Measurements**

3. Depress the dB/VOLTS switch (in).

4. Depress the REL/dBm switch (in). This establishes the voltage (V) as the 0 dB reference level. Therefore, subsequent dB measurements will be equivalent to dBm measurements as long as the system impedance R is maintained.

*NOTE*

*This reference will hold as long as the REL/dBm switch is at the in position and the instrument is energized.*

## 2-68. Linear Analog Output

2-69. A pair of banana jacks on the rear panel of the 8922A provides access to a linear dc analog output signal. This signal is proportional to the applied input signal and is linearly scaled; a 2V dc output is equal to 2000 counts on the display. Output accuracy is ±1% relative to the front panel reading. The output signal is buffered, and is suitable for driving an external analog meter, recorder, plotter, scope, etc.

## 2-70. OPERATION

2-71. With reference to the preceding paragraphs, use the following procedure to turn-on and operate the Model 8922A (refer to Section 6 for option and accessory information):

1. Connect the 8922A to line power.

2. Set the front panel POWER switch to ON (in). The front panel display should light.

3. Select the appropriate input leads and connect them to the meter's input terminals. Add terminations as close as possible to the input connector, if impedance matching is required.

4. Select input coupling by setting the FUNCTION switch to AC (out) or AC + DC (in), as desired.

5. Select the desired range. Use automatic or manual method, as desired.

6. Set the DISPLAY switches to select the desired measurement mode: volts, dB, or dBm. If dB is selected, establish a 0 dB reference.

7. Observing safety considerations, connect the test leads to the measurement points. The results are displayed on the 8922A readout.

# Section 3
# Theory of Operation

## 3-1. INTRODUCTION

3-2. The information in this section describes the theory of operation for the 8922A True RMS Voltmeter. The theory has been divided into two major headings; overall functional description and detailed block diagram description. To gain maximum benefit from this section, we recommend that you read each paragraph in the order presented while referring to the associated figure or the appropriate schematic in Section 8.

## 3-3. OVERALL FUNCTIONAL DESCRIPTION

3-4. As you can see in Figure 3-1, the circuitry of the 8922A can be divided into two sections; analog and digital. An overall functional description of these two sections is presented in the following paragraphs.

### 3-5. Analog Circuitry

3-6. The analog section comprises the largest portion of the 8922A circuitry. As shown in Figure 3-1, this section is broken down into the following areas: the signal conditioner, the rms converter and the power supply.

3-7. Referring to Figure 3-2, you can see that the signal being measured by the 8922A can be coupled to the signal conditioner in one of two ways (AC or AC + DC). When you place the FUNCTION switch on the front panel to the AC position all input signals are capacitively coupled; when the AC + DC position is selected the input signal is dc, or directly coupled. This feature contributes to the measurement accuracy when dc components are present in the input signal.

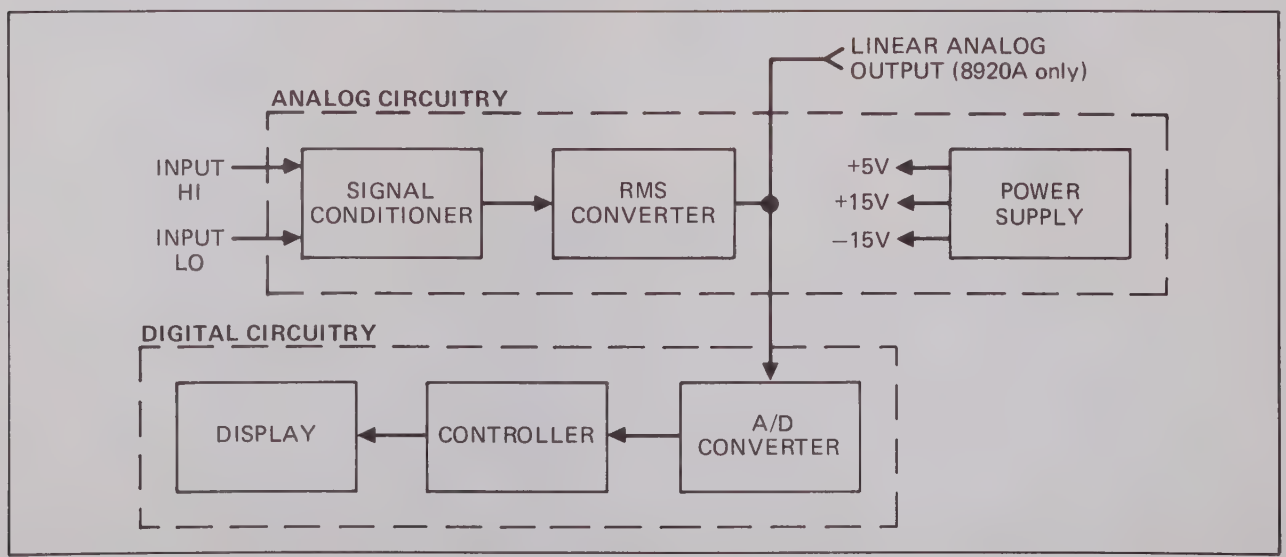


Figure 3-1. Overall Block Diagram

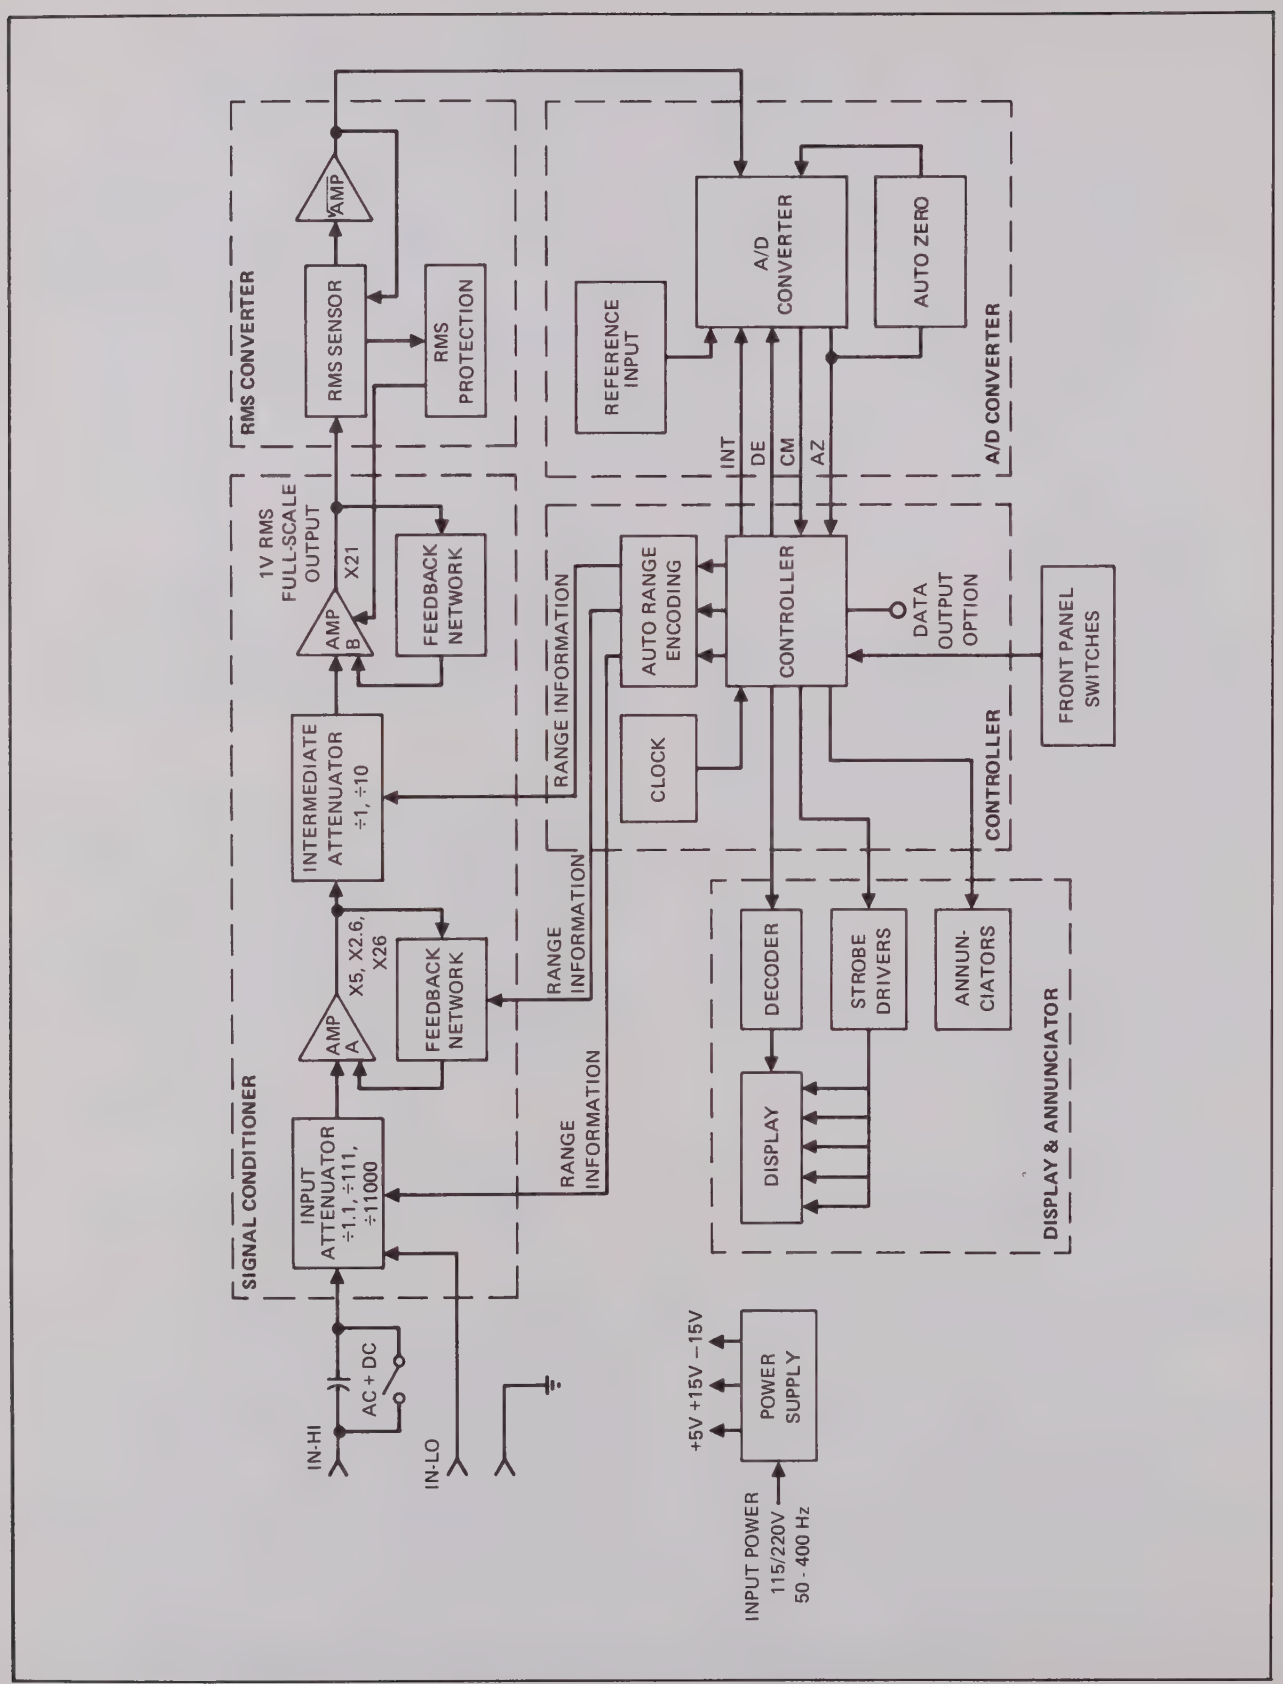


**Figure 3-2. Detailed Block Diagram**

3-8. The signal conditioner insures that the varying levels of instrument input voltages are properly scaled before being applied to the rms converter. The rms converter works on a thermal sensing principle. Basically, it operates by balancing the heating power of a dc feedback signal to the heating power of the ac input signal. When the two are equal, the circuit is in equilibrium and the dc output voltage applied to the A/D converter is directly representative of the true rms value of the ac input signal. The dc output of the rms converter is also applied to the LINEAR ANALOG OUTPUT terminals on the rear panel of the 8922A, as well as the analog meter on the front panel of the 8922A.

3-9. The last analog circuit we discuss in this section is the power supply. This circuit provides three regulated power supplies (+5V, +15V and -15V) to operate the instrument.

## 3-10. Digital Circuitry

3-11. The digital circuitry comprises the A/D converter, the controller, and the display. Together these circuits develop a digital representation of the rms value of the input signal, produce the commands that set the range and function of the instrument, and finally display the input value.

3-12. The dc output of the rms converter is translated to a digital representation by the A/D converter. The digital representation is processed by the controller to obtain a bcd output which is proportional to the selected display mode (VOLTS, dB, dBm, REL). The BCD output is decoded and applied to the display.

## 3-13. DETAILED BLOCK DIAGRAM DESCRIPTION

3-14. In the following paragraphs we discuss, in detail, the individual functions within the major areas of circuitry in the 8922A. Each major circuit area is detailed in Figure 3-2. The description for each circuit is keyed to a separate block diagram, or to the schematics in Section 8.

## 3-15. Signal Conditioner

3-16. The signal conditioner utilizes an input attenuator, two amplifiers (Amp A and B) and the intermediate attenuator. As shown in Figure 3-3, these circuits are used to scale the varying voltage levels applied to the instrument so that the input to the rms converter is always between 0.09V rms and 1V rms. The diagram in Figure 3-3, illustrates the configuration of the circuitry within the signal conditioner. The controller, through a range decoder network, issues commands which select the appropriate division factor in the attenuators and the correct multiplication factor for amplifier A. Table 3-1, lists each operating range and the corresponding division and multiplication factors for the attenuators and amplifier (note that amplifier B has a fixed gain of X21).

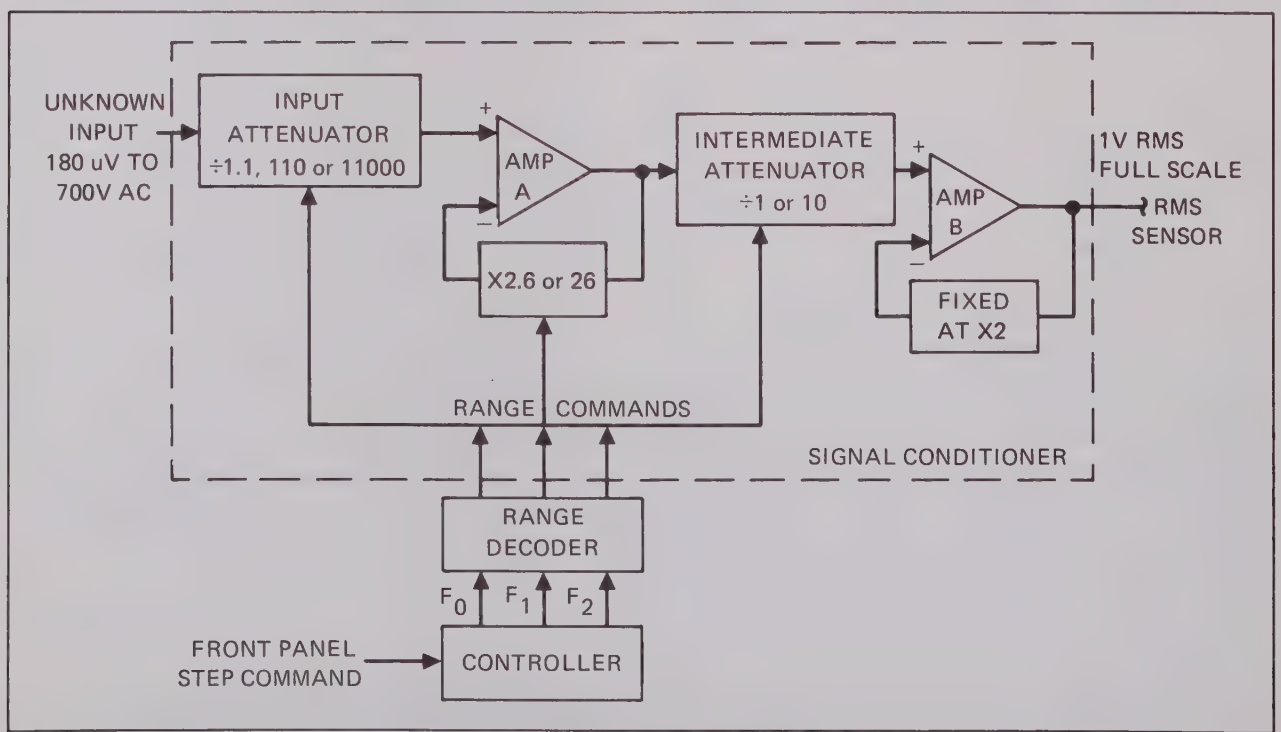


Figure 3-3. Signal Conditioner

Table 3-1. Signal Conditioner Gain Configuration

| RANGE | INPUT ATTENUATOR | AMP A | INTERMEDIATE ATTENUATOR | *CONDUCTING COMPONENTS |
|---|---|---|---|---|
| 2 mV | ÷1.1 | X26 | ÷1 | K1, Q6, Q28, Q32 |
| 20 mV | ÷1.1 | X2.6 | ÷1 | K1, Q6, Q29, Q32, Q57 |
| 200 mV | ÷1.1 | X2.6 | ÷10 | K1, Q6, Q29, Q31, Q57 |
| 2V | ÷110 | X2.6 | ÷1 | K2, Q3, Q5, Q29, Q32, Q57 |
| 20V | ÷110 | X2.6 | ÷10 | K2, Q3, Q5, Q29, Q31, Q57 |
| 200V | ÷11,000 | X2.6 | ÷1 | K2, Q4, Q5, Q29, Q32, Q57 |
| 700V | ÷11,000 | X2.6 | ÷10 | K2, Q4, Q5, Q29, Q31, Q57 |

*Refer to the schematics in Section 8.

The last column lists the component's FETs and relays, that conduct to establish gain configuration of the circuits (see the schematics for details on components).

## 3-17. RMS Converter

3-18. The 8922A uses a thermal rms converter circuit which supplies a dc output voltage proportional to the rms value of the ac input. The thermal sensor is a pair of resistor-transistor elements thermally isolated from each other and the case (see Figure 3-4). The ac input signal (Vac from amp B) produces a temperature change in the rms sensor's input resistor which is sensed by the associated transistor and causes a voltage change at the negative input of the integrator. Feedback, through the square root amplifier, provides a dc voltage to the rms sensor's output resistor so that a similar temperature rise occurs in the output resistor. The sensor gain is not constant with changes in input amplitude. These changes in gain are compensated for by the square root amplifier to maintain a constant response time for level changes.

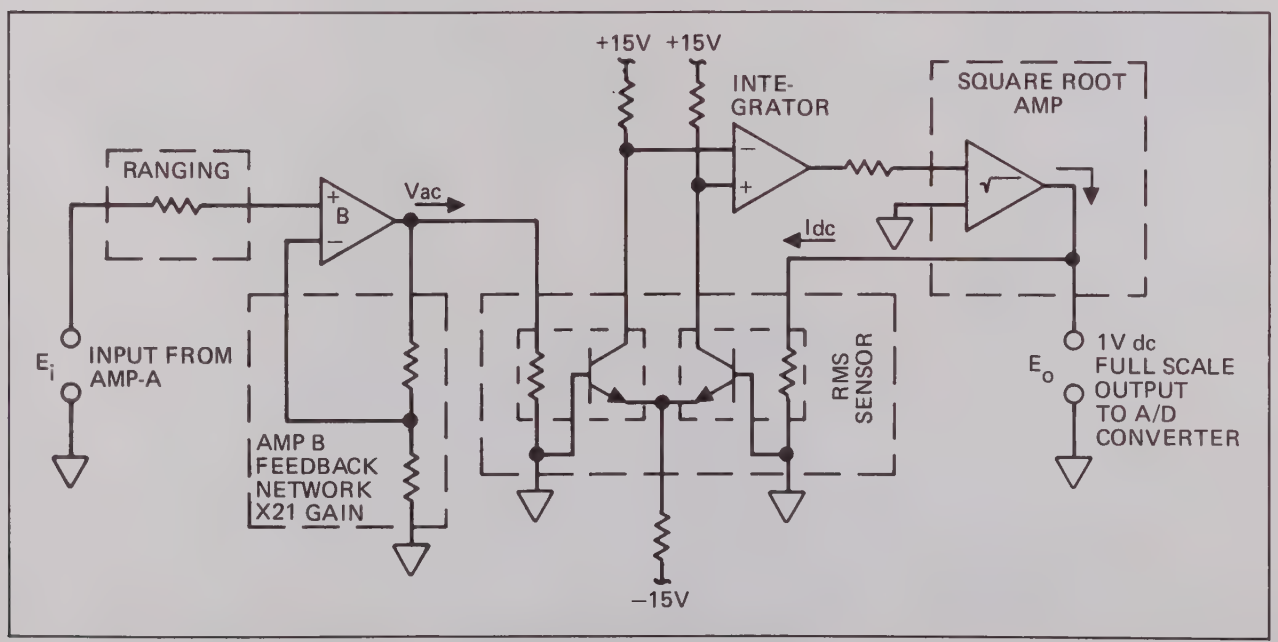


Figure 3-4. RMS Converter

3-19. The rms sensor is susceptible to damage from overvoltage inputs. During an overload condition, the protection circuit will clamp the output of Amplifier B to prevent damage to the sensor. Overload conditions would result during turn on, turn off, or any time the rms value of the applied input exceeds the operating range of the sensor.

## 3-20. A/D Converter

3-21. A dual-slope integration A/D conversion technique is used in the Model 8922A. This method applies the unknown voltage to a capacitor and allows the capacitor to charge for a specific time interval. At the end of this interval, the unknown voltage is removed (the charge on the capacitor at this time will be proportional to the level of the unknown voltage). Then a known voltage of opposite polarity is applied to the capacitor, and clock pulses are counted while the capacitor discharges. When the capacitor has reached its original charge point, the number of clock pulses counted is a digital construct of the analog voltage input to the A/D converter.

3-22. For the following discussion refer to Figure 3-5, the A/D Converter Simplified Schematic and Timing Diagram, and Figure 3-6, Controller Timing (A/D Converter).

3-23. At the beginning of the measurement cycle, INT goes high and the dc output of the rms sensor is applied to the A/D integrator for 100 msec. Capacitor, C203, charges up from the auto zero level at a rate proportional to the applied input voltage and the comparator's output, CM, is driven low. At the end of the 100 msec integrate period, DE (–) goes high, applying the reference voltage to the integrator. The integrator then discharges at a rate which is constant for all on scale inputs and the controller begins counting clock pulses. When C203 has discharged to the auto zero level, CM will go high, the controller will stop counting and the reading is displayed. This starts the auto zero period which allows the A/D converter circuitry to settle before the next cycle begins. If CM has not occurred before the end of the 200 msec maximum DE (–) period, the input will have exceeded the present range. In this case, the DE period will continue until either CM or the end of the 100 msec AZ1 occurs. When the AC + DC function is selected, all timing increase approximately 2.5 times.

## 3-24. Controller

3-25. The controller is a custom LSI that controls autoranging, the A/D converter, the display, and annunciators. In addition, the Controller can count in a non-linear (dB) scale and display its count in dB units. A summarized description of each input and output pin used on the controller is give in Table 3-2 and shown in Figure 3-7.

### 3-26. AUTORANGING

3-27. Autoranging is the automatic selection of the instrument's range by the controller. With the low range enabled, the instrument may range through seven voltage ranges from 2 mV to 700V rms. Autoranging also applies in the dB modes but gives the effect of a single range spanning 132 dB. By coding the logic levels on the three lines, F0, F1, and F2, the controller selects a range (see Table 3-3, Output Range Codes) by setting up the circuit conditions of the input and intermediate attenuators and amplifier A that are necessary for signal conditioning in that range. (See Table 3-1, Signal Conditioner Gain Configuration.) If the controller senses that the input is above or below the selected range (see Table 3-4, Over/Underload Conditions), it shifts up or down one range (depending upon the direction sensed) and halves its cycle time. The controller blanks the display and determines whether the input to the instrument is now in range or if a further change in range is necessary. When the proper range is found, display blanking is removed and the cycle time returns to normal. Use of the HOLD RANGE control will command the Controller to remain at the present range (see Table 3-5, Input Range Codes) via command input line D, E, and F. A signal from the STEP UP RANGE control will increment the instrument one range.

### 3-28. COMPUTATIONS

3-29. The controller is able to count (compute) in two modes, linear or non-linear. The following paragraphs will explain how the controller obtains its linear (volts) or non-linear (dB) readings.

3-30. Voltage Computations

3-31. To make a voltage measurement the controller must linearly count clock pulses for a time determined by the A/D converter. Referring to Figure 3-7, you can see that when the dB/VOLTS switch is placed in its up (out) position the rate multiplier (RM) will be shunted and the main counter will count the number of clock pulses exactly as they occur (linear). As soon as the integrator in the A/D converter reaches the auto-zero point, CM will go high, commanding the main counter to stop counting and start shifting its count to the data latches. A count of clock pulses, in BCD format, that is proportional to the true rms value of the signal being measured. The BCD data is then shifted out of the controller, to a seven-segment decoder on four lines: W, X, Y and Z.

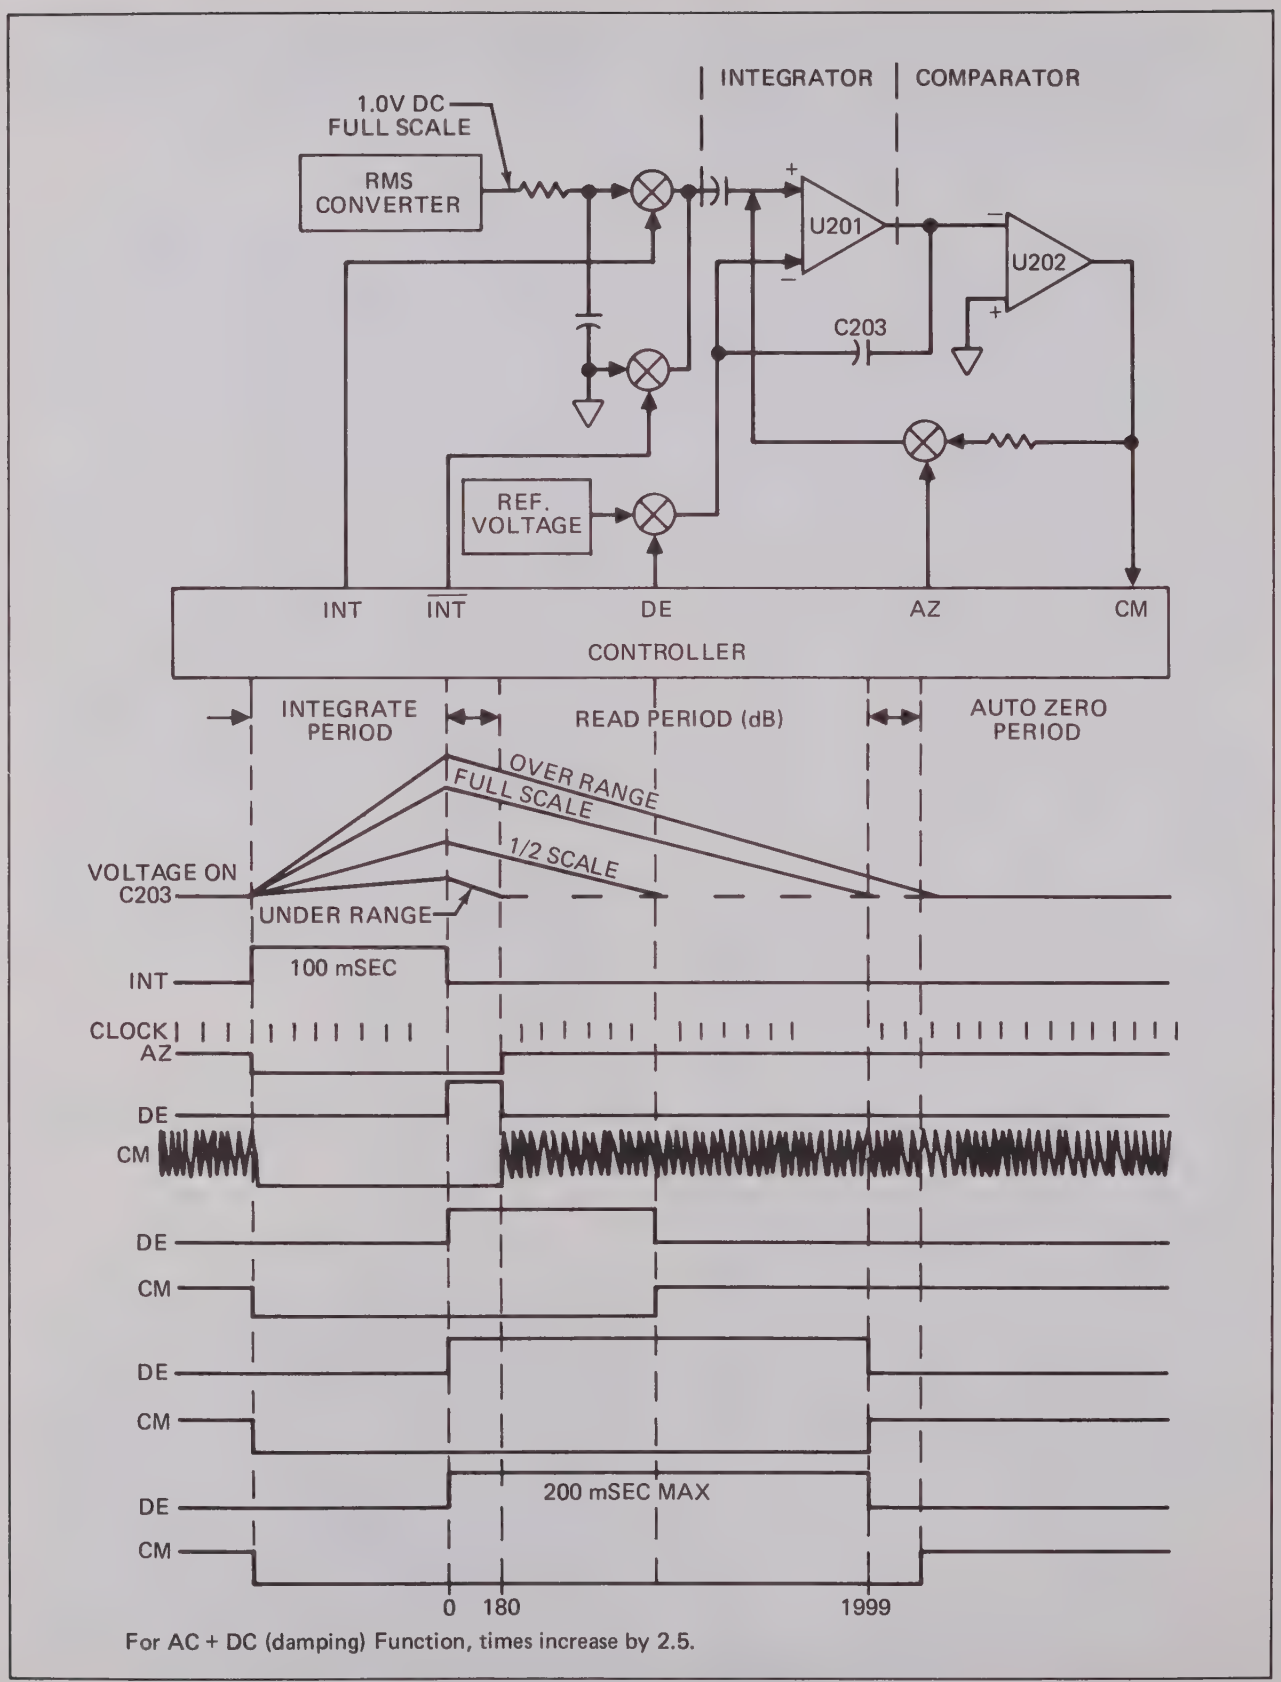


**Figure 3-5. A/D Converter Simplified Schematic and Timing**

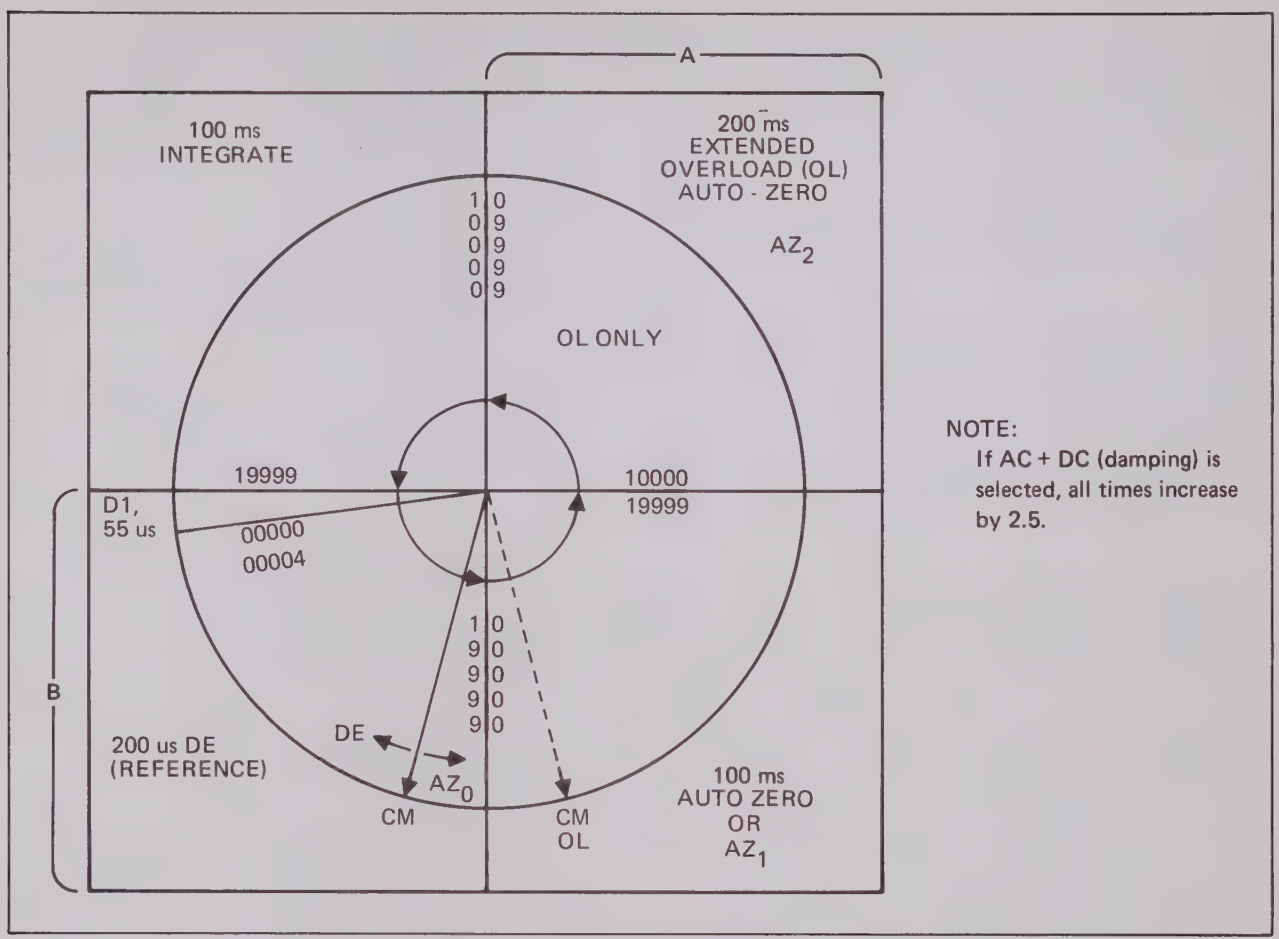


**Figure 3-6. Controller Timing (A/D Converter)**

**Table 3-2. Controller Summary**

| INPUT/ OUTPUT | PIN # | PIN NAME | PIN DESCRIPTION |
|---|---|---|---|
| Input | 1 | $V_{SS}$ | +5V supply |
| Input | 2 | CM | Compare signal from A/D Converter. |
| Input | 3 | $CL_1$ | External Oscillator input. |
| Input | 4 | $CL_2$ | 400 kHz crystal input for internal oscillator. |
| Output | 5 | $\overline{RG}$ | Negative going pulse in the middle of each strobe. Insures strobed data for DOU is valid. |
| Output | 6-10, 12-14 | $ST_0$-$ST_7$ | Eight strobes that indicate which LED is to be enabled and accept the data on lines W, X, Y and Z. |
| Input | 11 | RD | Impedance reference selection line, in dB. |
| Output | 15-17 | $F_0$-$F_2$ | Encoded range lines, $F_0$ = MSB, $F_2$ = LSB, code equals range # + 1, voltage swings from; −15 to 0V. |
| Input | 18 | $\beta$ | Strobe input on this pin determines the lower range limit. |
| Input | 19 | $\alpha$ | Strobe input on this pin determines the upper range limit. |
| Output | 20 | DP | Enables display decimal point. |
| Input | 21 | $V_{DD}$ | Ground, 0V supply. |

**Table 3-2. Controller Summary (cont)**

| INPUT/ OUTPUT | PIN # | PIN NAME | PIN DESCRIPTION |
|---|---|---|---|
| Output | 22 | BZ | Indicates new data is ready for DOU, occurs after CM, one strobe raster long. |
| Input | 23-25 | F, E & D | Enables controller ranging, see Table 3-5. |
| Output | 26-29 | W, X, Y & Z | BCD data, W = MSB, Z = LSB, TTL compatible. |
| Output | 30 | $\overline{BLK}$ | Drives blanking input on display decoder driver, TTL compatible. |
| Input | 31 | $\overline{K}$ | 700V range overload enable. |
| Input | 32 | $V_{GG}$ | −15V supply. |
| Input | 33 | $\overline{J}$ | Enables 3½ or 4½ digit display in linear mode and determines (in combination with RD) the fixed reference in dB mode. |
| Input | 34 | $T_1$ | Test (not used). |
| Input | 35 | dB | Enables dB display mode. |
| Output | 36 | $\overline{INT}$ | Enables not integrate period of A/D Converter. |
| Output | 37 | INT | Enables integrate period of A/D Converter. |
| Output | 38 | AZ | Enables auto zero period of A/D Converter. |
| Output | 39 | DE (−R) | Enables integrate reference period for positive input of A/D Converter. |
| Output | 40 | DE (+R) | Enables integrate reference period for negative input of A/D Converter (not used). |

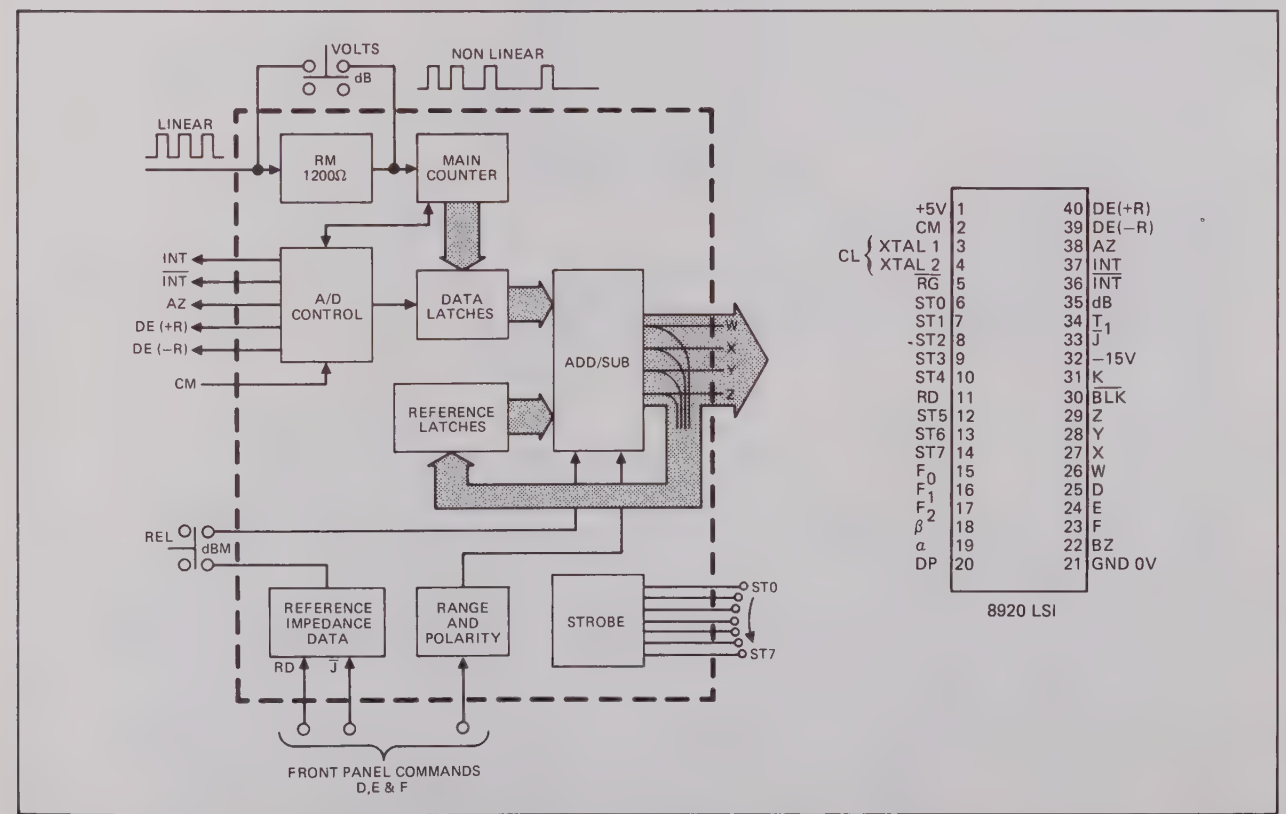


**Figure 3-7. Controller Functions**

**Table 3-3. Output Range Codes**

| RANGE | DATA LINES | | |
|---|---|---|---|
| | $F_0$ | $F_1$ | $F_2$ |
| 2 mV | 0 | 0 | 1 |
| 20 mV | 0 | 1 | 0 |
| 200 mV | 0 | 1 | 1 |
| 2V | 1 | 0 | 0 |
| 20V | 1 | 0 | 1 |
| 200V | 1 | 1 | 0 |
| 700V | 1 | 1 | 1 |

**Table 3-4. Over/Underload Conditions**

| | LINEAR | dB* |
|---|---|---|
| Overload: | >1999 $\beta$ | 25.30 (20V range) |
| except for 700 700V range: | >700 $\alpha$ | 56.10 |
| Underload: | <180 | 4.30 (20V range) |
| minimum input for accurate dB conversion | 132 | 1.60 (20V range) |

*dB calculations are based on a 1200 ohm reference impedance and 20V range. The calculation is then corrected for the proper range and the selected impedance by the addition of the appropriate constant, which may be calculated from the following equation:
$20 \log \sqrt{1.2-20} \log \sqrt{0.001R} + N\ (20)$.
Where N = number of ranges above or below the 20V range, i.e., 2 mV range N = X4

**Table 3-5. Input Range Codes**

| COMMAND LINES | | | 8922A CONTROLLER FUNCTION |
|---|---|---|---|
| D | E | F | |
| 0 | 0 | 1 | Auto range fast range cycle |
| 1 | 0 | 0 | Hold present range (overridden by $\alpha$ & $\beta$) |
| 1 | 1 | 0 | Range up at CM time (overridden $\alpha$ & $\beta$ ) |

3-32. dB Computations

3-33. If the dB/VOLTS switch is in the dB position, a non-linear count of the clock pulses is enabled. The binary rate multiplier (RM) passes only a fraction of the clock pulses on to the controller's main counter (see the illustrated input to the main counter on Figure 3-7). This count approximates the logarithmic curve of the dB scale and, like the VOLTS mode, is stored in the data latches.

3-34. dBm Reference

3-35. Don't let the m confuse you, it simply means that the power level, as measured in "dB Computations", is referenced to 1 mW. In other words, when the instrument reads 0 dB the system being measured will be dissipating 1 mW of power. The following will explain how the controller obtains a measurement of power referenced to 1 mW (dBm).

3-36. In order for the controller to obtain a measurement in dBm, the appropriate reference impedance must be used. A 1200 ohm reference impedance is assumed by the RM. Therefore, if any other reference is desired an appropriate constant must be added or subtracted from the count. The dBm REFERENCE rotary switch connects one of the eight strobes to RD and J. The controller responds by sending the appropriate constant to its ADD/SUB.

3-37. Referring to Figure 3-7, let's assume that a 600 ohm reference impedance is selected and the instrument has previously made a relative measurement. Strobe zero will be applied to RD until the REL/dBm switch is placed in its dBm position. At this time strobe 4 (corresponding to 600 ohms) is applied to RD and causes the controller to select the 600 ohm reference impedance data. This data along with the range and polarity data is then shifted to the ADD/SUB where it is combined with the count referenced to 1200 ohms. The resultant value is now equivalent to a dBm reading referenced to 600 ohms. The range and polarity data is held in the reference latches until RD or J detect a strobe change or unless the instrument is turned off. (Switching to the VOLTS mode will not cause the data in the reference latches to be lost.)

3-38. Relative (REL) Reference

3-39. Relative reference measurements allow any voltage input to become the 0 dB point to which all subsequent voltage inputs are referenced. The controller makes a relative reference computation much the same way it made a dBm computation. However, in the REL mode, 0 dB no longer refers exclusively to 1 mW. The following explains how the controller makes a relative reference measurement.

3-40. Referring the Figure 3-7, you can see that upon selection of the REL mode, the reference impedance data line will be disabled. However, to make a relative

reference measurement the controller must use an initial reading, and to obtain an initial reading it must use a reference impedance. Therefore, before the REL mode can be selected the controller must be allowed to make at least one complete measurement while in the dBm mode. Once the measurement has been completed the REL mode may be selected. The reading will now be fed back to the reference latches and held. The controller will subtract the reading in the reference latches from all subsequent readings. Note that if the instrument is ranged up/down, 20 dB will be added to or subtracted from the reading held in the reference latches. The reading held in the reference latches, however, will be lost any time the instrument is turned off or if the REL switch is released.

## 3-41. Display and Annunciators

3-42. The computed value of the input to the instrument is transmitted serially as four-bit BCD characters on the W, X, Y, and Z data lines from the controller to the seven-segment-decoder, see Figure 3-8, Display and Annunciators. The output of the seven-segment-decoder drives the Display Data Bus, which is common to the inputs of all five of the display LEDs. Strobe pulses from the controller determine which display LED is enabled to accept the data on the Display Data Bus. ST4 through ST7 strobes the seven-segment LEDs from LSD to MSD, respectively. ST0 gates the ±1 digit. If the volts display mode is selected, 3½ digits will be enabled resulting in a resolution of 0.05%. If the dB display mode is selected, 4½ digits will be enabled and the resolution will be 0.01 dB. The decimal point is enabled separately by the DP line from the controller.

3-43. the annunciators, excepting the UNCAL, are strobed on by ST0 which is routed through two circuits. One path is completed when the dB/VOLTS switch is in the dB position. The dB annunciator DS309 is enabled. If the REL/dBm control is in the REL position, RELATIVE REFERENCE annunciator, DS308, will also be enabled. If the dB/VOLTS switch is in the VOLTS position, ST0 is routed through another path and either the V annunciator, DS307, or the mV annunciator, DS306, is enabled depending upon the current range of the instrument.

## 3-44. Power Supply

3-45. The power supply section on the Main PCB provides the instrument with operating voltages of +15V, –15V, and +5V.

3-46. Line voltage (100V, 120V, 220V or 240V, as selected by switches S209 and S210) is connected to the primary of the main power transformer, T200 via POWER switch, S208, and fuse, F1. the secondary of T200 contains two windings. One winding drives the +5V power supply, the other drives the ±15V power supply.

3-47 In the +5V power supply, power from the secondary winding is full-wave rectified by CR205, filtered by C211, and regulated by VR203.

3-48. In the ±15V power supply, power from the secondary winding is full-wave rectified by CR204, filtered by C209 and C210, and regulated to +15V by VR202. The –15V is regulated by U211 and Q207.

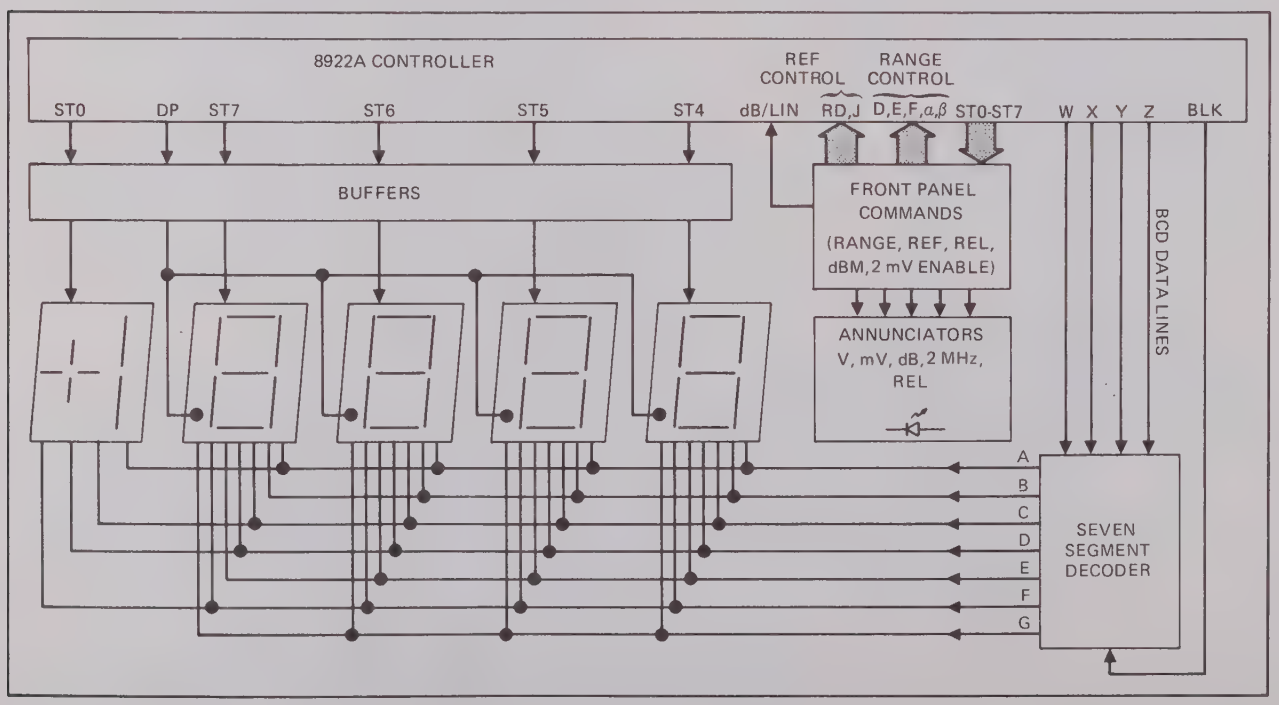


Figure 3-8. Display and Annunciators

# Section 4
# Maintenance

**WARNING**

**THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.**

## 4-1. INTRODUCTION

4-2. This section of the manual contains maintenance information for the Model 8922A True RMS Voltmeter. The material is presented under the categories of shipping information, general maintenance, performance test, calibration adjustments, and troubleshooting. The performance test is recommended as an acceptance check when the instrument is first received and as performance verification test at regular intervals. Table 4-1 lists the test equipment required to calibrate your 8922A. If the recommended equipment is not available, you may substitute equivalent equipment that meets the required characteristics.

## 4-3. SERVICE INFORMATION

4-4. The 8922A is warranted for a period of 1 year upon delivery to the original purchaser. The warranty is located on the back of the title page.

4-5. Factory authorized calibration and service for your 8922A is available at various locations throughout the world. A complete list of these factory authorized service centers is included in Section 7. If requested, an estimate will be provided to you before work is begun on an instrument that is beyond the warranty period.

## 4-6. GENERAL MAINTENANCE

### 4-7. Access Information

4-8. To gain access to the interior of the instrument, remove the four screws located on the bottom of the case. The top cover can now be removed.

## 4-9. INPUT POWER SELECTION

4-10. The 8922A may be operated from any one of the line voltages shown in Table 4-2. Use the following procedure to prepare the instrument for use with the local line power.

1. Disconnect the instrument from the line power and remove its top cover (four screws on the bottom of the unit hold the top cover in place).

2. Set switches, S209 and S210, to the positions indicated in Table 4-2 for the desired line voltage.

3. Install the top cover and connect the unit to line power.

**Table 4-1. Recommended Test Equipment**

| EQUIPMENT NOMENCLATURE | REQUIREMENT | RECOMMENDED EQUIPMENT |
|---|---|---|
| Precision AC Calibrator and Power Amplifier | 19 mV to 600V<br>20 Hz-50Hz, ±0.2%<br>50 Hz-50 kHz, ±0.1% | John Fluke 5200A<br>&<br>John Fluke 5205A |
| DC Voltage Calibrator | ±0.5% ±3 μV<br>(AC Component < 100 μV) | John Fluke 341A |
| Leveled Generator | Short term stability, drift and adjustment resolution < .1%<br>Freq. range 50 kHz-11 MHz or greater. | Tektronix SG-503/<br>Series 500 Mainframe |
| DVM | 3½ digits, 0.25% Resolution | JF-8020A |
| Flat Attenuator, 20 dB (three required) | Flatness<br>50 kHz-1 MHz, ±0.1%<br>50 kHz-10 MHz, ±0.5% | GR, 874-G20L |
| 1V Transfer Standard | 50 kHz-11 MHz, ±0.1% | JF-A55 1V |
| GR Tee<br>Adapter<br>Adapter<br>Adapter | 874<br>874-BNC (2 required)<br>874-BNC<br>Banana-BNC | GR, 874-TL<br>GR, 874-QBPAL<br>GR, 874-QBJAL<br>Pomona 1296 |
| Feed thru 50Ω Termination | 1 GHz rated | TEK, 011-0049-01 |
| RMS Voltmeter | 2 Hz-10 Hz ±1% | JF-931 |
| Function Generator | 2 Hz Sine wave | |

**Table 4-2. Input Power Selection**

| SWITCH POSITION (REAR PANEL) | SELECTED LINE SOURCE ac ±10%, 10 WATTS MAX |
|---|---|
| S209 S210 | 120V, 50-400 Hz |
|  | 100V, 50-400 Hz |
| | 220V, 50-400 Hz |
|  | 240V, 50-400 Hz<br>(250V, MAX) |

## 4-11. Cleaning

**CAUTION**

**Do not use aromatic hydrocarbons or chlorinated solvents for cleaning. These solutions will react with the plastic materials of the instrument.**

4-12. Clean the front panel and case with denatured alcohol or a mild solution of detergent and water. Clean dust from the interior of the instrument with dry, low pressure air (20 psi). Contaminants can be washed from the circuit board with demineralized water and a soft brush (avoid getting excessive amounts of water on the switches).

## 4-13. Fuse Replacement

4-14. The 8922A has one replaceable fuse located on the rear panel which may be replaced with a 1/8 amp, slo-blo fuse (Metric uses 5x20 mm, 1/8 amp slow acting).

## 4-15. PERFORMANCE TEST

*NOTE*

*In the following procedures the instrument (8922A) which is being either checked or calibrated is referred to as the UUT (Unit Under Test).*

4-16. The following paragraphs comprise a performance verification test which compares the instrument's performance to the specifications given in Section 1 of this manual. The test is recommended as an acceptance test when the instrument is first received and later as a calibration procedure to verify instrument accuracy at the scheduled calibration periods (90-days). It can also be used as an aid in troubleshooting. Test equipment required for the performance test is listed in Table 4-1. If the recommended test equipment is not available, equivalent test equipment may be substituted. To insure optimum results, the test must be performed at an ambient temperature between 18 and 28 degrees Celsius with a relative humidity of 80%. Allow the instrument to warmup at least 30 minutes, with the case cover in place, before attempting the performance test.

4-17. If the instrument fails to meeet the performance test limits, calibration adjustment, troubleshooting, and/or repairs are indicated. Procedures for calibration adjustments and troubleshooting are given later in this section of this manual.

*NOTE*

*In all of the procedures in this section, precautions should be taken to minimize ground currents, stray fields, etc.*

### 4-18. Low and Midband Performance Check (Volts Display Mode)

4-19. This procedure will verify that the UUT's low and midband performance is within the limits specified in Section 1. Set up the test equipment as shown in Figure 4-1, and select the required function and input signal as indicated in Table 4-3. Note any deviation between the UUT performance and the specified limits.

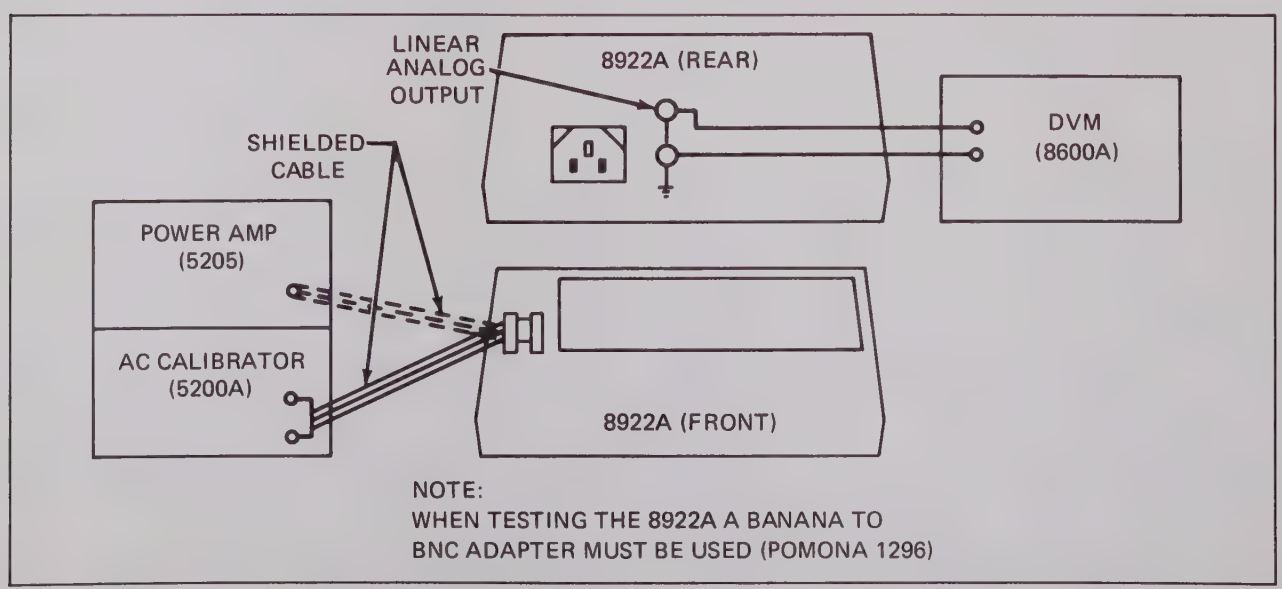


**Figure 4-1. Low and Midband Performance Test Set-Up**

**Table 4-3. Low and Midband Performance Checks (Volts Display Mode)**

| FUNCTION MODE | RANGE | INPUT | | DISPLAY | LIMITS or COUNTS | COMMENTS |
|---|---|---|---|---|---|---|
| | | LEVEL | F(Hz) | | | |
| AC, AUTORANGE | 2 mV | 1.9 mV | 500 | 1.000 | ±38 | Note that the mV annunciator is lit. |
| AC, AUTORANGE | 20 mV | 10 mV | 500 | 10.00 | ±10 | Note that the mV annunciator is lit. |
| AC, AUTORANGE | 200 mV | 100 mV | 500 | 100.0 | ±5 | Note that the mV annunciator remains lit. |
| AC, HOLD | 2V | 3V | 500 | 1.999 | | Verify that display flashes 1.999 signifying overrange. |
| AC, HOLD | 2V | 1V | 500 | | ±.01V | Measure 1V on the linear analog output. Note that the test instrument's reading is within ±.01V of UUT's displayed reading. |
| AC, HOLD | 2V | .2V | 500 | | ±.002V | Measure 0.2V on linear analog output. Note that the test instrument's reading is within ±.002V of UUT's displayed reading. |
| AC, HOLD | 2V | .17V | 500 | .17 | | Verify that decimal flashes signifying below 9% of range. |
| AC, AUTORANGE | 2V | 1V | 500 | 1.000 | ±5 | Note that the V annunciator is lit. |
| AC, AUTORANGE | 20V | 10V | 500 | 10.00 | ±5 | Note that the V annunciator remains lit. |
| AC, AUTORANGE | 200V | 100V | 500 | 100.0 | ±5 | Note that the V annunciator remains lit. |
| AC, AUTORANGE | 20 mV | 10 mV | 50K | 10.00 | ±10 | Note that the UUT autoranges down to the 20 mV range. |
| AC, AUTORANGE | 200 mV | 100 mV | 50K | 100.0 | ±5 | |
| AC, AUTORANGE | 2V | 1V | 50K | 1.000 | ±5 | |
| AC, AUTORANGE | 20V | 10V | 50K | 10.00 | ±5 | |
| AC, AUTORANGE | 200V | 100V | 50K | 100.0 | ±5 | |
| AC, AUTORANGE | 700V | 600V | 500 | 600 | ±3 | Use the 5205A for this test. |
| AC, AUTORANGE | 2V | 1V | 2 Hz | 1.000 | ±50 (4 to 7 digit fluctuation) | Use rms voltmeter and function generator. |

## 4-20. dB Display Mode Check

4-21. This procedure will verify that the UUT's dB display mode is functioning properly. Set up the test equipment as shown in Figure 4-1. Depress the RANGE HOLD switch and step up to the 2V range. Select the 1V range on the AC calibrator and adjust its output for 1.000 on the UUT's display. Select the dB display mode and switch through the dBm REFERENCE selection switch, checking the reading at each position against Table 4-4. The readings should not differ by more than ±1 digit from the numbers given in Table 4-4.

## 4-22. DC Low Level Check

4-23. This procedure will verify correct operation with low level DC inputs. Set up the test equipment as shown in Figure 4-2, and select the required function, range and input signal as indicated in Table 4-5. Note any deviation between the display of the UUT and the specified limits.

## 4-24. AC Low Level Check

4-25. This procedure will verify that the UUT's low level AC performance meets the specifications of Section 1. Set up the test equipment as shown in Figure 4-3 and complete the AC Low Level Calibration procedure, but replace steps 2-d and 2-e with the following:

d. Note that the UUT's display reads the same error as noted in step 1-f ±38 digits.

e. Note that the UUT's display reads 0.1900 ±4 digits.

## 4-26. High Frequency Response Check

4-27. This procedure will verify that the UUT's high frequency response meets the specifications of Section 1. Set up the test equipment as shown in Figure 4-4, and select the required input amplitude and frequency as indicated in Table 4-6. Note any discrepancies between the display reading and the limits given.

Table 4-4. dB Display Mode Check

| MODE | REFERENCE OHM | SOURCE | DISPLAY READING | COMMENTS |
|---|---|---|---|---|
| dBm | 50 | 1.000 | +13.00 | Note that the dB annunciator is lit. |
| dBm | 75 | 1.000 | +11.24 | |
| dBm | 93 | 1.000 | +10.31 | |
| dBm | 110 | 1.000 | +9.58 | |
| dBm | 124 | 1.000 | +9.06 | |
| dBm | 135 | 1.000 | +8.69 | |
| dBm | 150 | 1.000 | +8.23 | |
| dBm | 300 | 1.000 | +5.22 | |
| dBm | 600 | 1.000 | +2.21 | |
| dBm | 900 | 1.000 | + .45 | |
| dBm | 1000 | 1.000 | − .01 | |
| dBm | 1200 | 1.000 | − .80 | |
| REL | | 1.000 | +0.00 | Note that the dB and REL annunciators are lit. |
| REL | | 10.00 | +20.00 | Step up to the 20V range (note that the dB and REL annunciators remain lit). |

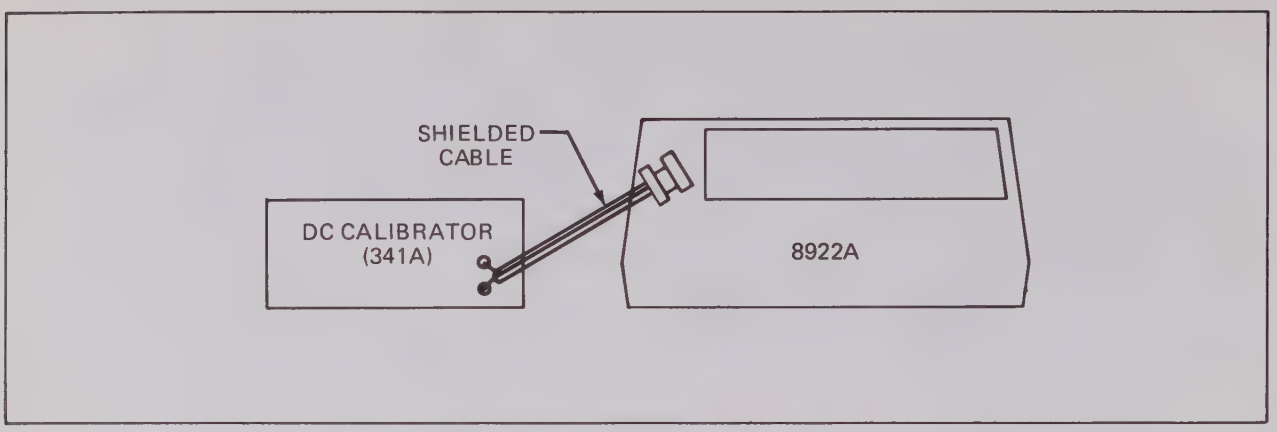


**Figure 4-2. DC Low Level Check**

**Table 4-5. DC Low Level Check**

| DC INPUT | RANGE | FUNCTION | UUT DISPLAY ±6 COUNTS | COMMENT |
|---|---|---|---|---|
| 1V | 2V | AC + DC | 1.000 ±30 counts | UUT dc circuitry functioning. |
| 2 mV | AUTO | AC + DC | 02.00 or mV rms (see comment) ±6 counts) | The ac input components should be less than 0.2 mV. (To achieve this set the FILTER switch to the IN position.) The mV ac component can be measured by temporarily selecting the AC switch. If it is greater than 0.2 mV; $mV\ rms = \sqrt{(2\ mV\ dc)^2 + (mV\ ac)^2}$ |

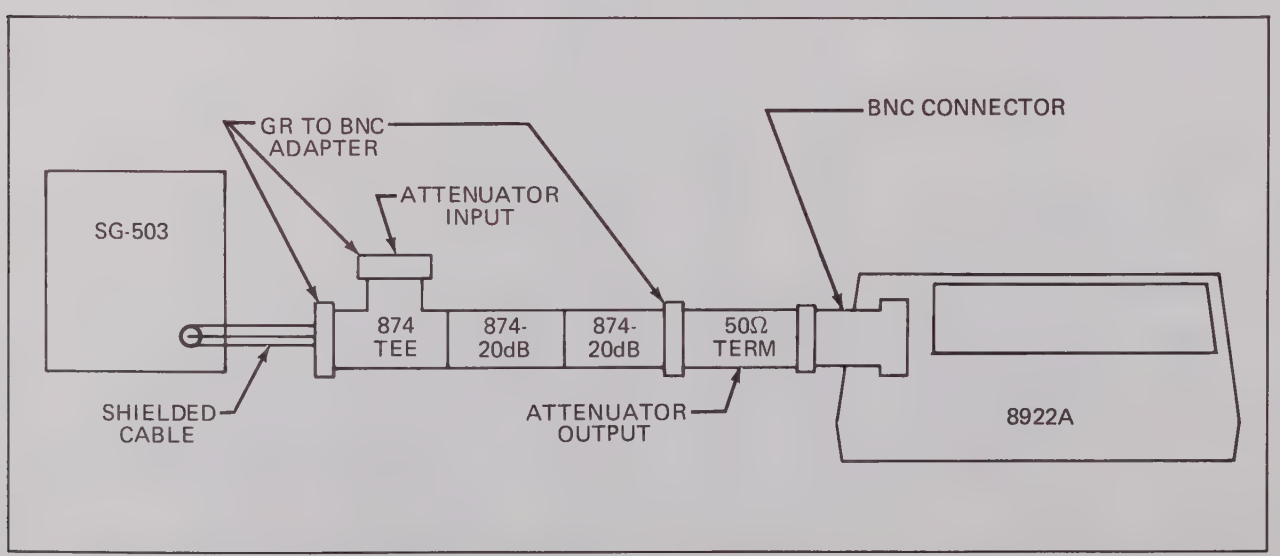


**Figure 4-3. AC Low Level Check**

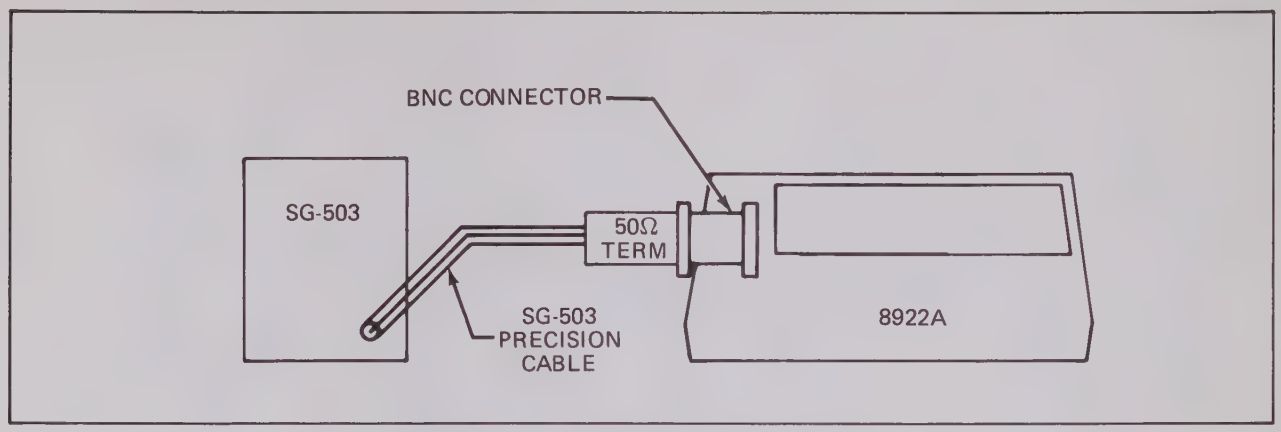


**Figure 4-4. High Frequency Response Check**

**Table 4-6. High Frequency Response Check**

| FUNCTION MODE | RANGE | INPUT | | DISPLAY | LIMITS ±COUNTS | COMMENTS |
|---|---|---|---|---|---|---|
| | | LEVEL | F(Hz) | | | |
| AC, AUTORANGE | 20 mV | 17 mV | 50K | 17.00 | | Adjust the SG503 amplitude so that the display reads 17.00. |
| AC, AUTORANGE | 20 mV | 17 mV | 11M | 17.00 | ±85 | Readjust the input frequency without changing the amplitude. |
| AC, AUTORANGE | 200 mV | 170 mV | 50K | 170.0 | | Adjust the SG503 amplitude so the display reads 170.0. |
| AC, AUTORANGE | 200 mV | 170 mV | 11M | 170.0 | ±85 | Readjust the input frequency without changing the amplitude. |
| AC, AUTORANGE | 2V | 1.7 | 50K | 1.700 | | Adjust the SG503 amplitude so the display reads 1.700. |
| AC, AUTORANGE | 2V | 1.7 | 11M | 1.700 | ±85 | Readjust the input frequency without changing the amplitude. |

## 4-28. CALIBRATION ADJUSTMENTS

4-29. The calibration adjustment procedures given in the following paragraphs should be performed after repair of the 8922A and/or when the instrument fails the performance test requirements. If the instrument will not respond to or meet the limits of the adjustment procedures, troubleshooting and repair is indicated. Equipment required for the calibration adjustment is listed in Table 4-1.

4-30. All calibration adjustments are accessible when the top case cover is removed from the instrument. Figure 4-5 identifies the location of assemblies, test points, and adjustments that must be accessed to complete the calibration adjustment procedures.

4-31. To ensure optimum results, the calibration adjustments must be performed at an ambient temperature of 18 to 28 degrees Celsius with a relative humidity of less than 80%. Allow the instrument to warmup (with the top case cover in place) for at least 60-minutes before starting the calibration adjustment procedures.

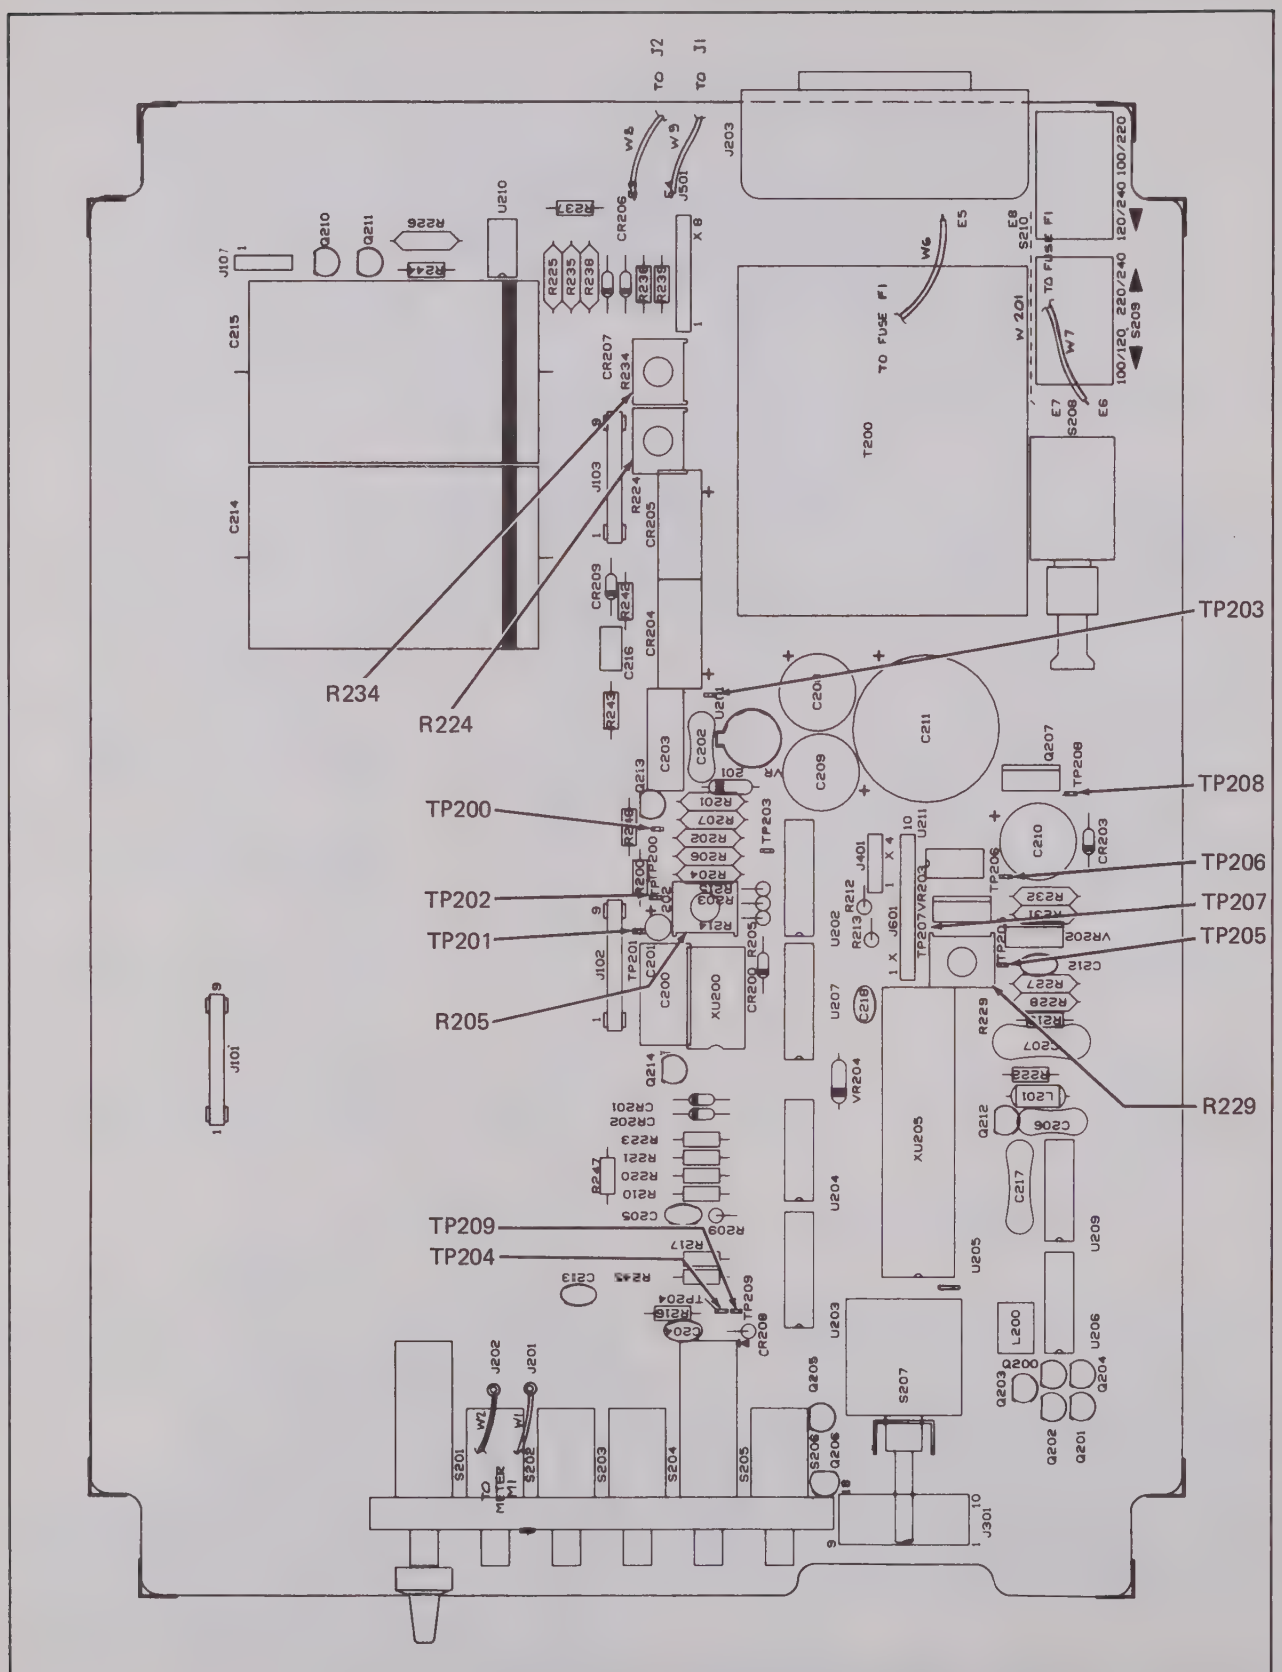


Figure 4-5. Calibration Adjustments and Test Point Locations

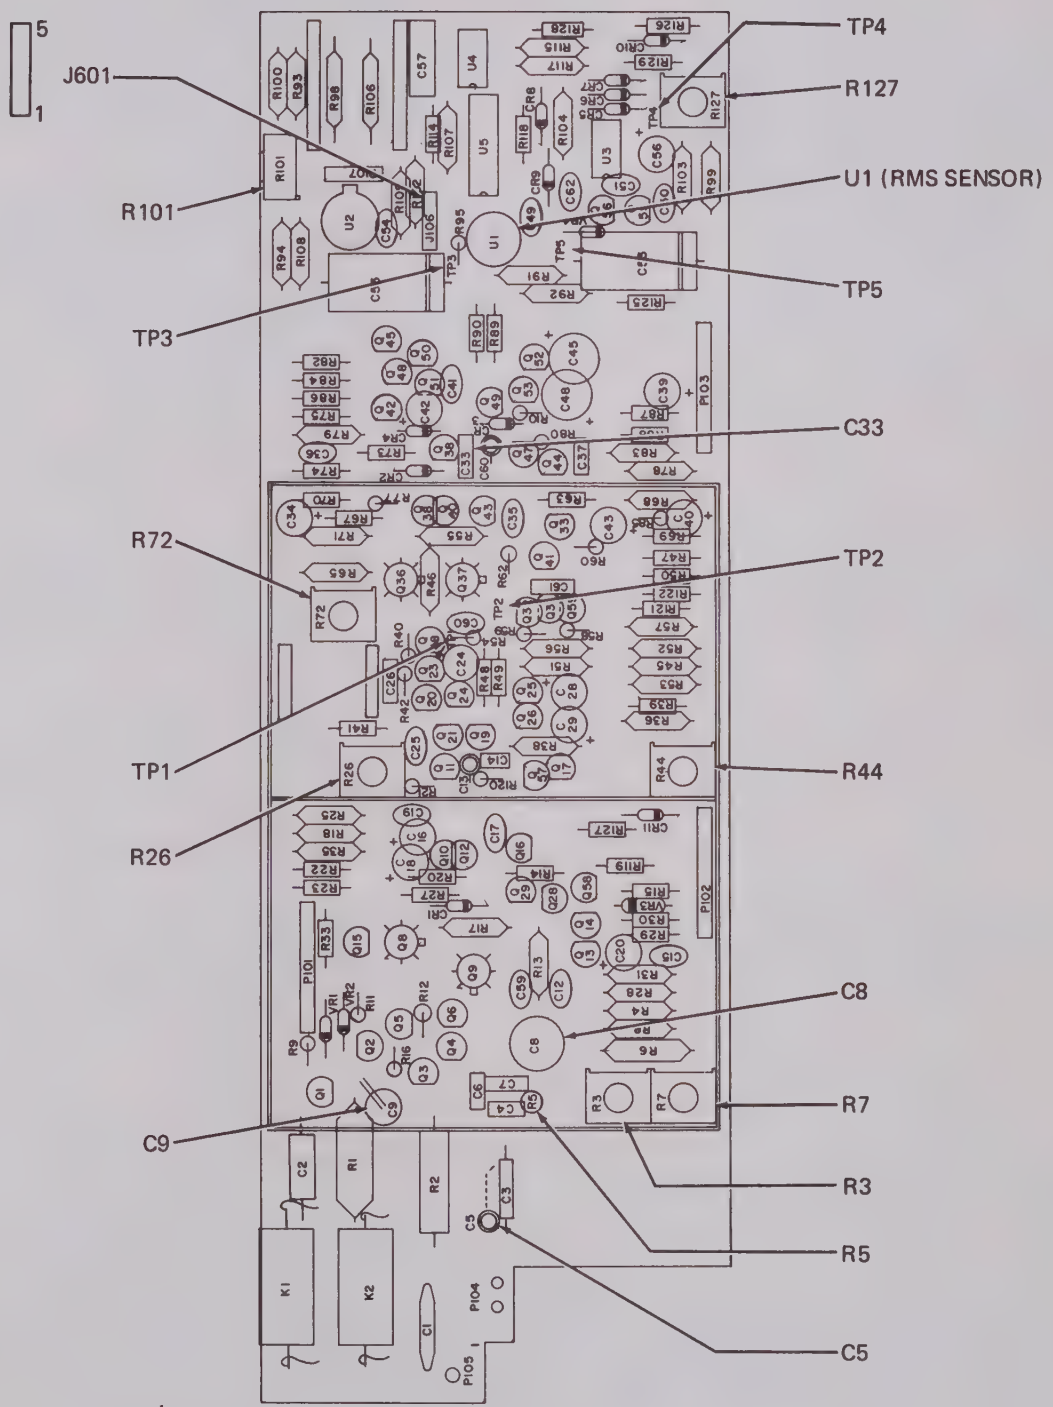


Figure 4-5. Calibration Adjustments and Test Point Locations (cont)

## 4-32. Power Supply Calibration Adjustment

**WARNING**

**IN ALL PROCEDURES WITH THE TOP COVER REMOVED THE OPERATOR SHOULD BE AWARE THAT THE FOLLOWING POINTS ARE AT LINE POTENTIAL:**

1. **POWER LINE CONNECTOR.**
2. **ALL LAND PATTERNS NEAR POWER TRANSFORMER.**
3. **POWER SWITCH.**
4. **FUSE HOLDER.**

4-33. Use the following procedure to calibrate the power supplies of the UUT.

1. Place all front panel switches to the out position.

**CAUTION**

**Certain overload protection depends on the supply voltages. To avoid possibility of damage, DO NOT adjust the ±15V supplies with the UUT in overrange.**

2. Monitor TP206 with a DVM using TP205 as a voltmeter common.

3. Adjust R229 for +15V ±0.1V on TP206.

4. Check TP208 for –15V ±0.2V.

5. If TP208 does not comply, recheck TP206 and adjust R229, if necessary.

6. Check TP207 for +5V ±0.25V.

## 4-34. Low and Midband Accuracy Adjustment

4-35. Use the following procedure to calibrate the low and midband accuracy of the UUT:

1. Place all the front panel switches in the out position.

2. Short TP204 to TP209 to light the 4th display digit.

3. Apply the input voltages and frequencies as listed in Table 4-7, and adjust to the limits given. If any limit cannot be reached, see Troubleshooting.

Table 4-7. Low and Midband Accuracy Adjustments

| STEP | INPUT V | RANGE (AC) | FREQ Hz | ADJUST | READ DISPLAY | LIMIT ± of READING |
|---|---|---|---|---|---|---|
| 1 | 1 | 2V (AC) | 500 | – | Note reading. | n/a |
| 1a | Select RANGE HOLD. | | | | | |
| 1b | 0.1 | 2V | 500 | R101 | 1/10 of reading in step 3. | 3 digits |
| 1c | Return to step 1 if R101 was readjusted. | | | | | |
| 1d | Select AUTORANGE. | | | | | |
| 2 | 2.5V dc | 20V (AC+DC) | n/a | R72 | 2.500 | ±10 digits |
| 2a | 0.25 Vdc | 2V (AC+DC) | n/a | R26 | .2500 | ±10 digits |
| 3 | Return to step 2 if R26 was readjusted. | | | | | |
| 4 | 100 mV | 200 mV | 500 | R205 | 100.00 | 5 digits |
| 5 | 1.9 mV | 2 mV | 500 | R44 | 1.9000 | 40 digits |
| 5c | Return to step 4 if R44 was readjusted. | | | | | |
| 6 | 100 mV | 200 mV | 50K | C9 | 100.00 | 5 digits |

Table 4-7. Low and Midband Accuracy Adjustments (cont)

| STEP | INPUT V | RANGE (AC) | FREQ Hz | ADJUST | READ | LIMIT ± of READING |
|---|---|---|---|---|---|---|
| 7 | 1 | 2V | 500 | R3 | 1.0000 | 5 digits |
| 8 | 1 | 2V | 500 | R224 | Meter | Mid-scale |
| 9 | 100 | 200V | 500 | R7 | 100.00 | 5 digits |
| 10 | 1 | 2V | 50K | C5 | 1.0000 | 5 digits |
| 11 | 100 | 200V | 50K | C8 | 100.00 | 10 digits |
| 11c | Return to step 10 if C8 was readjusted. | | | | | |
| 12 | 10 mV | 20 mV | 500 | Chk | 10.000 | 20 digits |
| 13 | 10 mV | 20 mV | 10K | Chk | 10.000 | 20 digits |
| 14 | 10 mV | 20 mV | 50K | Chk | 10.000 | 20 digits |
| 15 | 10 | 20V | 500 | Chk | 10.000 | 5 digits |
| 16 | 10 | 20V | 10K | Chk | 10.000 | 20 digits |
| 17 | 10 | 20V | 50K | Chk | 10.000 | 5 digits |
| 18 | Remove the short between TP204 and TP209. | | | | | |
| 19 | Autorange into the 20 mV range and push RANGE HOLD. | | | | | |
| 20 | Apply 22.0 mV at 500 Hz to the input of the UUT. Increase the input voltage in .1 mV steps until the UNCAL annunciator lights. Verify that this occurs with an input voltage between 22.5 and 23.5 mV. If the reading is outside these limits, refer to the "RMS Protection Circuit Calibration". | | | | | |

## 4-36. Linear Analog Output

4-37. Use the following procedure to calibrate the 8922A linear analog output.

1. Set up the calibration test equipment as shown in Figure 4-6.

2. Select AC and AUTORANGE.

3. Apply 1.000V, 500 Hz to the input and monitor the dc voltage at the rear panel linear analog output (LAO). Adjust R224 for the same reading as the display ±2 mV.

4. Observe that the null/peak meter reads center of scale ±½ division.

5. Push RANGE HOLD and decrease the input to 0.1V, 500 Hz. The output voltage should read the same as the front panel display ±0.2mV. If it is not within this limit, adjust R234 and go back to step 3.

6. Increase the input to 0.5V. The voltage at the output should be the same as the front panel display ±0.001V.

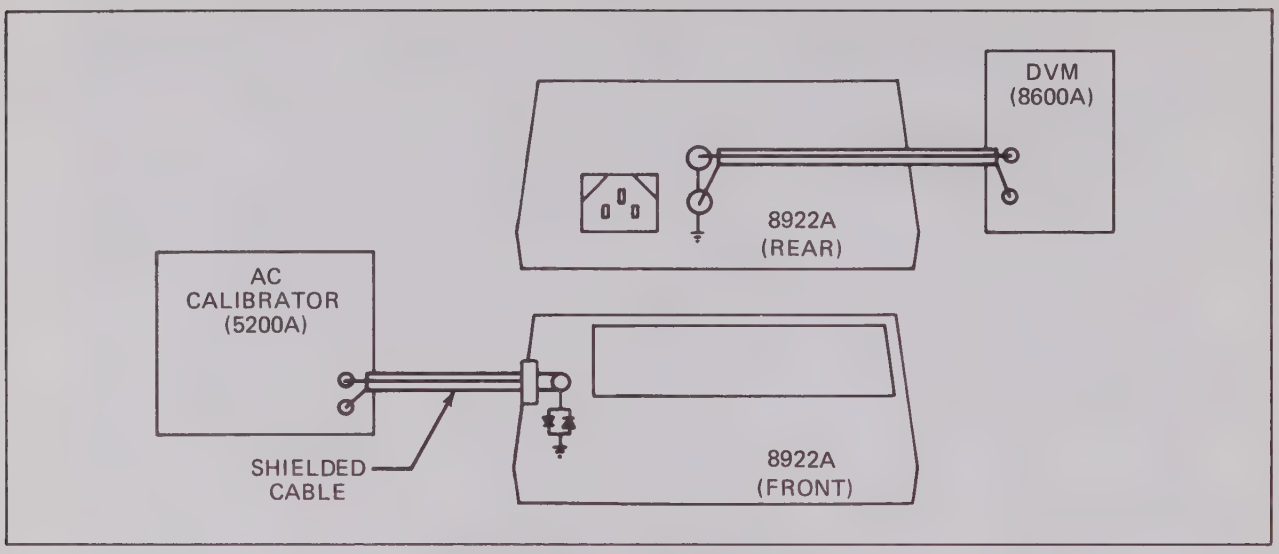


**Figure 4-6. Linear Analog Output Check**

## 4-38. AC Low Level Calibration and Filter Check

4-39. Use the following procedure to calibrate the UUT's AC low level performance.

1. Measure the 503 Attenuator Errors (leveled generator).

a. Place all front panel switches out.

b. Set up the test equipment as shown in Figure 4-3.

c. Set the leveled generator to 50 kHz, X1 and connect the 874-20 dB-GR attenuator input to the input of the UUT.

d. Adjust the leveled generator amplitude until a steady reading of 1.000V is obtained on the display of the UUT.

e. Switch the leveled generator to the X.1 setting, observe that the UUT autoranges down to the 100 mV range and note the reading error.

f. Switch the leveled generator to the X.01 setting and note that the reading error is less than 10 digits on the 20 mV range.

2. Calibrate the 2 mV range:

a. Connect the 50 ohm terminated attenuator output to the input of the UUT.

b Switch the leveled generator to the X1 and adjust the amplitude such that a steady reading of 10.00 mV is obtained on the UUT.

c. Switch the leveled generator to the X.1 setting, allowing the UUT to range down to the 2 mV range.

d. Adjust R44 so that the display of the UUT reads the same error as noted in step 1-e. ±1 digit.

e. Depress the RANGE HOLD switch, readjust the leveled generator for a reading of 1.800 ±1 digit and switch down to the X.01 setting. The UUT's display reading should be from 0.180 to 0.186 after settling.

3. Filter check:

a. Set the generator to X1 and adjust output amplitude for a display of 18.00 mV.

b. On the front panel of the UUT, set the FILTER switch to the in position.

c. Verify that the UUT display is between 17.70 and 17.20 mV.

d. On the front panel of the UUT, set the FILTER switch to the out position.

e. Set the generator to X.1 and adjust the output amplitude for a display of 1.800 mV.

f. On the front panel of the UUT, set the FILTER switch to the in position.

g. Verify that the UUT display is between 1.770 and 1.720 mV.

h. Adjust the generator output amplitude for a UUT display of 1.800 mV.

i. Set the generator to X.01.

j. Verify that the UUT display is now between .180 and .182 mV.

## 4-40. High Frequency Calibration

4-41. Use the following procedure to calibrate the UUT's high frequency response:

1. For the ranges shown in Table 4-8, adjust the amplitude of the leveled generator at 50 kHz to establish a reference (refer to Figure 4-7, for the test setup). Use one 20 dB attenuator for 0.1V, two attenuators for 0.01V, and three attenuators for .001V terminated with 50 ohms. Take care not to overdrive the transfer standard.

2. Note the reading at the output of the A55 transfer standard and maintain this by readjusting the generator's level for other frequencies.

**Table 4-8. High Frequency Calibration**

| STEP | SOURCE LEVEL | UUT RANGE | SOURCE FREQ. | ADJUST | UUT DISPLAY | LIMIT ± COUNTS |
|---|---|---|---|---|---|---|
| 1 | .001 | 2 mV | 50K | source | 1.000 | ±1 |
| 2 | .001 | 2 mV | 10M | C13 | 1.000 | ±3 |
| 3 | .001 | 2 mV | * | Chk | 1.000 | 0 to +20 |
| 4 | 0.01 | 20 mV | 50K | source | 10.00 | ±1 |
| 5 | 0.01 | 20 mV | 10M | C33 | 10.00 | ±3 |
| 6 | If C33 was adjusted, go to step 1 | | | | | |
| 7 | 0.01 | 20 mV | * | Chk | 10.00 | 0 to +20 |
| 8 | 0.01 | 20 mV | 1M | Chk | 10.00 | ±3 |
| 9 | 0.1 | 200 mV | 50K | source | 100.0 | ±1 |
| 10 | 0.1 | 200 mV | 10M | Chk | 100.0 | ±5 |
| 11 | 1. | 2 | 50K | source | 1.000 | ±1 |
| 12 | 1. | 2 | 10M | R5 | 1.000 | ±5 |
| 13 | 1. | 2 | * | Chk | 1.000 | 0 to +20 |
| 14 | 1. | 2 | 1M | Chk | 1.000 | ±3 |

*Reduce the frequency to the point between 5 and 11 MHz where the maximum reading on the display occurs.

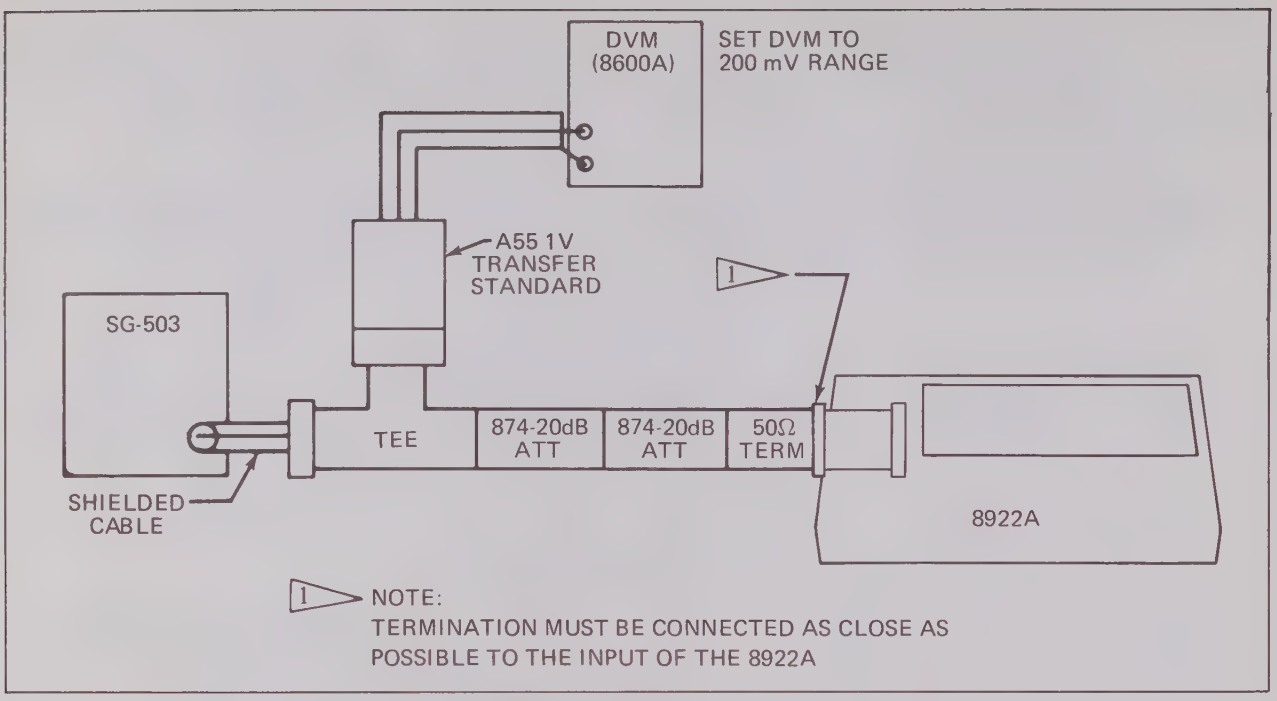


**Figure 4-7. High Frequency Calibration**

## 4-42. RMS Protection Circuit Calibration

**CAUTION**

**Resistor, R111, controls the protection circuit for the rms sensor. DO NOT make any adjustments to R111 other than those listed below. Indiscriminate adjustments may cause component damage.**

4-43. Use the following procedure to calibrate the protection circuit of the rms sensor. This procedure should be completed only if the rms sensor has been replaced or if the limit in step 20 of Table 4-9, cannot be met.

*NOTE*

*The ambient temperature must be 23° C ±5° C and the ±15V supplies must be calibrated.*

1. Remove the tape dot on R111 and turn R111 to its maximum CCW position.

2. Select AC, AUTORANGE then HOLD and STEP UP (as necessary) to lock the UUT in the 20 mV range. Refer to Figure 4-5 for the calibration and test point locations. Monitor the voltage at TP4 with a DVM and apply 24.0 mV, 200 Hz to the input. Observe that the UNCAL annunciator lights up.

3. Turn R111 slowly clockwise until the DVM reading stops decreasing. The UNCAL annunciator should go out. Turn R111 slightly clockwise so that the UNCAL annunciator remains unlit but lights when the input voltage is increased to 24.1 mV. Increase the input voltage to 25.0 mV and note the voltage on TP4. Apply an input signal of 250 mV at 2 kHz. The voltage at TP4 should not change by more than 20 mV.

4. Replace the tape dot on R111 or use Glyptol.

## 4-44. TROUBLESHOOTING

4-45. This section contains information selected to assist in troubleshooting the Model 8922A. Before attempting to troubleshoot the instrument, verify that the trouble is actually in the instrument and is not caused by faulty external equipment or improper control settings. For this reason, the Performance Check is suggested as a first step in troubleshooting. The Performance Check may also help to localize the trouble to a particular section of the instrument. If the Performance Check fails to localize the trouble, the following information may be helpful. Location of principal circuitry areas, test points, and adjustment locations of the Model 8922A are shown in Figure 4-5.

**Table 4-9. 8922A Troubleshooting Procedure**

| STEP NO. | INSTRUCTION | YES | NO | GO TO |
|---|---|---|---|---|
| 1 | All front panel switches should be in the out position. | | | 2 |
| 2 | Connect the UUT (8922A) to appropriate line power and observe the display. | | 3 | |
| 3 | Does display light correctly? | 4 | 11 | |
| 4 | Apply 1V ac input to UUT, select AC function, VOLTS display mode and AUTORANGE. | | | 5 |
| 5 | Does UUT respond to input? | 6 | 17 | |
| 6 | Does UUT pass the Low-Midband Check? | 7 | 25 | |
| 7 | Does UUT pass the Low Level DC Check? | 8 | 26 | |
| 8 | Does UUT pass the High Frequency Response Check? | 9 | 28 | |
| 9 | UUT operating properly. | | | 10 |
| 10 | Apply 1V ac to UUT in the 2V ac range. | | | 17 |
| 11 | Check appropriate display drivers, Q200-Q204. | 12 | 23 | |
| 12 | Correct power supply test point voltages are as follows: TP206 = +15V; TP207 = –5V; TP205 = power supply ground. | | | 13 |
| 13 | Is TP206 at +15V? | 14 | 29 | |
| 14 | Is TP208 at –15V? | 15 | 31 | |
| 15 | Is TP207 at +5V? | 16 | 32 | |
| 16 | Power supply is operating properly. | | | 10 |
| 17 | Check voltage between TP201 and TP202. | | | 18 |
| 18 | Is the voltage 0.5V, ±10%? | 19 | 33 | |
| 19 | Does null/peak meter read approximately ½ scale? | 20 | 40 | |
| 20 | Check A/D Converter, is it operating correctly? | 24 | 21 | |
| 21 | Check TP200, is it at +6.4V? | 22 | 42 | |
| 22 | Check the following for appropriate A/D Converter waveforms: U200-U202, U205 and TP203. Refer to Figure 4-8. | | | 23 |
| 23 | Replace defective component. | | | 24 |
| 24 | Repeat Performance Tests and Calibration. | | | 1 |
| 25 | Check attenuator logic levels using Table 4-10. | 10 | 23 | |
| 26 | Are S1 and Q33 switching properly? | 27 | 23 | |
| 27 | Check Amp A & B. | | | 10 |
| 28 | Check Amp A & B and attenuator network. | | | 10 |
| 29 | Remove AC PCB, is TP206 at +15V now? | 30 | 43 | |

**Table 4-9. 8922A Troubleshooting Procedure (cont)**

| STEP NO. | INSTRUCTION | YES | NO | GO TO |
|---|---|---|---|---|
| 30 | Troubleshoot AC pcb assembly. | | | 23 |
| 31 | Remove AC pcb, is TP208 at −15V? | 30 | 44 | |
| 32 | Check: VR203, U200-U202, U205, U206, U209, U210, U211, U4 and U302. | | | 23 |
| 33 | Check TP3. | | | 34 |
| 34 | Is voltage on TP3 at 0.5V ±10%? | 35 | 45 | |
| 35 | Turn UUT off, disconnect UUT from line power. | | | 36 |
| | **CAUTION**<br>**To avoid damage to the RMS sensor, steps 37 and 38 must be performed with a multimeter whose output on the ohms function is no greater than 10 mA.** | | | |
| 37 | Is the resistance of U1-6 to U1-7 (or J106-2 to J106-3) 90 ohms ±8%. (Out of circuit resistance = 100 ohms ±8%.) | 38 | 50 | 1 |
| 38 | Is the resistance of U1-8 to U1-9 (J106-4 to J106-3) = 100 ohms ±8%. | 39 | 50 | |
| 39 | Check U2, U4 and U5. | | | 23 |
| 40 | Check test point E3, is it at +1V ±5%? | 41 | 51 | |
| 41 | Check meter and U210B. | | | 23 |
| 42 | Check VR201. | | | 23 |
| 43 | Check VR202. | | | 23 |
| 44 | Check U203 through U207. | | | 23 |
| 45 | Check TP1. | | | 46 |
| 46 | Is TP1 at 0.045V ±10%? | 47 | 52 | |
| 47 | Check TP2. | | | 48 |
| 48 | Is voltage on TP2 at 0.045V ±10%? | 49 | 54 | |
| 49 | Check Amp B. Refer to the AC Amplifier schematic for voltage check points. | | | 23 |
| 50 | Replace rms sensor, refer to RMS Sensor Replacement Procedure. | | | 1 |
| 51 | Check U201A. | | | 23 |
| 52 | Check Q3, Q4, Q5 and Q6 (refer to Table 4-10) are they switching properly? | 53 | 23 | |
| 53 | Check Amp A. Refer to the AC Amplifier schematic for voltage check points. | | | 23 |
| 54 | Check Q31, Q32 and Q33. | | | 23 |

A/D WAVEFORMS (GENERAL CONDITIONS) 8922A READING 1000 COUNTS
SCOPE TRIGGERED ON – SLOPE OF A2 (PIN 38) X10 SCOPE PROBE (10 MΩ)

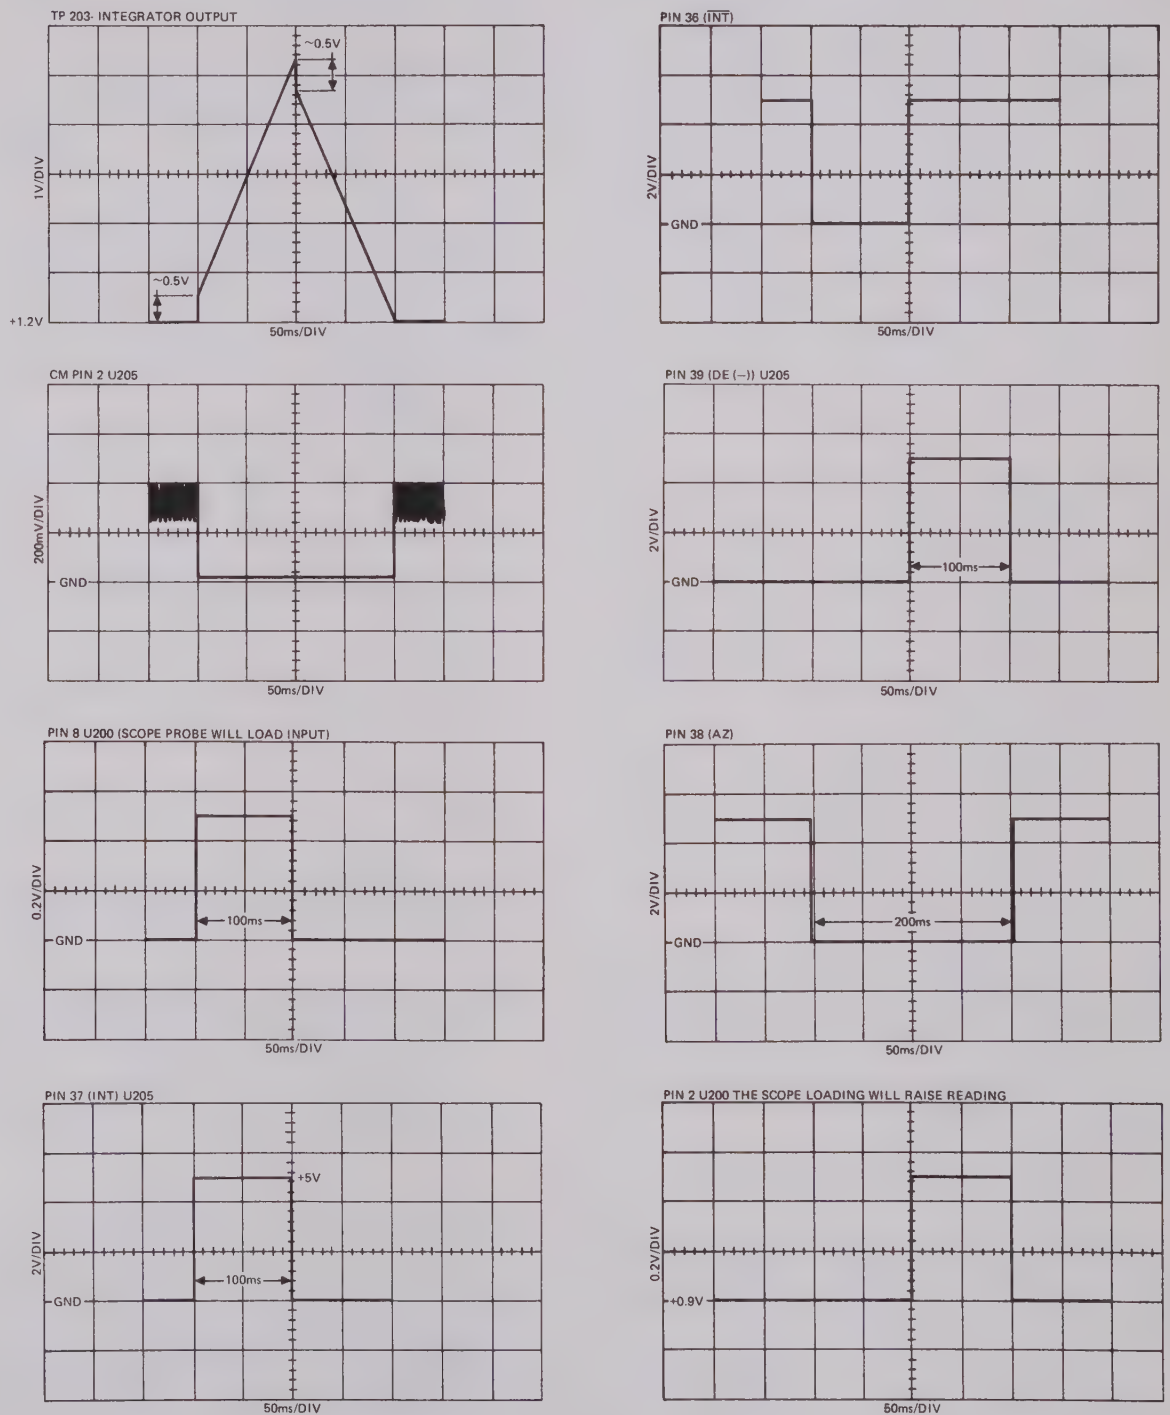


*NOTE: All timing is 2.5 times slower when AC + DC (damping) Function is selected.*

**Figure 4-8. A/D Waveforms (General Condition)**

Table 4-10. Attenuator Logic States

| RANGE | K1 | K2 | Q3* | Q4* | Q5* | Q6 | Q29* | Q28/Q30 | Q31* | Q32 |
|---|---|---|---|---|---|---|---|---|---|---|
| 700V | 0 | 1 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 0 |
| 200V | 0 | 1 | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 1 |
| 20V | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 0 | 1 | 0 |
| 2V | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 0 | 0 | 1 |
| 200 mV | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 1 | 0 |
| 20 mV | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 |
| 2 mV | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 |

LOGIC LEVELS 1 = 0V, 0 = −15V; *1 = −1.9V ±10%, *0 = −14.8V ±10%

4-46. When troubleshooting the UUT, the following points should be kept in mind:

1. Before any troubleshooting is begun, make a visual inspection of the interior of the instrument.

2. When troubleshooting the AC amplifiers, isolate the DVM test lead with a 10 kΩ probe, otherwise capacitive loading may cause the AC Amplifiers to oscillate.

3. MOS type integrated circuits can be damaged by discharging static electricity through the device. All circuits of this type are designated on the schematic with this symbol ⊘ . Use care and always use a grounded soldering iron when removing or installing MOS devices.

4-47. A troubleshooting guide for the 8922A is presented in Table 4-9. This guide is in a tabular flow chart form and is recommended for use in isolating a problem to a functional circuit area. The initial steps in the troubleshooting guide refer to the Performance Check made earlier in this section.

## 4-48. RMS Sensor Replacement

4-49. Use the following procedure when replacing the rms sensor. This procedure should be completed if the troubleshooting procedure indicates that the rms sensor must be replaced, refer to Figure 4-5.

1. Carefully unsolder the defective sensor from the AC PCB using a grounded soldering iron.

2. Install the new sensor (be sure that the sensor spacer pad is in place) and replace the AC Assembly and shield.

3. Remove R97 or R105, if installed, and replace with the bus wire from the sensor kit.

4. Remove R96 and R110, if installed, and replace R123 and R124 with 20.5k resistors.

5. Plug the protection diode fixture into J106. Note that the fixture is symmetrical.

6. Turn R111 to its maximum counterclockwise position.

7. Place all of the front panel switches to their out position and apply power to the instrument.

8. Select AC + DC, RANGE HOLD, and up range to the 2V range. Monitor TP3 with a DVM, connect a DC calibrator to the input (refer to Figure 4-6) and apply +1.8V dc. The sensor input should now be clamped by the protection circuit and TP3 should read about half the display reading.

9. Turn R111 slowly clockwise and observe that the DVM and instrument display readings increase. The dc voltage at TP3 should stop increasing at around +0.8 to +1.0V. The instrument display should stop increasing around 1.5 to 1.99V, the point at which the protection diodes clamp the input. DO NOT ALLOW THE INSTRUMENT TO GO INTO OVERLOAD. Return R111 to its CCW stop and repeat the procedure with a negative dc input. Turn R111 CCW until TP3 reads about −.5V and remove the calibrator and the protection diode fixture.

10. Short the input, select AC, RANGE HOLD, and step up range to the 2V range. Monitor TP3 and adjust R72 for 0 ±1 mV dc.

11. Select AC + DC and adjust R26 for 0 ±1 mV dc on TP3.

12. Go to the rms protection circuit calibration procedure, "RMS Protection Circuit", and complete the steps as listed. Return to step 13 below.

13. Perform calibration steps 1 through 1c, as listed in Table 4-6, Low and Midband Adjustments. Should R101 not have enough adjustment range, substitute one of the kit resistors (15 kΩ, 30.1 kΩ, or 45.3 kΩ) for R105 if reading is too high, R97 if reading is too low or zero.

14. Monitor the ac voltage at TP5* with a DVM and apply 100 mV, 10 Hz to the input with the instrument in the 200 mV range.

15. If the monitored ac voltage is 70.0 mV or greater, install the 402 kΩ resistors for R96 and R110.**

16. If the monitored ac voltage is still 70.0 mV or greater, install the 158 kΩ resistors for R96 and R110.**

17. Push the AC + DC/AC switch to the in position and apply 100 mV at 2 Hz to the input.

18. If the monitored voltage is 70 mV (100 mV peak) or greater, replace R123 and R124 with 17.1 kΩ metal film resistors.

19. If the monitored voltage is until greater than 70 mV (100 mV peak), then replace R123 and R124 with 13.7 kΩ resistors.

20. If the UUT is operating correctly, repeat the entire CALIBRATION procedure, otherwise return to beginning of Table 4-9.

## 4-50. A/D Calibration Resistor Selection

4-51. This procedure is used to determine the correct A/D selected resistor, R204, and should be completed whenever VR201 is replaced or when R205 does not have enough range to calibrate the A/D. All possible values for R204, listed in Table 4-11, may be obtained in a set by ordering Part #490722.

*NOTE*

*The UUT may go into overrange with R204 removed.*

1. Place all front panel switches in the out position and set R205 to the center of its adjustment range.

2. Apply 100.0 mV, 200 Hz to the input and select resistors R204 from Table 4-11, until the display reads closest to 100.0 mV.

3. Verify that R205 has adjustment range on both sides of the displayed 100.0 mV reading.

4. Perform the instrument calibration.

**Table 4-11. R204 Resistive Values (mf ±1%, 1/8W)**

| VALUE | VALUE |
|---|---|
| 71.5K | 39.2K |
| 66.5K | 33.2K |
| 61.9K | 26.7K |
| 56.2K | 20.5K |
| 51.1K | 14.0K |
| 43.3K | 7.15K |

## 4-52. DC Offset Resistor Selection

4-53. Use this procedure to determine the correct DC offset selected resistors, R19 or R34 for amplifier A, and/or R66 or R76 for amplifier B. Use the procedure when the amplifier offset cannot be adjusted to 0V with R26 and/or R72; usually because one or more of the following have been replaced:

| | |
|---|---|
| Amplifier A | Q9, Q8, Q10, and Q12. |
| Amplifier B | Q36, Q37, Q38, and Q40. |

All possible values for R19 or R34 (amplifier A) or R66 or R76 (amplifier B), listed in Table 4-12, may be obtained in a set by ordering Part #490730. Two sets will be necessary if both amplifiers require the same selected resistor value.

**Table 4-12. R19/R34, R66/R76 Resistive Values (mf, ±1%, 1/8W)**

| VALUE | VALUE |
|---|---|
| 449K | 32.4K |
| 332K | 31.6K |
| 169K | 30.1K |
| 115K | 28.0K |
| 86.6K | 26.1K |
| 68.1K | 24.3K |
| 57.6K | 22.6K |
| 48.7K | 21.5K |
| 43.2K | 20.5K |
| 38.3K | 19.1K |
| 34.8K | |

4-54. SET UP

1. Remove the cover shield of the AC Converter PCB.

2. Connect a short jumper between input low and the metal fence on the AC Converter PCB.

4-55. AMPLIFIER B
(must be done before amplifier A)

1. Apply power, short the input, select AC, RANGE HOLD, and step up to the 2V range.

2. Set R72 to the center of its adjustment range and monitor TP3 with a DVM.

3. Select resistors from Table 4-12, starting with the highest value until the DVM reads closest to 0 volts dc. Place the resistor in the socket for R66 if the DVM reads positive, R76 if the reading is negative. Adjust R72 for a DVM reading of less than 1 mV dc at TP3.

4-56. AMPLIFIER A

1. Select AC + DC, set R26 to the center of its adjustment range and monitor TP3 with a DVM.

2. Select resistors from Table 4-12, starting with the highest value until the DVM reads closest to 0 volts dc. Place the resistor in the socket for R19 if the DVM reads positive, R34 if the reading is negative.

3. Adjust R26 for a DVM reading of less the 1 mV dc at TP3.

4. Perform the complete instrument calibration.

# Section 5
# List of Replaceable Parts

## TABLE OF CONTENTS


| ASSEMBLY NAME | DRAWING NO. | TABLE | PAGE | FIGURE | PAGE |
|---|---|---|---|---|---|
| 8922A Final Assembly | 8922A-T&B | 5-1 | 5-3 | 5-1 | 5-4 |
| A1 Main PCB Assembly | 8922A-1601 | 5-2 | 5-6 | 5-2 | 5-10 |
| A1A1 Display PCB Assembly | 8920A-1602 | 5-3 | 5-11 | 5-3 | 5-11 |
| A2 AC PCB Assembly | 8922A-1603 | 5-4 | 5-12 | 5-4 | 5-18 |

## 5-1 INTRODUCTION

5-2. This section contains an illustrated parts breakdown of the instrument. A similar parts listing for each of the Options will be found in Section 6. Components are listed alphanumerically by assembly. Both electrical and mechanical components are listed by reference designation. Each listed part is shown in an accompanying illustration.

5-3. Parts lists include the following information:

1. Reference Designation.

2. Description of each part.

3. FLUKE Stock Number.

4. Federal Supply Code for Manufacturers. (See Section 7 for Code-to-Name list.)

5. Manufacturer's Part Number.

6. Total Quantity per assembly or component.

7. Recommended Quantity: This entry indicates the recommended number of spare parts necessary to support one to five instruments for a period of two years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for one year or more at an isolated site, it is recommended that at least one of each assembly in the instrument be stocked. In the case of optional subassemblies, plug-ins, etc., that are not always part of the instrument, or are deviations from the basic instrument model, the REC QTY column lists the recommended quantity of the item in that particular assembly.

## 5-4. HOW TO OBTAIN PARTS

5-5. Components may be ordered directly from the manufacturer by using the manufacturer's part number, or from the John Fluke Mfg. Co., Inc. factory or authorized representative by using the FLUKE STOCK NUMBER. In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions if necessary.

5-6. To ensure prompt and efficient handling of your order, include the following information.

1. Quantity.

2. FLUKE Stock Number.

3. Description.

4. Reference Designation.

5. Printed Circuit Board Part Number.

6. Instrument Model and Serial Number.

**CAUTION**

**Indicated devices are subject to damage by static discharge.**

Table 5-1. 8922A Final Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| A | 8922A FINAL ASSEMBLY<br>FIGURE 5-1 | | | | | | |
| A1 | Ⓐ MAIN PCB ASSEMBLY | ORDER | ONLY | REPLACEABLE PARTS | 1 | | |
| A2 | AC PCB ASSEMBLY | 510602 | 89526 | 510602 | 1 | | |
| H1 | SCREW, FHP, 6-32 X 3/4 | 114504 | 89536 | 114504 | 4 | | |
| H2 | SCREW, PHP, 2-56 X 1/4 | 149534 | 73734 | 19002 | 2 | | |
| H3 | SCREW, PHP, 4-40 X 1/4 | 256156 | 73734 | 23022 | 13 | | |
| H4 | SCREW, FHP, 6-32 X 5/8 | 335158 | 89536 | 335158 | 2 | | |
| MP1 | GUARD COVER, C SIZE | 464115 | 89536 | 464115 | 1 | | |
| MP2 | COVER, PLATE DOU | 456764 | 89536 | 456764 | 1 | | |
| MP3 | BAIL | 467555 | 89536 | 467555 | 1 | | |
| MP4 | RETAINER, HANDLE | 467563 | 89536 | 467563 | 2 | | |
| MP5 | DECAL, RETAINER | 473645 | 89536 | 473645 | 2 | | |
| MP6 | COVER, C SIZE | 454736 | 89536 | 454736 | 2 | | |
| MP7 | HANDLE | 454751 | 89536 | 454751 | 1 | | |
| MP8 | COVER,AC SHIELD | 456848 | 89536 | 456848 | 1 | | |
| MP9 | LINE CORD (NOT SHOWN) | 343723 | 89536 | 343723 | 1 | | |
| MP10 | BASE, STANDARD | 454702 | 89536 | 454702 | 1 | | |
| MP12 | DECAL, BASE SIDES | 473652 | 89536 | 473652 | 2 | | |
| MP13 | LATCH | 467548 | 89536 | 467548 | 2 | | |
| MP14 | FOOT | 467571 | 89536 | 467571 | 4 | | |
| MP15 | INSULATOR, GUARD, COVER | 492298 | 89536 | 492298 | 1 | | |
| MP16 | LUG, SOLDER, #141 | 104091 | 89536 | 104091 | 1 | | |
| R19/R34 | RES, MTL. FILM, 332K +/-1%, 1/8W | 289504 | 89536 | 289504 | 2 | | 1 |
| R66/R76 | RES, MTL. FILM, 332K +/-1%, 1/8W | 289504 | 89536 | 289504 | REF | | |
| R96/R110 | RES, MTL. FILM, 158K +/-1%, 1/8W | 237214 | 89536 | 237214 | 2 | | 1 |
| R97/R105 | RES, MTL. FILM, 15K +/-1%, 1/8W | 285296 | 89536 | 285296 | 1 | | 1 |
| R123 | RES, MTL. FILM, 21.5K +/-1%, 1/8W | 168278 | 89536 | 168278 | 2 | | 1 |
| R124 | RES, MTL. FILM, 21.5K +/-1%, 1/8W | 168278 | 89536 | 168278 | REF | | 1 |
| R204 | RES, MTL. FILM, 16.5K +/-1%, 1/8W | 293696 | 89536 | 293696 | 1 | | 2 |
| U205 | IC, LARGE SCALE DIGITAL CHIP | 458463 | 89536 | 458463 | 1 | | 3 |
| | INSTRUCTION MANUAL | 522052 | 89536 | 522052 | 1 | | |

1 INSTALLED OR JUMPERED AS NECESSARY. SEE AC PCB ASSY. A2 TABLE 5-4.

2 INSTALLED AS NECESSARY. SEE MAIN PCB ASSY. A1 TABLE 5-2.

3 PART OF MAIN PCB ASSY. A1 TABLE 5-2.

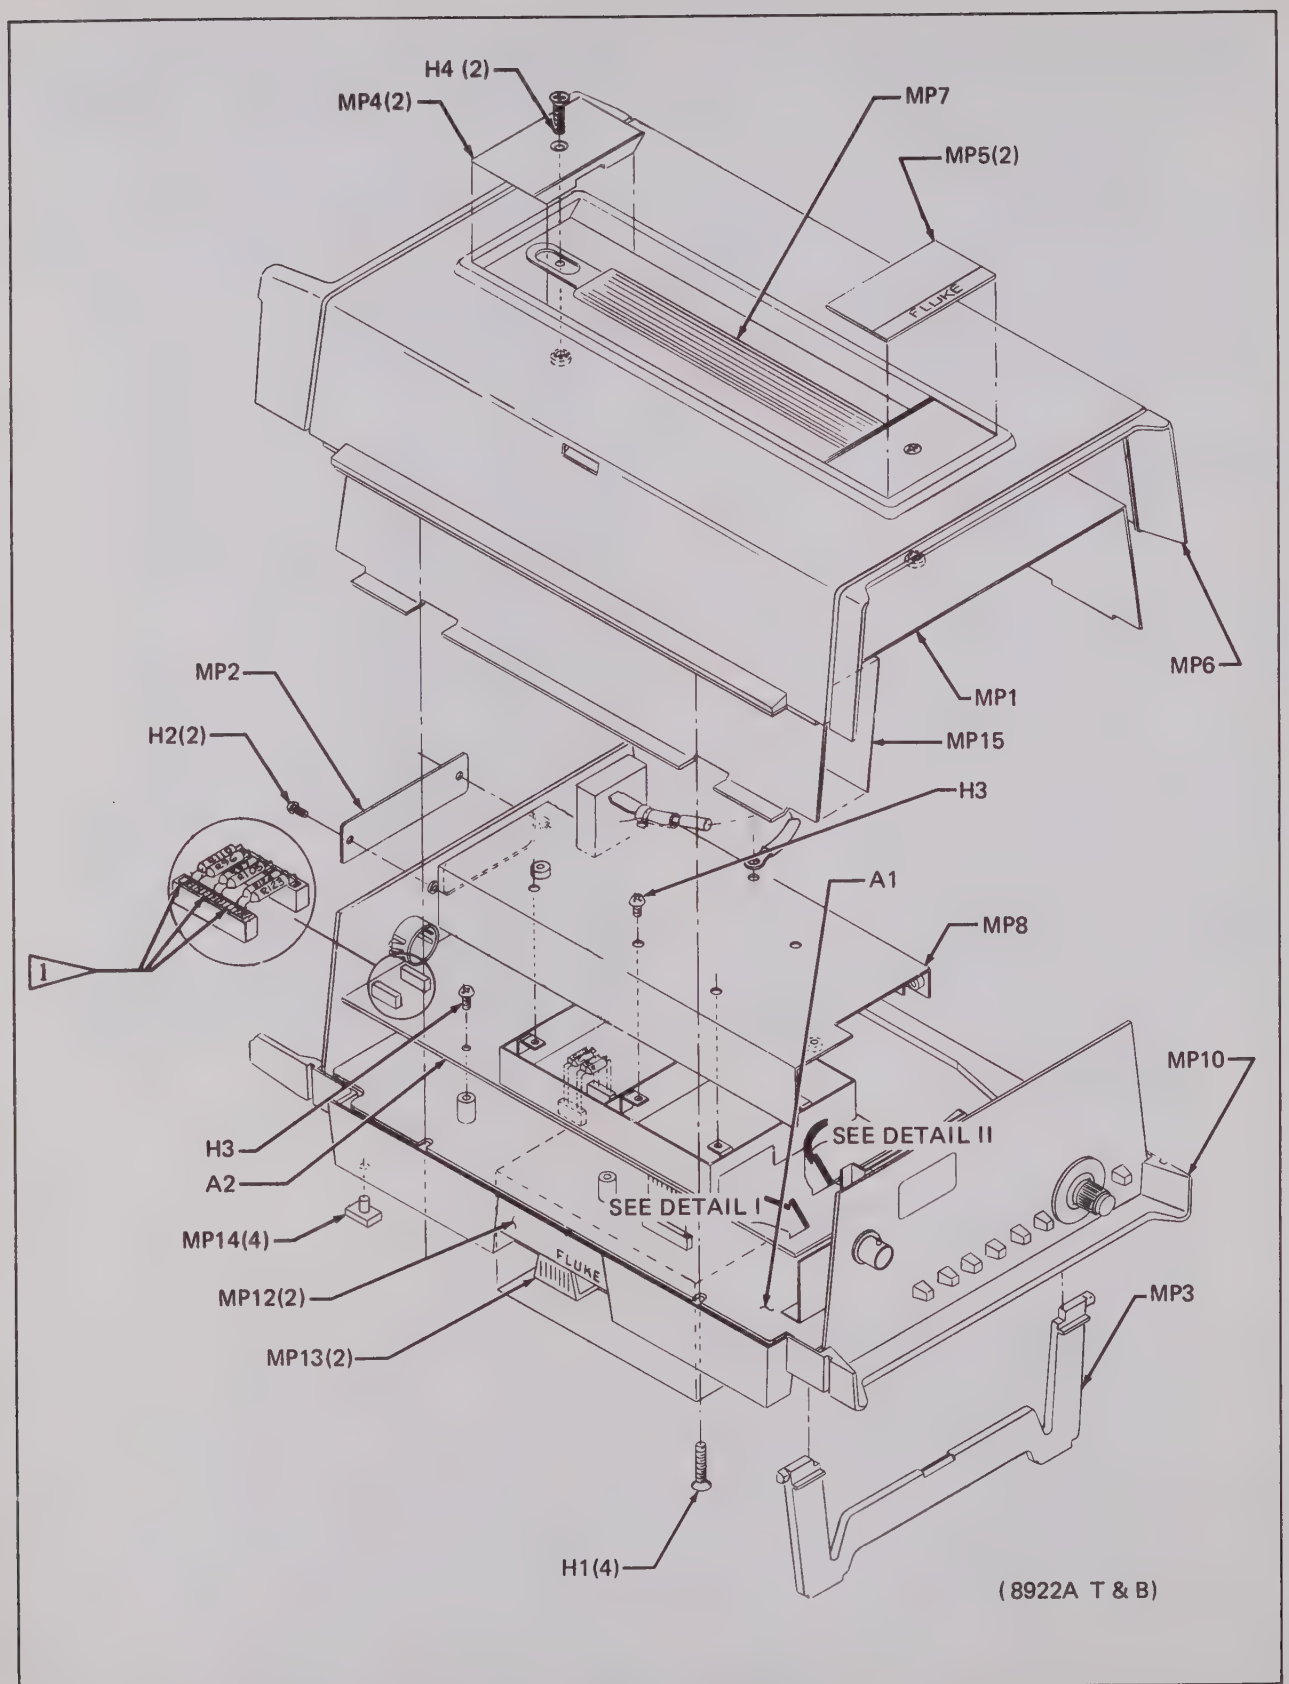


**Figure 5-1. 8922A Final Assembly**

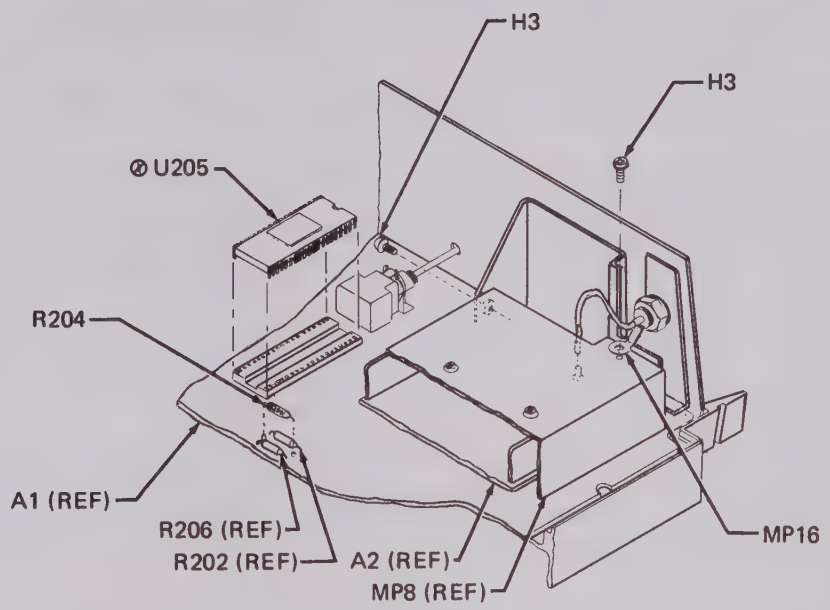


DETAIL I

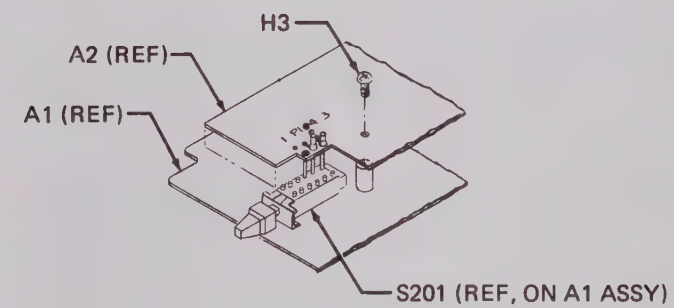


DETAIL II

NOTES:

1 #3, #6, and #9 POCKETS OF 9 PIN CONNECTORS NOT USED.

2 WARNING: ⊘ INDICATES USAGE OF MOS DEVICE(S) WHICH MAY BE DAMAGED BY STATIC DISCHARGE.

CAUTION
SUBJECT TO DAMAGE BY STATIC ELECTRICITY

**Figure 5-1. 8922A Final Assembly (cont)**

Table 5-2. A1 Main PCB Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| A1 | Ⓐ MAIN PCB ASSEMBLY<br>FIGURE 5-2 (8922A-4001/4001S) | ORDER | ONLY | REPLACEABLE PARTS | REF | | |
| A1A1 | DISPLAY PCB ASSEMBLY | ORDER | ONLY | REPLACEABLE PARTS | 1 | | |
| C200 | CAP, PLYPRP, 0.47 UF +/-10%, 100V | 446807 | 89536 | 446807 | 1 | | |
| C201 | CAP, TA, 0.47 UF +/-20%, 35V | 161349 | 56289 | 196D474X0035HA1 | 1 | | |
| C202 | CAP, MICA, 150 PF +/-5%, 500V | 148478 | 72136 | DMF15151J | 1 | | |
| C203 | CAP, MYLAR, 0.47 UF +/-10%, 100V | 369124 | 73445 | C280MAH/470K | 1 | | |
| C204 | CAP, CER, 10,000 PF +/20%, 100V | 149153 | 56289 | C023B10F103M | 4 | | |
| C205 | CAP, CER, 10,000 PF +/-20%, 100V | 149153 | 56289 | C023B10F103M | REF | | |
| C206 | CAP, MICA, 180 PF +/-5%, 500V | 148460 | 72136 | DM15F181J | 1 | | |
| C207 | CAP, MICA, 3000 PF +/-5%, 500V | 161786 | 72136 | DMF19302J | 1 | | |
| C208 | CAP, ELECT, 220 UF -10/+75%, 35V | 460279 | 89536 | 460279 | 3 | | |
| C209 | CAP, ELECT, 220 UF -10/+75%, 35V | 460279 | 89536 | 460279 | REF | | |
| C210 | CAP, ELECT, 220 UF -10/+75%, 35V | 460279 | 89536 | 460279 | REF | | |
| C211 | CAP, ELECT, 4700 UF -10/+100%, 15V | 460261 | 80031 | 3143TS502V015 | 1 | | |
| C212 | CAP, CER, 10,000 PF +/20%, 100V | 149153 | 56289 | C023B10F103M | REF | | |
| C213 | CAP, CER, 10,000 PF +/20%, 100V | 149153 | 56289 | C023B10F103M | REF | | |
| C214 | CAP, MATCHED PAIR (W/C215) | 512210 | 89536 | 512210 | 1 | | |
| C215 | CAP, PART OF MATCHED PAIR (TO C214) | | | | REF | | |
| C216 | CAP, MYLAR, 0.22UF +/-20%, 50V | 190314 | 71590 | CW30C224K | 1 | | |
| C217 | CAP, MICA, 1000 PF +/-5%, 500V | 148387 | 72136 | DM19F102J | 1 | | |
| C218 | CAP, CER, 100 PF +/-10%, 1K | 105593 | 71590 | DD101 | 1 | | |
| CR1 | RECTIFIER BRIDGE, 50V, 25A | 473520 | 21845 | J775-0LP | 1 | | |
| CR200 | DIODE, MULTI-PELLET | 375477 | 09214 | MPD200 | 1 | 1 | |
| CR201 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | 6 | 2 | |
| CR202 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR203 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR204 | RECTIFIER BRIDGE | 296509 | 21845 | F903C-22 | 2 | 1 | |
| CR205 | RECTIFIER BRIDGE | 296509 | 21845 | F903C-22 | REF | | |
| CR206 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR207 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR208 | DIODE, SI, MULTI-PELLET | 375485 | 09214 | MPD300 | 1 | 1 | |
| CR209 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| F1 | FUSE | BY | ONLY | APPROPRIATE SOURCE | 1 | 5 | |
| | SLO-BLO, 1/8 AMP | 166488 | 71400 | MDL1-8 | | | |
| | METRIC, SLO-ACT, 5 X 20 MM, GLASS TUBE | 467233 | 89536 | 467233 | | | |
| H200 | SCREW, RHP, 4-40 X 1/4 | 256156 | 73734 | 22022 | 10 | | |
| H201 | LOCKWASHER, FLAT, #4 | 110395 | 73734 | 1355 | 2 | | |
| H202 | NUT, HEX, 4-40 | 184044 | 73734 | 8002A-NP | 2 | | |
| H203 | SCREW, PHP, 6-32 X 5/8 | 152181 | 73734 | 19047 | 1 | | |
| H204 | NUT, LOCKING, HEX, 6-32 | 152819 | 78199 | 511-061800-00 | 1 | | |
| H205 | LOCKWASHER, SPLIT, #5 | 111328 | 89536 | 111328 | 2 | | |
| H206 | NUT, HEX | 110635 | 89536 | 110635 | 2 | | |
| J1 | CONNECTOR, BANANA JACK, BLACK | 162073 | 74970 | 108-0903-001 | 1 | | |
| J2 | CONNECTOR, BANANA JACK, RED | 162065 | 74970 | 108-0902-001 | 1 | | |
| J6 | CONNECTOR FEMALE BNC (8920A ONLY) | 414201 | 02660 | 31-010 | 1 | | |
| J101 | SOCKET, IN-LINE | 436774 | 60065 | SS-109-1-04 | 3 | | |
| J102 | SOCKET, IN-LINE | 436774 | 60065 | SS-109-1-04 | REF | | |
| J103 | SOCKET, IN-LINE | 436774 | 60065 | SS-109-1-04 | REF | | |

Table 5-2. A1 Main PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| J107 | SOCKET, 4-PIN, SNGL-IN-LINE | 417311 | 30035 | SS-109-1-04 | 1 | | |
| J301 | CONNECTOR, MATING | 461095 | 00779 | 87406-1 | 1 | | |
| J401 | POST, CONTACT | 417329 | 22526 | 65500-104 | 1 | | |
| J501 | POST, CONTACT | 474213 | 22526 | 65500-1081 | 1 | | |
| J601 | POST, CONTACT | 478693 | 22526 | 65500-110 | 1 | | |
| L200 | CHOKE, 6-TURN | 320911 | 89536 | 320911 | 1 | | |
| L201 | CHOKE, RF | 147819 | 72259 | WEE1000 | 1 | | |
| M1 | METER, ANALOG PANEL | 478685 | 32171 | OMC-DMA-001-CP2 | 1 | | |
| MP1 | BRACKET, SWITCH MOUNTING | 475392 | 89536 | 475392 | 1 | | |
| MP203 | BRACKET, METER MOUNTING | 468868 | 89536 | 468868 | 1 | | |
| MP204 | BRACKET, PUSH ROD | 456749 | 89536 | 456749 | 1 | | |
| MP205 | KNOB, SKIRTED | 463224 | 89536 | 463224 | 1 | | |
| MP206 | SHIELD, TRANSFORMER | 467696 | 89536 | 467696 | 1 | | |
| MP207 | BRACKET, FRONT PANEL | 467704 | 89536 | 467704 | 1 | | |
| MP208 | PANEL, REAR | 456780 | 89536 | 456780 | 1 | | |
| MP209 | PUSH ROD, POWER SWITCH | 456731 | 89536 | 456731 | 1 | | |
| MP210 | COVER, AC SWITCH | 475681 | 89536 | 475681 | 1 | | |
| MP228 | GUARD, BASE | 464404 | 89536 | 464404 | 1 | | |
| MP231 | DECAL, KNOB | 473546 | 89536 | 473546 | 1 | | |
| MP232 | PANEL, FRONT | 478156 | 89536 | 478156 | 1 | | |
| MP236 | HOLE, PLUG | 407502 | 89536 | 407502 | 1 | | |
| MP237 | BUTTON, RANGE | 426759 | 89536 | 426759 | 2 | | |
| MP238 | BUTTON, RANGE | 426759 | 89536 | 426759 | REF | | |
| MP239 | BUTTON, FUNCTION | 425900 | 89536 | 425900 | 4 | | |
| MP240 | BUTTON, FUNCTION | 425900 | 89536 | 425900 | REF | | |
| MP241 | BUTTON, FUNCTION | 425900 | 89536 | 425900 | REF | | |
| MP242 | BUTTON, FUNCTION | 425900 | 89536 | 425900 | REF | | |
| MP243 | SPACER, XSTR | 175125 | 07047 | 10172DAP | 1 | | |
| Q200 | XSTR, SI, PNP | 340026 | 89536 | 340026 | 5 | 1 | |
| Q201 | XSTR, SI, PNP | 340026 | 89536 | 340026 | REF | | |
| Q202 | XSTR, SI, PNP | 340026 | 89536 | 340026 | REF | | |
| Q203 | XSTR, SI, PNP | 340026 | 89536 | 340026 | REF | | |
| Q204 | XSTR, SI, PNP | 340026 | 89536 | 340026 | REF | | |
| Q205 | XSTR, SI, NPN | 218396 | 04713 | 2N3904 | 2 | 1 | |
| Q206 | XSTR, SI, NPN | 218396 | 04713 | 2N3904 | REF | | |
| Q207 | XSTR, SI, PNP, PWR | 325753 | 03508 | D45C5 | 1 | 1 | |
| Q210 | XSTR, FET, N-CHANNEL | 261578 | 89536 | 261578 | 4 | 1 | |
| Q211 | XSTR, FET, N-CHANNEL | 261578 | 89536 | 261578 | REF | | |
| Q212 | XSTR, FET, N-CHANNEL | 261578 | 89536 | 261578 | REF | | |
| Q213 | XSTR, FET, N-CHANNEL | 261578 | 89536 | 261578 | REF | | |
| Q214 | XSTR, FET, GRP, N-CHANNEL | 261388 | 89536 | 261388 | 1 | 1 | |
| R200 | RES, COMP, 100K +/-5%, 1/4W | 148189 | 01121 | CB1045 | 3 | | |
| R201 | RES, MTL. FILM, 2.15K +/-1%, 1/8W | 293712 | 91637 | CMF552151F | 1 | | |
| R202 | RES, MTL. FILM, 301K +/-1%, 1/8W | 379156 | 91637 | CMF553013F | 1 | | |
| R203 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | 3 | | |
| R204 | SEE FINAL ASSEMBLLY TABLE 5-1. | | | | | | |
| R205 | RES, VAR, CER, 10K +/-10%, 1/2W | 309674 | 89536 | 309674 | 2 | | |
| R206 | RES, MTL. FILM, 499K +/-1%, 1/8W | 349191 | 91637 | CMF554993F | 1 | | |
| R207 | RES, MTL. FILM, 47.5K +/-1%, 1/8W | 474585 | 91637 | CMF554752F | 1 | | |
| R209 | RES, COMP, 68K +/-5%, 1/4W | 148171 | 01121 | CB6835 | 1 | | |

Table 5-2. A1 Main PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| R210 | RES, COMP, 150 +/-5%, 1/4W | 147934 | 01121 | CB1515 | 2 | | |
| R212 | RES, COMP, 22K +/-5%, 1/4W | 148130 | 01121 | CB2235 | 2 | | |
| R213 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | 5 | | |
| R214 | RES, COMP, 330K +/-5%, 1/4W | 192948 | 01121 | CB3345 | 1 | | |
| R215 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | REF | | |
| R216 | RES, COMP, 6.8K +/-5%, 1/4W | 148098 | 01121 | CB62825 | 1 | | |
| R217 | RES, COMP, 22K +/-5%, 1/4W | 148130 | 01121 | CB2235 | REF | | |
| R219 | RES, COMP, 1K +/-5%, 1/4W | 148023 | 01121 | CB1025 | 2 | | |
| R220 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | REF | | |
| R221 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | REF | | |
| R222 | RES, COMP, 1K +/-5%, 1/4W | 148023 | 01121 | CB1025 | REF | | |
| R223 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | REF | | |
| R224 | RES, VAR, CER, 10K +/-10%, 1/2W | 309674 | 89536 | 309674 | REF | | |
| R225 | RES, MTL. FILM, 90.9K +/-1%, 1/8W | 223537 | 91637 | CMF559092F | 1 | | |
| R226 | RES, MTL. FILM, 953 +/-1%, 1/8W | 288555 | 91637 | CMF559530F | 1 | | |
| R227 | RES, MTL. FILM, 909 +/-1%, 1/8W | 312629 | 91637 | CMF559090F | 1 | | |
| R228 | RES, MTL. FILM, 8.66K +/-1%, 1/8W | 260364 | 91637 | CMF558661F | 1 | | |
| R229 | RES, VAR, CER, 2K +/-10%, 1/2W | 309666 | 89536 | 309666 | 1 | | |
| R231 | RES, MTL. FILM, 11.8K +/-0.25%, 1/8W | 325688 | 91637 | CMF551182F | 2 | | |
| R232 | RES, MTL. FILM, 11.8K +/-0.25%, 1/8W | 325688 | 91637 | CMF551182F | REF | | |
| R234 | RES, VAR, CER, 100K +/-10%, 1/2W | 369520 | 89536 | 369520 | 1 | | |
| R235 | RES, MTL. FILM, 110K +/-1%, 1/8W | 234708 | 91637 | CMF551103F | 1 | | |
| R236 | RES, COMP, 82K +/-5%, 1/4W | 188458 | 01121 | CB8235 | 1 | | |
| R237 | RES, COMP, 100K +/-5%, 1/4W | 193342 | 01121 | CB5125 | 1 | | |
| R238 | RES, MTL. FILM, 100K +/-1%, 1/8W | 248807 | 91637 | CMF551003F | 1 | | |
| R239 | RES, COMP, 150 +/-5%, 1/4W | 147934 | 01121 | CB1515 | REF | | |
| R242 | RES, COMP, 100K +/-5%, 1/4W | 148189 | 01121 | CB1045 | REF | | |
| R243 | RES, COMP, 4 7M +/-5%, 1/4W | 220046 | 01121 | CB4755 | 1 | | |
| R244 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R245 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R246 | RES, COMP, 470K +/-5%, 1/4W | 188441 | 01121 | CB4745 | 1 | | |
| R247 | RES, COMP, 100K +/-5%, 1/4W | 148189 | 01121 | CB1045 | REF | | |
| S201-206 | SWITCH, SET | 453662 | 89536 | 453662 | 1 | | |
| S207 | SWITCH, ROTARY | 453670 | 89536 | 453670 | 1 | | |
| S208 | SWITCH, OFF/ON | 453605 | 89536 | 453605 | 1 | | |
| S208-1 | BUTTON SWITCH, GREEN | 445197 | 89536 | 445197 | 1 | | |
| S209 | SWITCH SLIDE | 234278 | 82389 | XW1659 | 2 | | |
| S210 | SWITCH SLIDE | 234278 | 82389 | XW1659 | REF | | |
| T200 | POWER TRANSFORMER | 458349 | 89536 | 458349 | 1 | | |
| TP200 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | 11 | | |
| TP201 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP202 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP203 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP204 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP205 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP206 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP207 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP208 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP209 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP210 | CONNECTOR, POST | 379438 | 00779 | 1-87022-0 | REF | | |

Table 5-2. A1 Main PCB Assembly (cont)

| REF DES | | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|---|
| U200 | Ⓟ | IC, C-MOS, QUAD, BI-LATERAL SWITCH | 363838 | 02735 | CD4016AE | 1 | | |
| U201 | | IC, LIN, OP-AMP | 428862 | 02735 | CA3130 | 1 | 1 | |
| U202 | | IC, LIN, 5-XSTR ARRAY, 2-PNP, 3-NPN | 418954 | 02735 | CA30963E | 1 | 1 | |
| U203 | Ⓟ | IC, C-MOS, HEX, BUFFER | 381848 | 02735 | CD4049AE | 2 | 1 | |
| U204 | Ⓟ | IC, C-MOS, QUAD, 2-INPUT NAND GATE | 355198 | 02735 | CD4011AE | 1 | 1 | |
| U205 | | SEE FINAL ASSEMBLY TABLE 5-1 | | | | | | |
| U206 | | IC, LIN, NPN, XSTR ARRAY | 419002 | 02735 | CA3086E | 1 | 1 | |
| U207 | Ⓟ | IC, C-MOS, HEX, BUFFER | 381848 | 02735 | CD4049AE | REF | | |
| U209 | Ⓟ | IC, C-MOS, HEX INVERTER | 404681 | 02735 | CD4069UBE | 1 | 1 | |
| U210 | | IC, LIN, OP-AMP | 418566 | 18324 | LM358/CR999 | 1 | 1 | |
| U211 | | IC, LIN, OP-AMP | 413740 | 18324 | LM307N | 1 | 1 | |
| VR201 | | DIODE, ZENER, 6.4V | 381988 | 04713 | SZG20120 | 1 | | 1 |
| VR202 | | IC, LIN, ADJ-REG | 460410 | 12040 | LM317T | 1 | 1 | |
| VR203 | | IC, LIN, VOL-REG | 355107 | 07236 | F78050C | 1 | 1 | |
| VR204 | | DIODE, ZENER | 159798 | 07910 | IN751A | 1 | 1 | |
| W1 | | WIRE ASSY, FRONT PANEL | 486654 | 89536 | 486654 | 1 | | |
| W2 | | WIRE ASSY, FRONT PANEL | 486662 | 89536 | 476662 | 1 | | |
| W5 | | WIRE ASSY, FRONT PANEL | 486605 | 89536 | 486605 | 1 | | |
| W6 | | WIRE ASSY, FUSE | 135541 | 89536 | 135541 | 3 | | |
| W7 | | WIRE ASSY, FUSE | 486621 | 89536 | 486621 | REF | | |
| W8 | | WIRE ASSY | 115733 | 89536 | 115733 | 1 | | |
| W9 | | WIRE ASSY | 115717 | 89536 | 115717 | 1 | | |
| W10 | | GROUND STRAP ASSY, BRIDGE RECTIFIER | 486647 | 89536 | 486647 | 1 | | |
| W11 | | WIRE ASSY, BRIDGE RECTIFIER | 486639 | 89536 | 486639 | 1 | | |
| W201 | | WIRE ASSY, FUSE | 135541 | 89536 | 135541 | REF | | |
| XF1 | | HOLDER, FUSE | 375188 | 89536 | 375188 | 1 | | |
| XF1-1 | | FUSEHOLDER CAP, GREY, 1/4" X 1 1/4" | 460238 | 89536 | 460238 | 1 | | |
| XR204 | | SOCKET, RESISTOR | 343285 | 0779 | 2-33127-6 | 2 | | |
| XU200 | | SOCKET, IC, 14-PIN | 370304 | 01295 | C931402 | 1 | | |
| XU205 | | SOCKET, IC, 40-PINS | 429282 | 09922 | DILB40P-108 | 1 | | |

1 IF VR201 IS REPLACED, THE A/D CALIBRATION RESISTOR (R204) MAY HAVE TO BE RESELECTED, SEE SECT. 4 A/D CALIBRATION RESISTOR SELECTION.

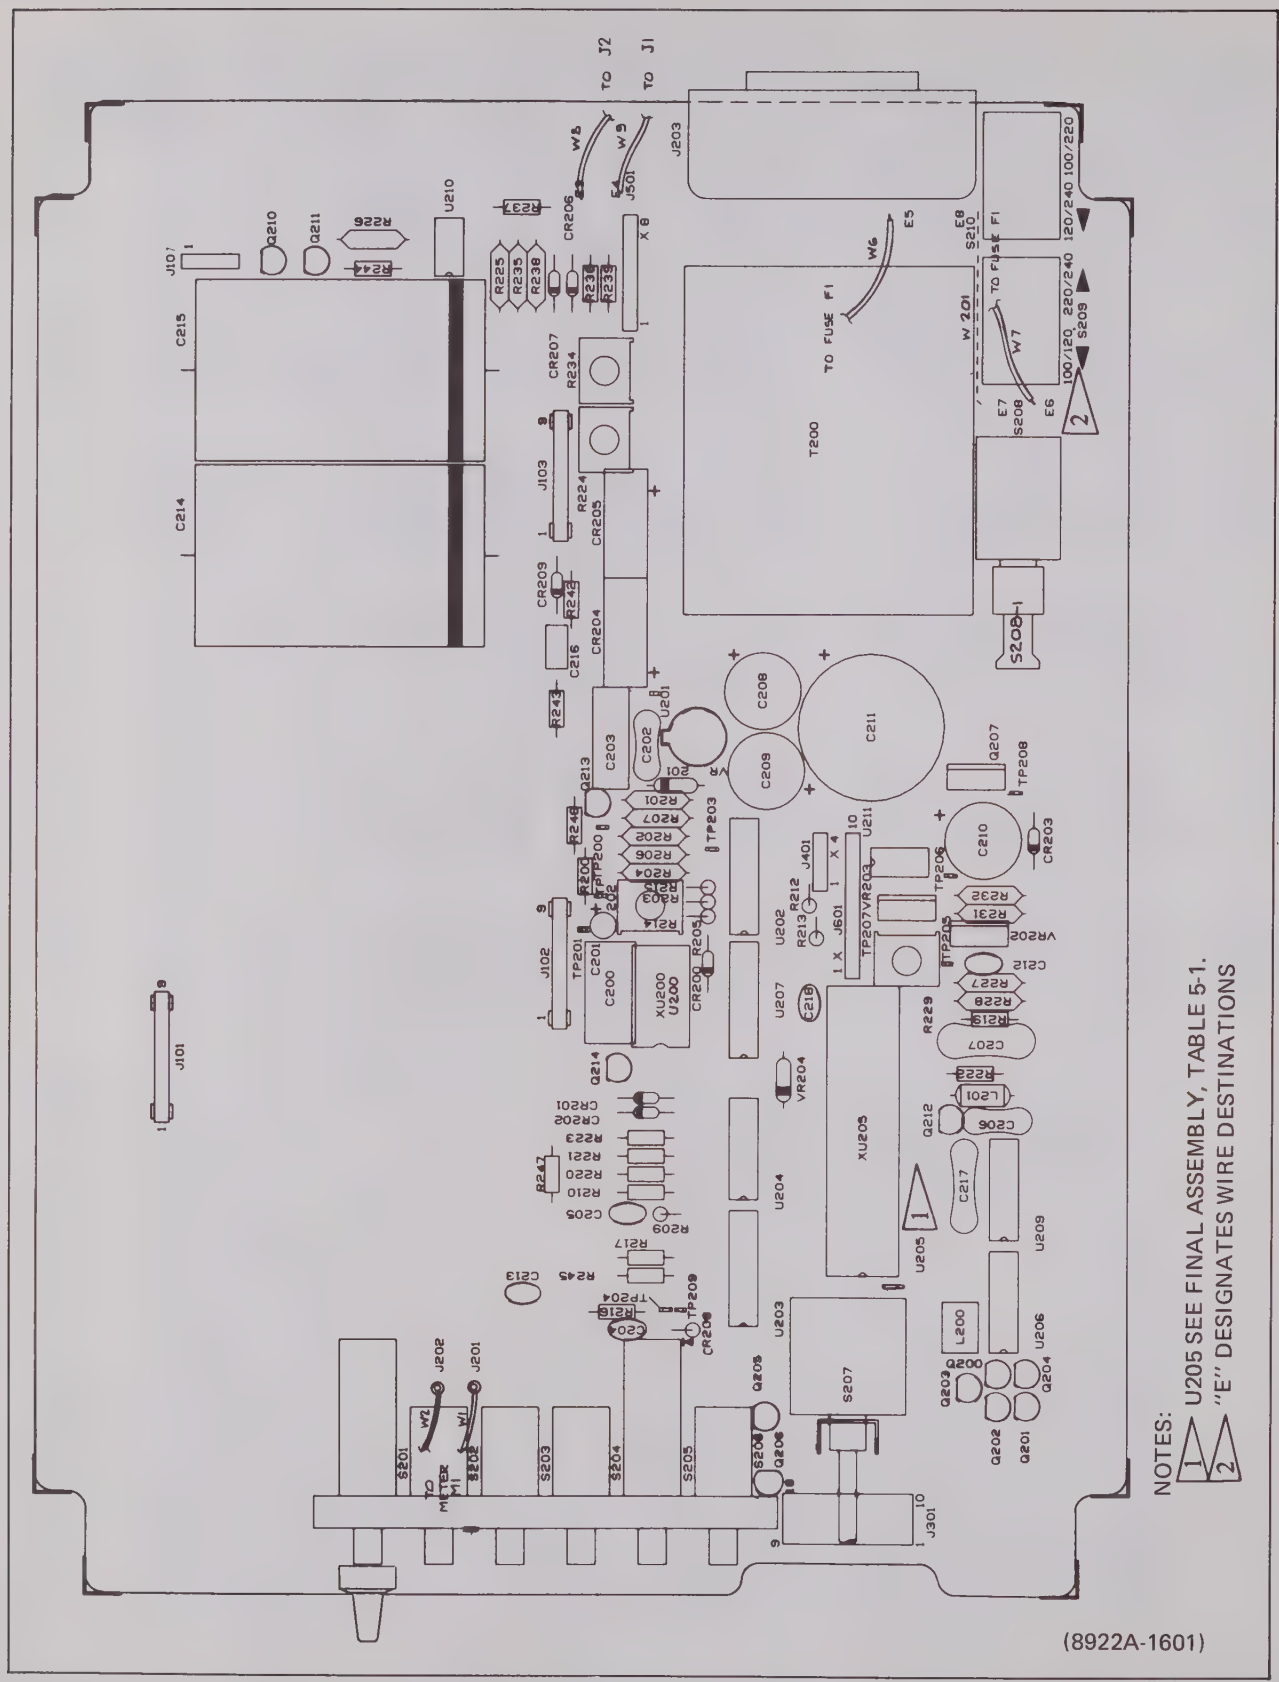


Figure 5-2. A1 Main PCB Assembly

Table 5-3. A1A1 Display PCB Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| A1A1 | DISPLAY PCB ASSEMBLY FIGURE 5-3 (8920A-4002T) | 456921 | 89536 | 456921 | REF | | |
| C301 | CAP, TA, 1 UF +/-20%, 35V | 161919 | 56289 | 196D105X0035JA1 | 1 | | |
| CR301 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | 1N4448 | 1 | 1 | |
| DS301 | DISPLAY, LED | 495457 | 29083 | QDSP3507 | 1 | | |
| DS302 | DISPLAY, LED | 495440 | 28480 | QDSP3515 | 4 | | |
| DS303 | DISPLAY, LED | 495440 | 28480 | QDSP3515 | REF | | |
| DS304 | DISPLAY, LED | 495440 | 28480 | QDSP3515 | REF | | |
| DS305 | DISPLAY, LED | 495440 | 28480 | QDSP3515 | REF | | |
| DS306 | DIODE, LIGHT EMITTING | 385898 | 28480 | 5082-4887 | 5 | | |
| DS307 | DIODE, LIGHT EMITTING | 385898 | 28480 | 5082-4887 | REF | | |
| DS308 | DIODE, LIGHT EMITTING | 385898 | 28480 | 5082-4887 | REF | | |
| DS309 | DIODE, LIGHT EMITTING | 385898 | 28480 | 5082-4887 | REF | | |
| DS310 | DIODE, LIGHT EMITTING | 385898 | 28480 | 5082-4887 | REF | | |
| P301 | CONNECTOR, POST | 376574 | 00779 | 3-87022-1 | 18 | | |
| Q301 | XSTR, SI, PNP | 340026 | 89536 | 340026 | 1 | 1 | |
| R301 | RES, COMP, 150 +/-5%, 1/4W | 147934 | 01121 | CB1515 | 3 | | |
| R302 | RES, COMP, 2.7K +/-5%, 1/4W | 170720 | 01121 | CB2725 | 1 | | |
| R303 | RES, COMP, 150 +/-5%, 1/4W | 147934 | 01121 | CB1515 | REF | | |
| R304 | RES, COMP, 15K +/-5%, 1/4W | 148114 | 01121 | CB1535 | 1 | | |
| R305 | RES, COMP, 150 +/-5%, 1/4W | 147934 | 01121 | CB1515 | REF | | |
| U301 | RESISTOR NETWORK | 461442 | 89536 | 461442 | 1 | | |
| U302 | IC, TTL, LO-POWER, DECODER DRIVER | 418632 | 01295 | SN74L47N | 1 | 1 | |

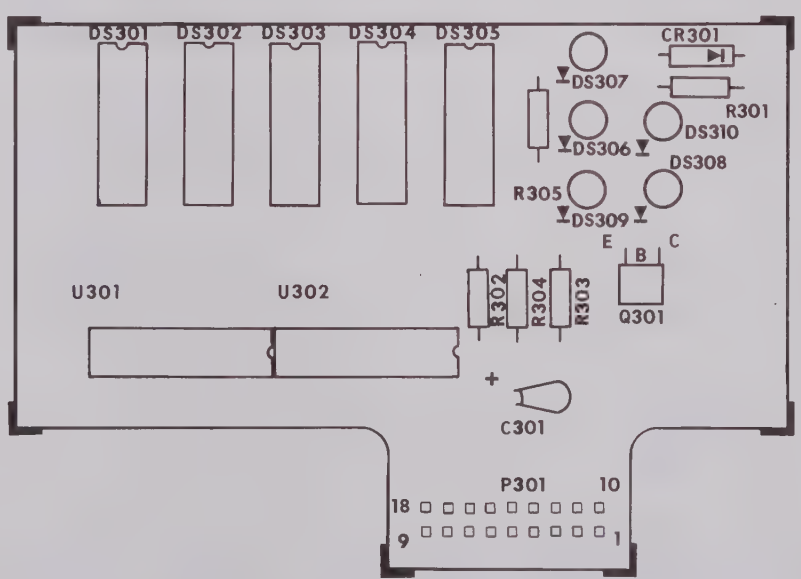


(8920A-1602)

Figure 5-3. A1A1 Display PCB Assembly

Table 5-4. A2 AC PCB Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| A2 | AC PCB ASSEMBLY<br>FIGURE 5-4 (8922A-4003) | ORDER | ONLY | REPLACEABLE PARTS | REF | | |
| C1 | CAP, POLYESTER, 0.022 UF +/-10%, 630V | 479519 | 73445 | C280MAG/A22K | 1 | | |
| C2 | CAP, PORC, 180 PF +/-5%, 1 KV | 474551 | 95275 | VY15CA181JA | 1 | | |
| C3 | CAP, PORC, 4.3 PF +/-0.25 PF, 1.7 KV | 479253 | 95275 | VY10CA4R3 | 1 | | |
| C4 | CAP, CER, 510 PF +/-5%, 100V | 460832 | 95275 | VK20BA511J | 1 | | |
| C5 | CAP, VAR, 1-5-0.25 PF, 2000V | 218206 | 72982 | 530-000 | 3 | | |
| C6 | CAP, CER, 39 PF +/-5%, 100V | 460824 | 95275 | VK20BA390J | 1 | | |
| C7 | CAP, CER, 5100 PF +/-5%, 100V | 460840 | 95275 | VK20BA512J | 1 | | |
| C8 | CAP, VAR, 5.5-18 PF, 350V | 460170 | 72982 | 538-002 | 1 | 1 | |
| C9 | CAP, VAR, 1.7-6 PF, 250V | 460147 | 91293 | 9300 | 1 | 1 | |
| C12 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | 8 | | |
| C13 | CAP, VAR, 1-5-0.25 PF, 2000V | 218206 | 72982 | 530-000 | REF | | |
| C14 | CAP, CER, 4.7 PF +/-0.25PF, 100V | 362772 | 80031 | 2222-638-09478 | 1 | | |
| C15 | CAP, CER, 50,000 PF -20/+80%, 25V | 148924 | 72892 | 5855-000-Y5UD-503Z | 4 | | |
| C16 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | 11 | | |
| C17 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | REF | | |
| C18 | CAP, TA, 1.0 UF +/-20%, 35A | 161919 | 56289 | 196D105X0035JA1 | 1 | | |
| C19 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | REF | | |
| C20 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C24 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C25 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | REF | | |
| C26 | CAP, CER, 68 PF +/-2%, 100V | 362756 | 80031 | 2222-631-10689 | 1 | | |
| C28 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C29 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C31 | CAP, CER, 0.22 UF +/-20%, 50V | 190314 | 51642 | 200-050-601-502M | 1 | | |
| C33 | CAP, VAR, 1-5-0.25 PF, 2000V | 218206 | 72982 | 530-000 | REF | | |
| C34 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C35 | CAP, CER, 50,000 PF -20/+80%, 25V | 148924 | 72892 | 5855-000-Y5UD-503Z | REF | | |
| C36 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | REF | | |
| C37 | CAP, CER, 33 PF +/-2%, 100V | 354852 | 80031 | 2222-638-10399 | 1 | | |
| C39 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C40 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C41 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | REF | | |
| C42 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C43 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C45 | CAP, TA, 82 UF +/-20%, 20V | 357392 | 56289 | 196D826X0020TE4 | 2 | | |
| C48 | CAP, TA, 82 UF +/-20%, 20V | 357392 | 56289 | 196D826X0020TE4 | REF | | |
| C49 | CAP, CER, 1000 PF +/-10%, 500V | 357806 | 56289 | C016B102G-102K | 2 | | |
| C50 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | REF | | |
| C51 | CAP, CER, 10,000 +/-20%, 100V | 149153 | 56289 | C023B101F103M | REF | | |
| C53 | CAPACITOR SET (C53, C55) | 463208 | 89536 | 463208 | 1 | | |
| C54 | CAP, CER, 1000 PF +/-10%, 500V | 357806 | 56289 | C016B102G-102K | REF | | |
| C55 | CAPACITOR SET (SEE C53) | | | | | | |
| C56 | CAP, TA, 10 UF +/-20%, 20V | 330662 | 56289 | 196D106X0020KA1 | REF | | |
| C57 | CAP, MYLAR, 0.027 UF +/-10%, 250V | 267120 | 73445 | C280MAE/A47K | 1 | | |
| C59 | CAP, CER, 50,000 PF -20/+80%, 25V | 148924 | 72892 | 5855-000-Y5UD-503Z | REF | | |
| C60 | CAP, CER, 50,000 PF -20/+80%, 25V | 148924 | 72892 | 5855-000-Y5UD-503Z | REF | | |
| C61 | CAP, CER, 0.0068 UF +/-5%, 100V | 512244 | 95275 | VK44BA6825 | 1 | | |

Table 5-4. A2 AC PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| C62 | CAP, CER, 0.025 UF +/-20%, 100V | 168435 | 56289 | C023B101H253M | 1 | | |
| CR1 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | 9 | 2 | |
| CR2 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR3 | DIODE, SI, LO-CAP, LO-LEAK | 348177 | 07263 | FD7223 | 2 | 1 | |
| CR4 | DIODE, SI, LO-CAP, LO-LEAK | 348177 | 07263 | FD7223 | REF | | |
| CR5 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR6 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR7 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR8 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR9 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR10 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| CR11 | DIODE, HI-SPEED SWITCH | 203323 | 07910 | IN4448 | REF | | |
| J106 | SOCKET, SINGLE IN-LINE, 4-POST CONTACT | 417311 | 30035 | SS-109-1-04 | 1 | | |
| K1 | COIL, REED RELAY | 446898 | 71707 | U20134 | 2 | | |
| | REED SWITCH | 284091 | 95348 | MR138 | 2 | | |
| K2 | COIL, REED RELAY | 446898 | 71707 | U20134 | REF | | |
| | REED SWITCH | 284091 | 95348 | MR138 | REF | | |
| MP183 | SPACER, XSTR MOUNTING | 472969 | 13103 | 7717-30 | 1 | | |
| MP187 | POST, CONTACT | 379438 | 00779 | 9-87022-1 | 3 | | |
| MP190 | THERMAL EQUALIZER | 489179 | 89536 | 489179 | 1 | | |
| MP202 | SHIELD, AC | 456830 | 89536 | 456830 | 1 | | |
| P101 | POST, CONTACT | 474742 | 22526 | 65500-109 | 3 | | |
| P102 | POST, CONTACT | 474742 | 22526 | 65500-109 | REF | | |
| P103 | POST, CONTACT | 474742 | 22526 | 65500-109 | REF | | |
| P104 | CONNECTOR, SOCKET | 386144 | 00779 | 3-332070-4 | 1 | | |
| P107 | POST, CONTACT | 417329 | 22526 | 65500-104 | 1 | | |
| Q1 | XSTR, SI, NPN, SELECTED | 471565 | 89536 | 471565 | 2 | 1 | 3 |
| Q2 | XSTR, SI, NPN, SELECTED | 471565 | 89536 | 471565 | REF | | 3 |
| Q3 | XSTR, FET, JCT, N-CHANNEL | 477448 | 89536 | 477448 | 1 | 1 | |
| Q4 | XSTR, FET, JCT, N-CHANNEL | 376475 | 89536 | 376475 | 7 | 2 | |
| Q5 | XSTR, FET, JCT, N-CHANNEL | 376475 | 89536 | 376475 | REF | | |
| Q6 | XSTR, FET, JCT, N-CHANNEL | 376475 | 89536 | 376475 | REF | | |
| Q8 | XSTR, SI, PNP | 453829 | 24355 | AD821 | 2 | 1 | |
| Q9 | DUAL FET/RESISTOR SET (Q9, R17) | 476788 | 89536 | 476788 | 1 | 1 | 2 |
| Q10 | XSTR, MATCHED SET (Q10, Q12, Q38, Q40) | 463133 | 89536 | 463133 | 1 | 1 | 1 |
| Q11 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | 10 | 2 | |
| Q12 | XSTR, MATCHED SET (SEE Q10) | | | | REF | | 1 |
| Q13 | XSTR, SI, NPN | 333898 | 04713 | MPSH10 | 7 | 1 | |
| Q14 | XSTR, SI, NPN | 333898 | 04713 | MPSH10 | REF | | |
| Q15 | XSTR, SI, PNP | 225599 | 12040 | 2N4250 | 2 | 1 | |
| Q16 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q17 | XSTR, SI, NPN | 333898 | 04713 | MPSH10 | REF | | |
| Q18 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q19 | XSTR, SI, NPN | 333898 | 04713 | MPSH10 | REF | | |
| Q20 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q21 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q23 | XSTR, SI, NPN | 218081 | 04713 | MPS6520 | 4 | 1 | |
| Q24 | XSTR, SI, PNP | 229898 | 04713 | MPS6522 | 4 | 1 | |
| Q25 | XSTR, SI, NPN | 218081 | 04713 | MPS6520 | REF | | |
| Q26 | XSTR, SI, PNP | 229898 | 04713 | MPS6522 | REF | | |

Table 5-4. A2 AC PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| Q28 | XSTR, FET, JCT, N-CHANNEL | 376475 | 89536 | 376475 | REF | | |
| Q29 | XSTR, FET, N-CHANNEL | 261578 | 89536 | 261578 | 2 | 1 | |
| Q31 | XSTR, FET, N-CHANNEL | 261578 | 89536 | 261578 | REF | | |
| Q32 | XSTR, FET, JCT, N-CHANNEL | 376475 | 89536 | 376475 | REF | | |
| Q33 | XSTR, FET, JCT, N-CHANNEL | 376475 | 89536 | 376475 | REF | | |
| Q36 | XSTR, SI, PNP | 453829 | 24355 | AD821 | REF | | |
| Q37 | DUAL FET/RESISTOR SET (Q37, R46) | | | | 1 | | 2 |
| Q38 | XSTR, MATCHED SET (SEE Q10) | | | | REF | | 1 |
| Q39 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q40 | XSTR, MATCHED SET (SEE Q10) | | | | REF | | 1 |
| Q41 | XSTR, SI, NPN | 333898 | 04713 | MPSH10 | REF | | |
| Q42 | XSTR, SI, PNP | 225599 | 12040 | 2N4250 | REF | | |
| Q43 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q44 | XSTR, SI, NPN | 333898 | 04713 | MPSH10 | REF | | |
| Q45 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q47 | XSTR, SI, NPN | 333898 | 04713 | MPSH10 | REF | | |
| Q48 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q49 | XSTR, SI, PNP | 454066 | 04713 | MPSH81 | REF | | |
| Q50 | XSTR, SI, NPN | 218081 | 04713 | MPS6520 | REF | | |
| Q51 | XSTR, SI, PNP | 229898 | 04713 | MPS6522 | REF | | |
| Q52 | XSTR, SI, NPN | 218081 | 04713 | MPS6520 | REF | | |
| Q53 | XSTR, SI, PNP | 229898 | 04713 | MPS6522 | REF | | |
| Q55 | XSTR, SI, NPN | 330803 | 04713 | MPS6560 | 1 | 1 | |
| Q56 | XSTR, SI, PNP | 418707 | 04713 | MPS6562 | 1 | 1 | |
| Q57 | XSTR, FET, JCT, N-CHANNEL | 376475 | 89536 | 376475 | REF | | |
| Q58 | XSTR, SI, NPN | 218396 | 04713 | 2N3904 | 1 | 1 | |
| Q59 | XSTR, FET, N-CHANNEL | 507780 | 89536 | 507780 | 1 | 1 | |
| R1 | RES, MTL. FILM, 1M +/-1%, 1/2W | 161075 | 91637 | CMF651004F | 1 | | |
| R2 | RES, PRECISION, FILM, 9.91M +/-1%, 1/2W | 460121 | 91637 | HFF1-9914F | 1 | | |
| R3 | RES, VAR, CER, 5K +/-10%, 1/2W | 327569 | 89536 | 327569 | 1 | | |
| R4 | RES, MTL. FILM, 96.5K +/-1%, 1/8W | 474478 | 91637 | CMF559652F | 1 | | |
| R5 | RES, VAR, 10 +/-20%, 1/2W | 479311 | 80031 | ET50W100 | 1 | | |
| R6 | RES, MTL. FILM, 1M +/-1%, 1/4W | 474486 | 91637 | CMF601004F | 1 | | |
| R7 | RES, VAR, CER, 500 +/-10%, 1/2W | 325613 | 89536 | 325613 | 1 | | |
| R8 | RES, MTL. FILM, 9.76K +/-0.5%, 1/8W | 474460 | 91637 | CMF559761D | 1 | | |
| R9 | RES, COMP, 15K +/-5%, 1/4W | 148114 | 01121 | CB1535 | 2 | | |
| R10 | RES, COMP, 100 +/-5%, 1/4W | 147926 | 01121 | CB1015 | 5 | | |
| R11 | RES, COMP, 15K +/-5%, 1/4W | 148114 | 01121 | CB1535 | REF | | |
| R12 | RES, CERMET, 9.09M +/-1%, 1/4W | 459875 | 89536 | 459875 | 1 | | |
| R13 | RES, MTL. FILM, 19.1 +/-0.5%, 1/8W | 494286 | 91637 | CMF5519R1D | 2 | | |
| R14 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | 8 | | |
| R15 | RES, COMP, 6.2M +/-5%, 1/4W | 221960 | 01121 | CB6255 | 2 | | |
| R16 | RES, COMP, 22M +/-5%, 1/4W | 221986 | 01121 | CB2265 | 1 | | |
| R17 | RESISTOR/DUAL FET SET (SEE Q9) | | | | REF | | |
| R18 | RESISTOR SET (R18, R35, R65, R79) | 463182 | 89536 | 463133 | 1 | 1 | |
| R19 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R20 | RES, COMP, 510 +/-5%, 1/4W | 218032 | 01121 | CB5115 | 3 | | |
| R21 | RES, COMP, 390 +/-5%, 1/4W | 147975 | 01121 | CB3915 | 4 | | |
| R22 | RES, COMP, 8.2K +/-5%, 1/4W | 160796 | 01121 | CB8225 | 2 | | |
| R23 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | 2 | | |

Table 5-4. A2 AC PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| R25 | RES, MTL. FILM, 499K +/-1%, 1/8W | 268813 | 91637 | CMF554993F | 3 | | |
| R26 | RES, VAR, CER, 100K +/-10%, 1/2W | 369520 | 89536 | 369520 | 2 | | |
| R27 | RES, COMP, 390 +/-5%, 1/4W | 147975 | 01121 | CB3915 | REF | | |
| R28 | ZENER RESISTOR SET (R28/VR3) | 515197 | 89536 | 515197 | 1 | 1 | |
| R29 | RES, COMP, 100 +/-5%, 1/4W | 147926 | 01121 | CB1015 | REF | | |
| R30 | RES, COMP, 100 +/-5%, 1/4W | 147926 | 01121 | CB1015 | REF | | |
| R31 | RES, MTL. FILM, 8.06K +/-1%, 1/8W | 294942 | 91637 | CMF558061F | 1 | | |
| R33 | RES, COMP, 33 +/-5%, 1/4W | 175034 | 01121 | CB3305 | 4 | | |
| R34 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R35 | RESISTOR SET (SEE R18) | | | | REF | | |
| R36 | RES, MTL. FILM, 619 +/-1%, 1/8W | 313072 | 91637 | CMF556190F | 4 | | |
| R38 | RES, MTL. FILM, 619 +/-1%, 1/8W | 313072 | 91637 | CMF556190F | REF | | |
| R39 | RES, COMP, 33 +/-5%, 1/4W | 175034 | 01121 | CB3305 | REF | | |
| R40 | RES, COMP, 820 +/-5%, 1/4W | 148015 | 01121 | CB8215 | 2 | | |
| R41 | RES, COMP, 22K +/-5%, 1/4W | 148130 | 01121 | CB2235 | 2 | | |
| R42 | RES, COMP, 160 +/-5%, 1/4W | 261859 | 01121 | CB1615 | 2 | | |
| R44 | RES, VAR, CER, 50 +/-10%, 1/2W | 447862 | 89569 | 447862 | 1 | | |
| R45 | RES, MTL. FILM, 121 +/-1%, 1/8W | 343160 | 91637 | CMF551210F | 1 | | |
| R46 | RESISTOR/DUAL FET SET (SEE Q37) | | | | REF | | |
| R47 | RES, COMP, 300 +-5%, 1/4W | 348276 | 01121 | CB3015 | 4 | | |
| R48 | RES, COMP, 18 +/-5%, 1/4W | 219022 | 01121 | CB1805 | 4 | | |
| R49 | RES, COMP, 18 +/-5%, 1/4W | 219022 | 01121 | CB1805 | REF | | |
| R50 | RES, COMP, 300 +-5%, 1/4W | 348276 | 01121 | CB3015 | REF | | |
| R51 | RES, MTL. FILM, 442 +/-1%, 1/8W | 474452 | 91637 | CMF554420F | 1 | | |
| R52 | RES, MTL. FILM, 243 +/-1%, 1/8W | 512228 | 91637 | CMF552430F | 1 | | |
| R53 | RES, MTL. FILM, 33.2 +/-1%, 1/8W | 296681 | 91637 | CMF5533R2F | 1 | | |
| R54 | RES, COMP, 1K +/-5%, 1/4W | 148023 | 01121 | CB1025 | 2 | | |
| R55 | RES, MTL. FILM, 20 +/-0.5%, 1/8W | 494286 | 91637 | CMF5519R1D | REF | | |
| R56 | RESISTOR PAIR (R56 & R57) | 467662 | 89536 | 467662 | 1 | 1 | |
| R57 | RESISTOR PAIR (SEE R56) | | | | REF | | |
| R58 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R59 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R60 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R62 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R63 | RES, COMP, 6.2M +/-5%, 1/4W | 221960 | 01121 | CB6255 | REF | | |
| R65 | RESISTOR SET (SEE R18) | | | | REF | | |
| R66 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R67 | RES, COMP, 510 +/-5%, 1/4W | 218032 | 01121 | CB5115 | REF | | |
| R68 | RES, MTL. FILM, 3.48K +/-1%, 1/8W | 260687 | 91637 | CMF553481F | 1 | | |
| R69 | RES, COMP, 100 +/-5%, 1/4W | 147926 | 01121 | CB1015 | REF | | |
| R70 | RES, COMP, 33 +/-5%, 1/4W | 175034 | 01121 | CB3305 | REF | | |
| R71 | RES, MTL. FILM, 499K +/-1%, 1/8W | 268813 | 91637 | CMF554993F | REF | | |
| R72 | RES, VAR, CER, 100K +/-10%, 1/2W | 369520 | 89536 | 369520 | REF | | |
| R73 | RES, COMP, 390 +/-5%, 1/4W | 147975 | 01121 | CB3915 | REF | | |
| R74 | RES, COMP, 8.2K +/-5%, 1/4W | 160796 | 01121 | CB8225 | REF | | |
| R75 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | REF | | |
| R76 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R77 | RES, COMP, 390 +/-5%, 1/4W | 147975 | 01121 | CB3915 | REF | | |
| R78 | RES, MTL. FILM, 619 +/-1%, 1/8W | 313072 | 91637 | CMF556190F | REF | | |
| R79 | RESISTOR SET (SEE R18) | | | | REF | | |

Table 5-4. A2 AC PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| R80 | RES, COMP, 100 +/-5%, 1/4W | 147926 | 01121 | CB1015 | REF | | |
| R82 | RES, COMP, 820 +/-5%, 1/4W | 148015 | 01121 | CB8215 | REF | | |
| R83 | RES, MTL. FILM, 619 +/-1%, 1/8W | 313072 | 91637 | CMF556190F | REF | | |
| R84 | RES, COMP, 22K +/-5%, 1/4W | 148130 | 01121 | CB2235 | REF | | |
| R85 | RES, COMP, 33 +/-5%, 1/4W | 175034 | 01121 | CB3305 | REF | | |
| R86 | RES, COMP, 160 +/-5%, 1/4W | 261859 | 01121 | CB1615 | REF | | |
| R87 | RES, COMP, 300 +-5%, 1/4W | 348276 | 01121 | CB3015 | REF | | |
| R88 | RES, COMP, 300 +-5%, 1/4W | 348276 | 01121 | CB3015 | REF | | |
| R89 | RES, COMP, 18 +/-5%, 1/4W | 219022 | 01121 | CB1805 | REF | | |
| R90 | RES, COMP, 18 +/-5%, 1/4W | 219022 | 01121 | CB1805 | REF | | |
| R91 | RES, MTL. FILM, 1K +/-1%, 1/8W | 474445 | 91637 | CMF551001F | 1 | | |
| R92 | RES, MTL. FILM, 49.9 +/-0.1% | 512236 | 91637 | CMF5549R9B | 1 | | |
| R93 | RES, MTL. FILM, 7.50K +/-1%, 1/8W | 223529 | 91637 | CMF557501F | 1 | | |
| R94 | RES, MTL. FILM, 51.1K +/-1%, 1/8W | 289553 | 91637 | CMF555112F | 1 | | |
| R95 | RES, COMP, 1K +/-5%, 1/4W | 148023 | 01121 | CB1025 | REF | | |
| R96 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R97 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R98 | RES, MATCHED PAIR (R98, R106) | 458299 | 89536 | 458299 | 1 | 1 | |
| R99 | RES, MTL. FILM, 20.5K +/-1%, 1/8W | 261669 | 91637 | CMF552052F | 2 | | |
| R100 | RES, MTL. FILM, 499K +/-1%, 1/8W | 268813 | 91637 | CMF554993F | REF | | |
| R101 | RES, VAR, CER, 10K +/-10%, 1/2W | 309674 | 89536 | 309674 | 2 | | |
| R102 | RES, MTL. FILM, 357K +/-1%, 1/8W | 235002 | 91637 | CMF553573F | 1 | | |
| R103 | RES, MTL. FILM, 110K +/-1%, 1/8W | 234708 | 91637 | CMF551103 | 1 | | |
| R104 | RES, MTL. FILM, 20.5K +/-1%, 1/8W | 261669 | 91637 | CMF552052F | REF | | |
| R105 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R106 | RES, MATCHED PAIR (SEE R98) | | | | REF | | |
| R107 | RES, MTL. FILM, 82.5K +/-1%, 1/8W | 246223 | 91637 | CMF558252F | 2 | | |
| R108 | RES, MTL. FILM, 82.5K +/-1%, 1/8W | 246223 | 91637 | CMF558252F | REF | | |
| R109 | RES, MTL. FILM, 2K +/-1%, 1/8W | 235226 | 91637 | CMF552001F | 1 | | |
| R110 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R114 | RES, COMP, 510 +/-5%, 1/4W | 218032 | 01121 | CB5115 | REF | | |
| R115 | RES, MTL. FILM, 14.3K +/-1%, 1/8W | 291617 | 91637 | CMF551432F | 1 | | |
| R117 | RES, MTL. FILM, 1K +/-1%, 1/8W | 168229 | 91637 | CMF551001F | 1 | | |
| R118 | RES, COMP, 150K +/-5%, 1/4W | 275685 | 01121 | CB1545 | 1 | | |
| R119 | RES, COMP, 270K +/-5%, 1/4W | 220061 | 01121 | CB2745 | 1 | | |
| R120 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R121 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R122 | RES, COMP, 10M +/-5%, 1/4W | 194944 | 01121 | CB1065 | 1 | | |
| R123 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R124 | RESISTOR (SEE FINAL ASSEMBLY TABLE 5-1) | | | | | | |
| R125 | RES, COMP, 100K +/-5%, 1/4W | 148189 | 01121 | CB1045 | 2 | | |
| R126 | RES, COMP, 100K +/-5%, 1/4W | 148189 | 01121 | CB1045 | REF | | |
| R127 | RES, VAR 150K +/-10%, 1/2W | 519199 | 11236 | 360T-154A | 1 | | |
| R128 | RES COMP, 5.6M +/-5%, 1/4W | 358077 | 01121 | CB5655 | 1 | | |
| R129 | RES, COMP, 5.1K +/-5%, 1/4W | 193342 | 01121 | CB5125 | 1 | | |
| R130 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| U1 | RMS SENSOR | 433839 | 89536 | 433839 | 1 | 1 | |
| U2 | IC OP AMP, J-FET | 357830 | 12040 | LH0042C | 1 | 1 | |
| U3 | IC, LINEAR, OP AMP | 418566 | 18324 | LM358/CR3999 | 2 | | |
| U4 | IC, LINEAR, OP AMP | 418566 | 18324 | LM358/CR3999 | REF | | |

Table 5-4. A2 AC PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| U5 | IC, LINEAR, 5-XSTR ARRAY | 248906 | 02735 | CA3046 | 1 | 1 | |
| VR1 | DIODE, ZENER, 5.6V | 277236 | 07910 | IN752A | 2 | 1 | |
| VR2 | DIODE, ZENER, 5.6V | 277236 | 07910 | IN752A | REF | | |
| VR3 | PART OF ZENER RESISTOR SET (SEE R28) | | | | REF | | |
| VR4 | DIODE, ZENER 13V | 110726 | 07910 | IN964B | 1 | 1 | |
| XR18 | SOCKET, IN-LINE, 5-PIN (NOT SHOWN) | 417899 | 52072 | CA-05S-TSD | 2 | | |
| XR35 | SOCKET, IN-LINE, 5-PIN (NOT SHOWN) | 417899 | 52072 | CA-05S-TSD | REF | | |
| XR65 | SOCKET, IN-LINE, 9-PIN (NOT SHOWN) | 436774 | 52072 | CA-09S-TSD | 2 | | |
| XR79 | SOCKET, IN-LINE, 9-PIN (NOT SHOWN) | 436774 | 52072 | CA-09S-TSD | REF | | |

1 IF ANY ONE OF THE FOUR MATCHED XSTRS ARE DAMAGED ALL FOUR WILL HAVE TO BE REPLACED AND THE DC OFFSET RESISTORS FOR AMP-A AND AMP-B WILL HAVE TO BE RESELECTED. THEREFORE, IT WILL BE NECESSARY TO ORDER TWO RESISTOR SETS. SEE SECT. 4 "DC OFFSET RESISTOR SELECTION".

2 IF THIS PART IS REPLACED, THE DC OFFSET RESISTOR FOR THE CORRESPONDING AMPLIFIER (AMP-A, AMP-B) MAY HAVE TO BE RESELECTED. SEE SECT. 4 "DC OFFSET RESISTOR SELECTION". (Q9 AND R17, Q37 AND R46) MATCHED PAIRED SETS, PART NUMBER 476700.

3 Q1, AND Q2, XSTR MUST BE COLOR MATCHED.

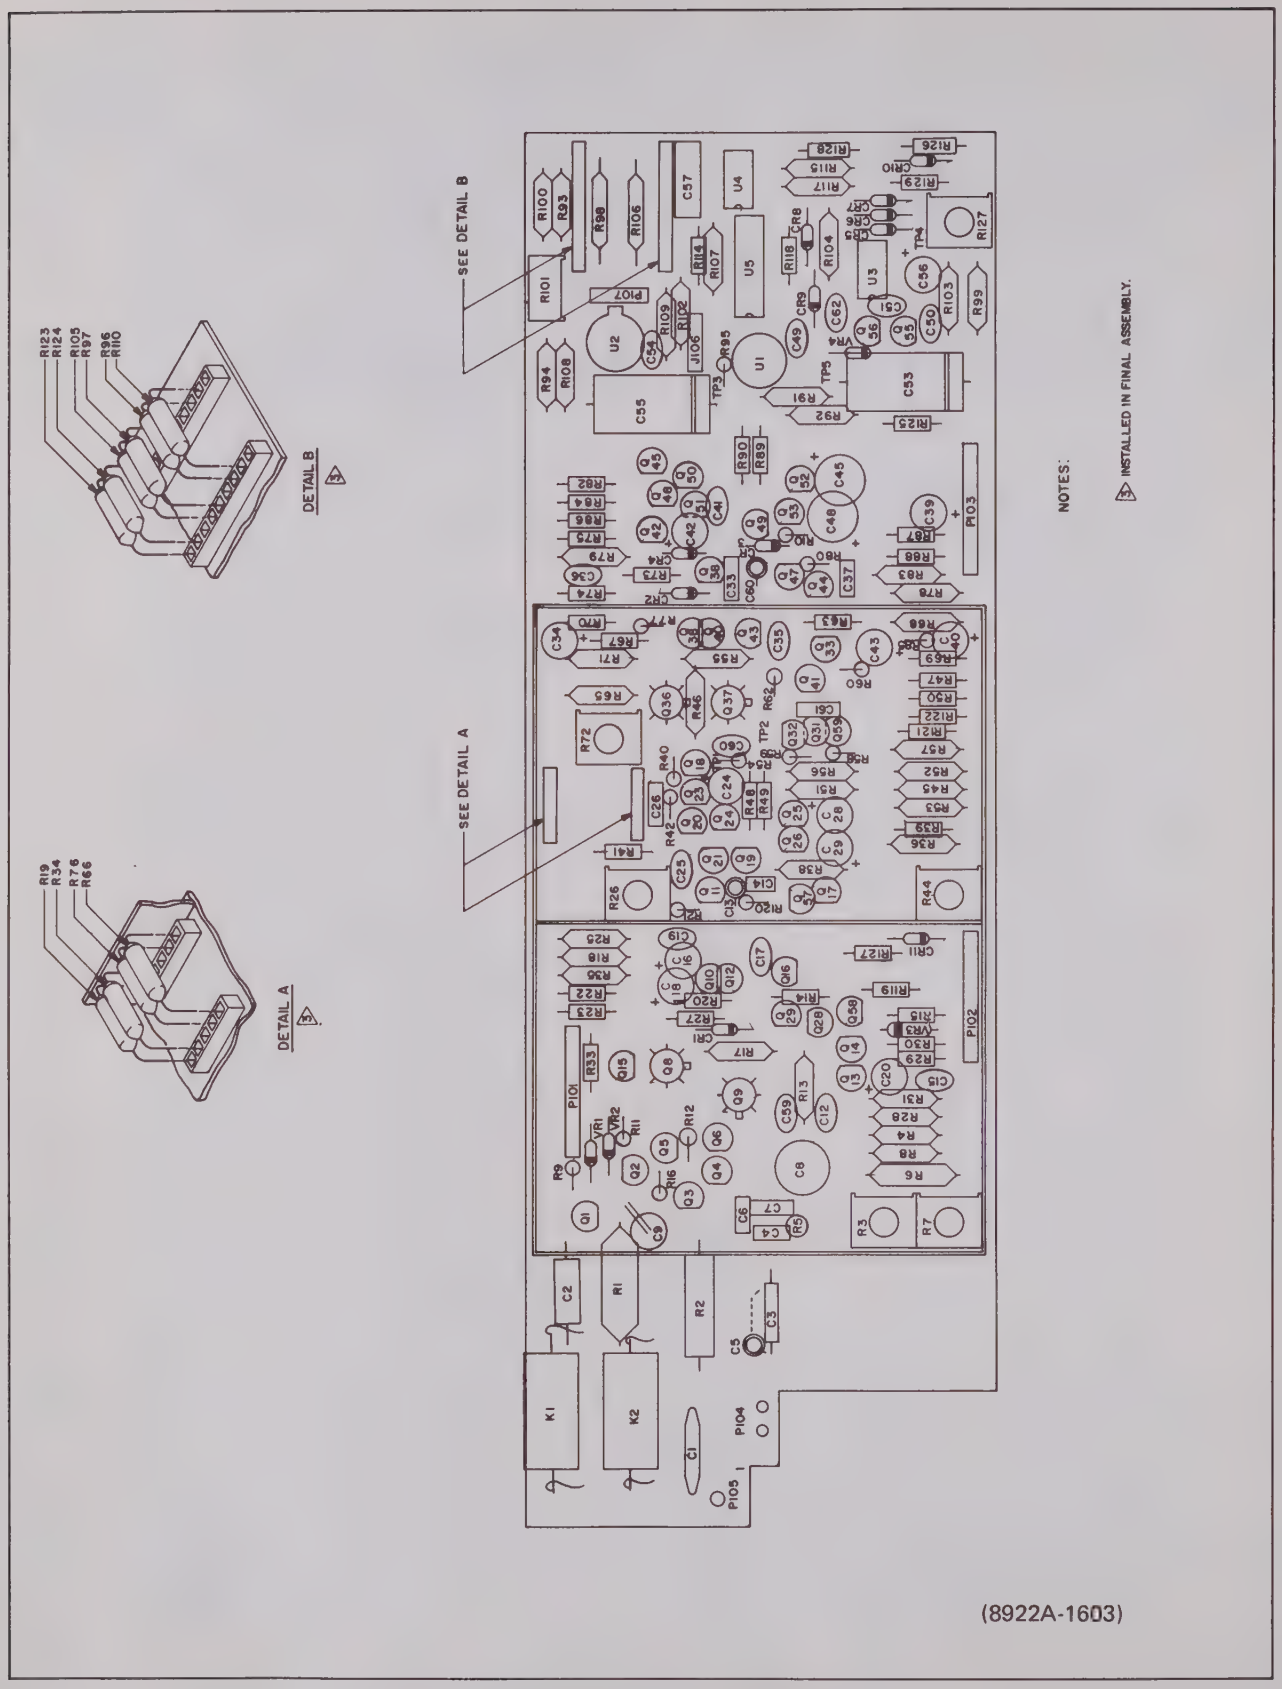


Figure 5-4. A2 AC PCB Assembly

# Section 6
# Option & Accessory Information

## TABLE OF CONTENTS


| OPTION/ MODEL NO. | DESCRIPTION | PAGE |
|---|---|---|
| | ACCESSORIES | |
| Y2014 | Offset-Right Rack Mount | 600-1 |
| Y2015 | Double Offset Rack Mount | 600-1 |
| Y2020 | Panel Mount (DIN size) | 600-1 |
| | OPTIONS | |
| 8922A-003 | Counter Output | 603-1 |
| 8922A-004 | Logarithmic Analog Output | 604-1 |
| 8922A-521 | DMM Digital Interface | 6521-1 |
| 8922A-529 | DMM-IEEE-488 Interface | 6529-1 |

## 6-1. INTRODUCTION

6-2. This section of the manual contains information concerning the options and accessories available for use with the Model 8922A. This section consists of an introductory section, an accessories subsection and a series of option subsections. All options and accessories are listed by model or option number in the table of contents included in this section.

## 6-3. ACCESSORIES

6-4. Hardware type accessories, i.e., rack mounting kits and cables, are documented in the accessories subsection. While option numbers (-003, -004) are documented as individual subsections. Each subsection contains all of the information necessary to install, operate and maintain each option and accessory. This includes a list of replaceable parts and a schematic (when applicable).

## 6-5. OPTIONS

6-6. The location of a particular subsection is facilitated by the use of unique page and paragraph numbering which corresponds to the option or accessory in question. For example, a 600-X series identifies the general accessories subsection and a 604-X series identifies the subsection for the -004 Option (where X is the individual page or paragraph number).

# Accessories

## 600-1. RACK MOUNTING KITS

600-2. Kits are available that allow your DVM to be mounted either in a standard 19-inch equipment rack or panels with DIN size openings. The Y2014 allows one instrument to be offset-mounted on the right side in a 19-inch equipment rack (Figure 600-1). The Y2015 allows two instruments to be mounted side-by-side in a 19-inch equipment rack (Figure 600-2). The Y2020 allows one instrument to be panel mounted in a DIN size opening. With the appropriate mounting kit installed, you can easily remove your DVM for portable operation and easily mount the DVM back in the permanent installation.

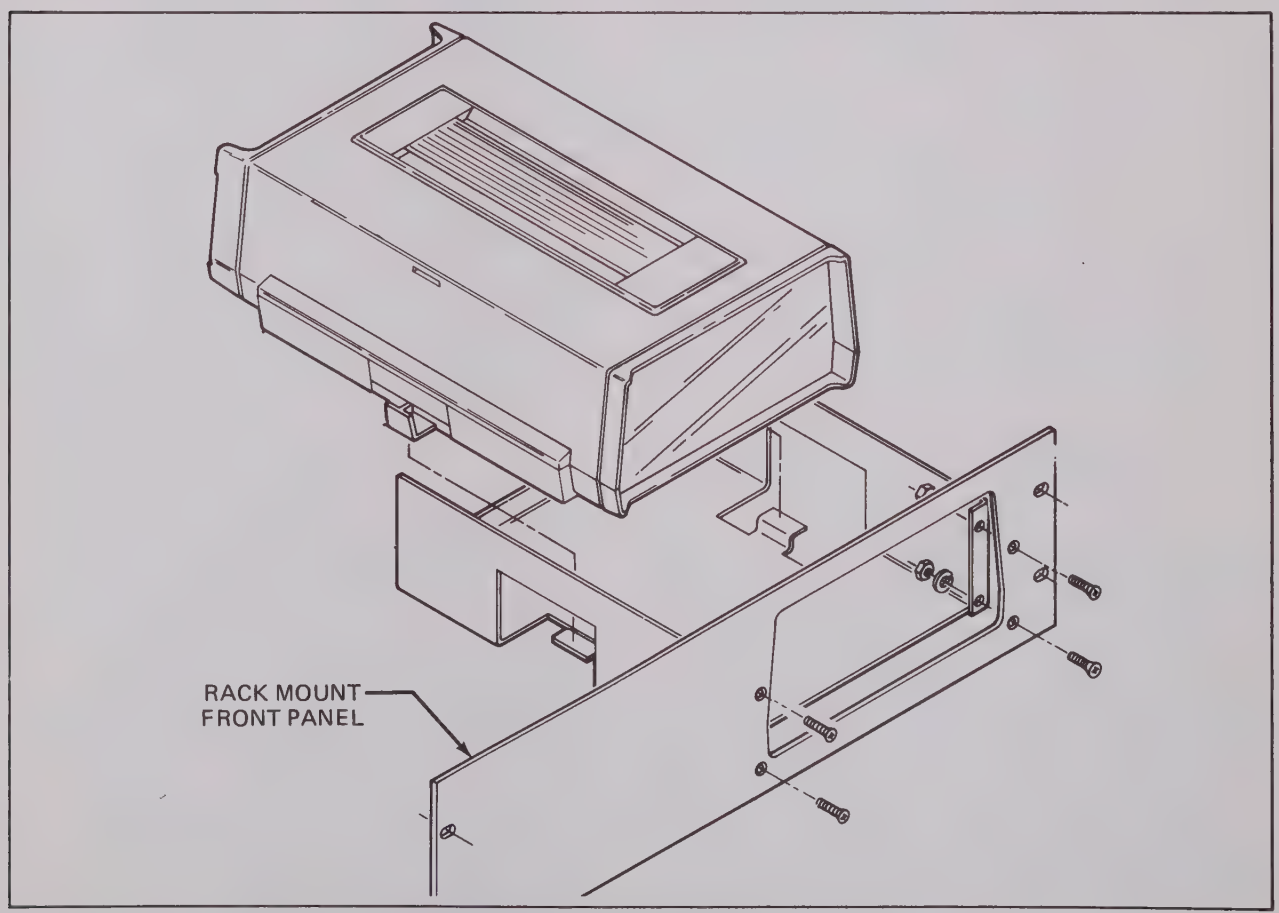


**Figure 600-1. Y2014 Offset-Right Rack Mount**

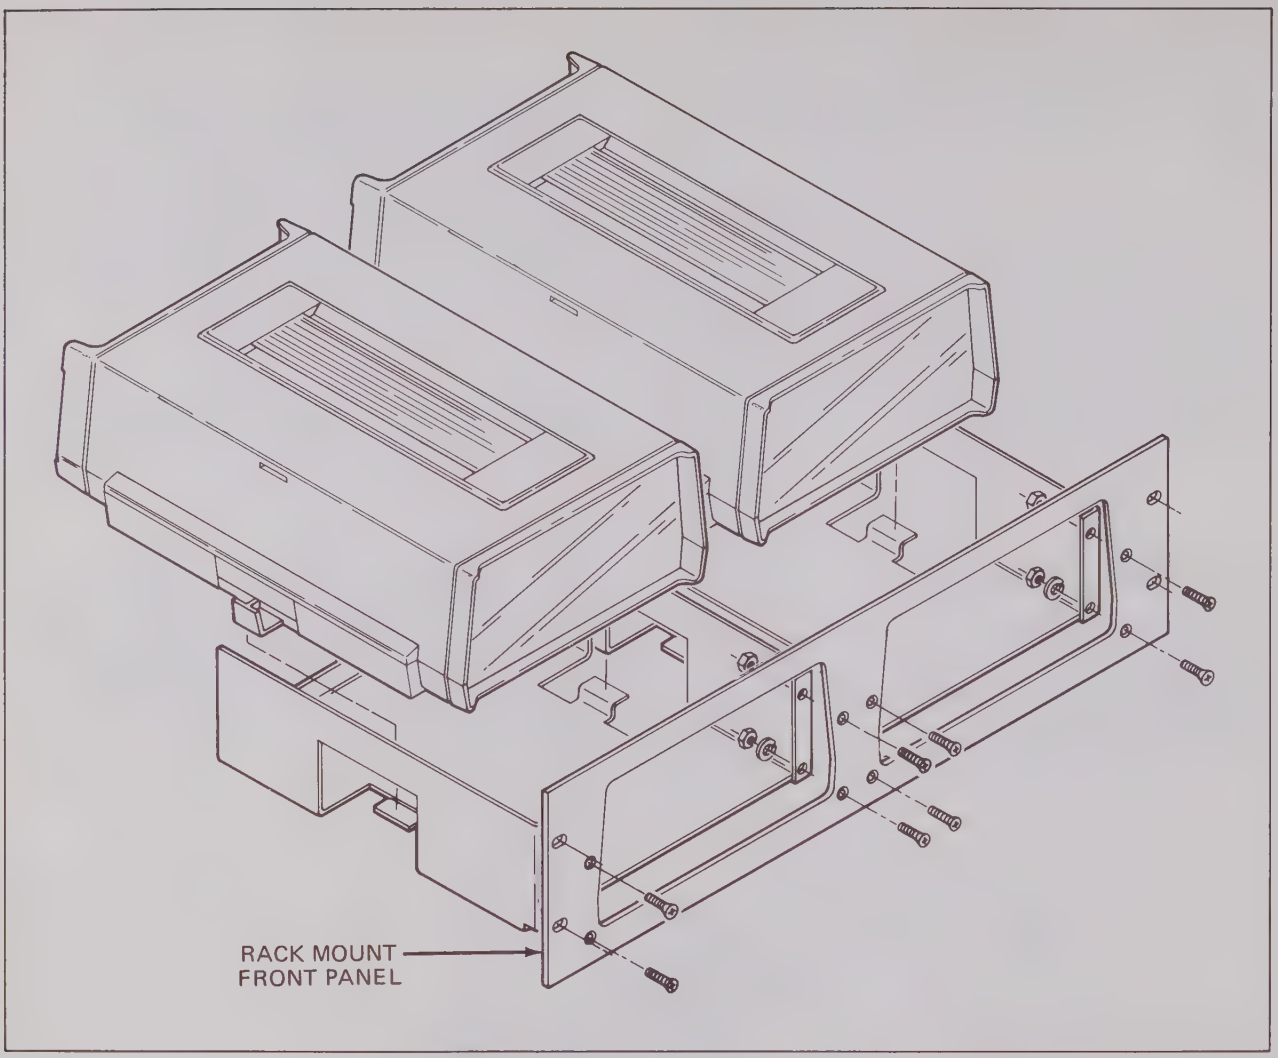


**Figure 600-2. Y2015 Double Offset Rack Mount**

# -003 Option
# Counter Output

## 603-1. INTRODUCTION

603-2. The -003 Counter Output Option converts an rms input signal into an isolated 100 mV peak, squarewave suitable for triggering a counter. There are several advantages as opposed to using separate inputs for the DVM and the counter. First, the 8922A autoranged input has a much greater dynamic range than a counter. This means that input sensitivity is increased to 180 $\mu$V while, on the other hand, DVM inputs as large as 700V rms will not overload the counter. In practice, inputs should be 1.8 mV or greater due to possible false triggering effects of noise riding on lower level inputs. Secondly, because the counter output is isolated, the diode isolation from earth ground is not defeated if the counter low input is earth ground. Third, only one probe is needed to make simultaneous voltage and frequency measurements.

## 603-3. SPECIFICATIONS

603-4. Specifications for the Counter Output Option are given in Section 1 of this manual.

## 603-5. INSTALLATION

603-6. Use the following procedure to install the Counter Output Option. Refer to Figure 603-1 for illustration.

1. Remove 8922A top cover (see Access Information).

2. Plug Counter Output Option into J106-1, J106-3 of the A2 AC PCB Assembly and mechanically secure with the three screws provided; one on the AC Assy shield and two on the rear panel.

3. Connect the 3-wire cable (P401) to J401 on the A1 Main PCB Assembly.

4. Verify operation using the calibration procedure.

5. Replace the shields.

## 603-7. OPERATION

603-8. Once installed, the Counter Output Option requires no operator attention other than ensuring that no voltage is ever applied to the option's rear panel BNC output (J102).

## 603-9. THEORY OF OPERATION

603-10. As shown in Figure 603-2, the Counter Output Option utilizes an isolation amplifier, two Schmitt triggers, pulse transformer, and a DC-DC power supply to provide an isolated output suitable for triggering a counter. The isolation amp is used as a buffer between amplifier B's output and the first Schmitt trigger. The Schmitt trigger drives the pulse transformer with a square wave at the same frequency as the sine wave input. The pulse transformer provides isolation between the input common and output common. The second Schmitt trigger is used to convert the pulse transformer output to the 100 mV square wave output at the same frequency as the sine wave input. The DC-DC power supply provides isolated +5.3V and -6.5V for the second Schmitt trigger.

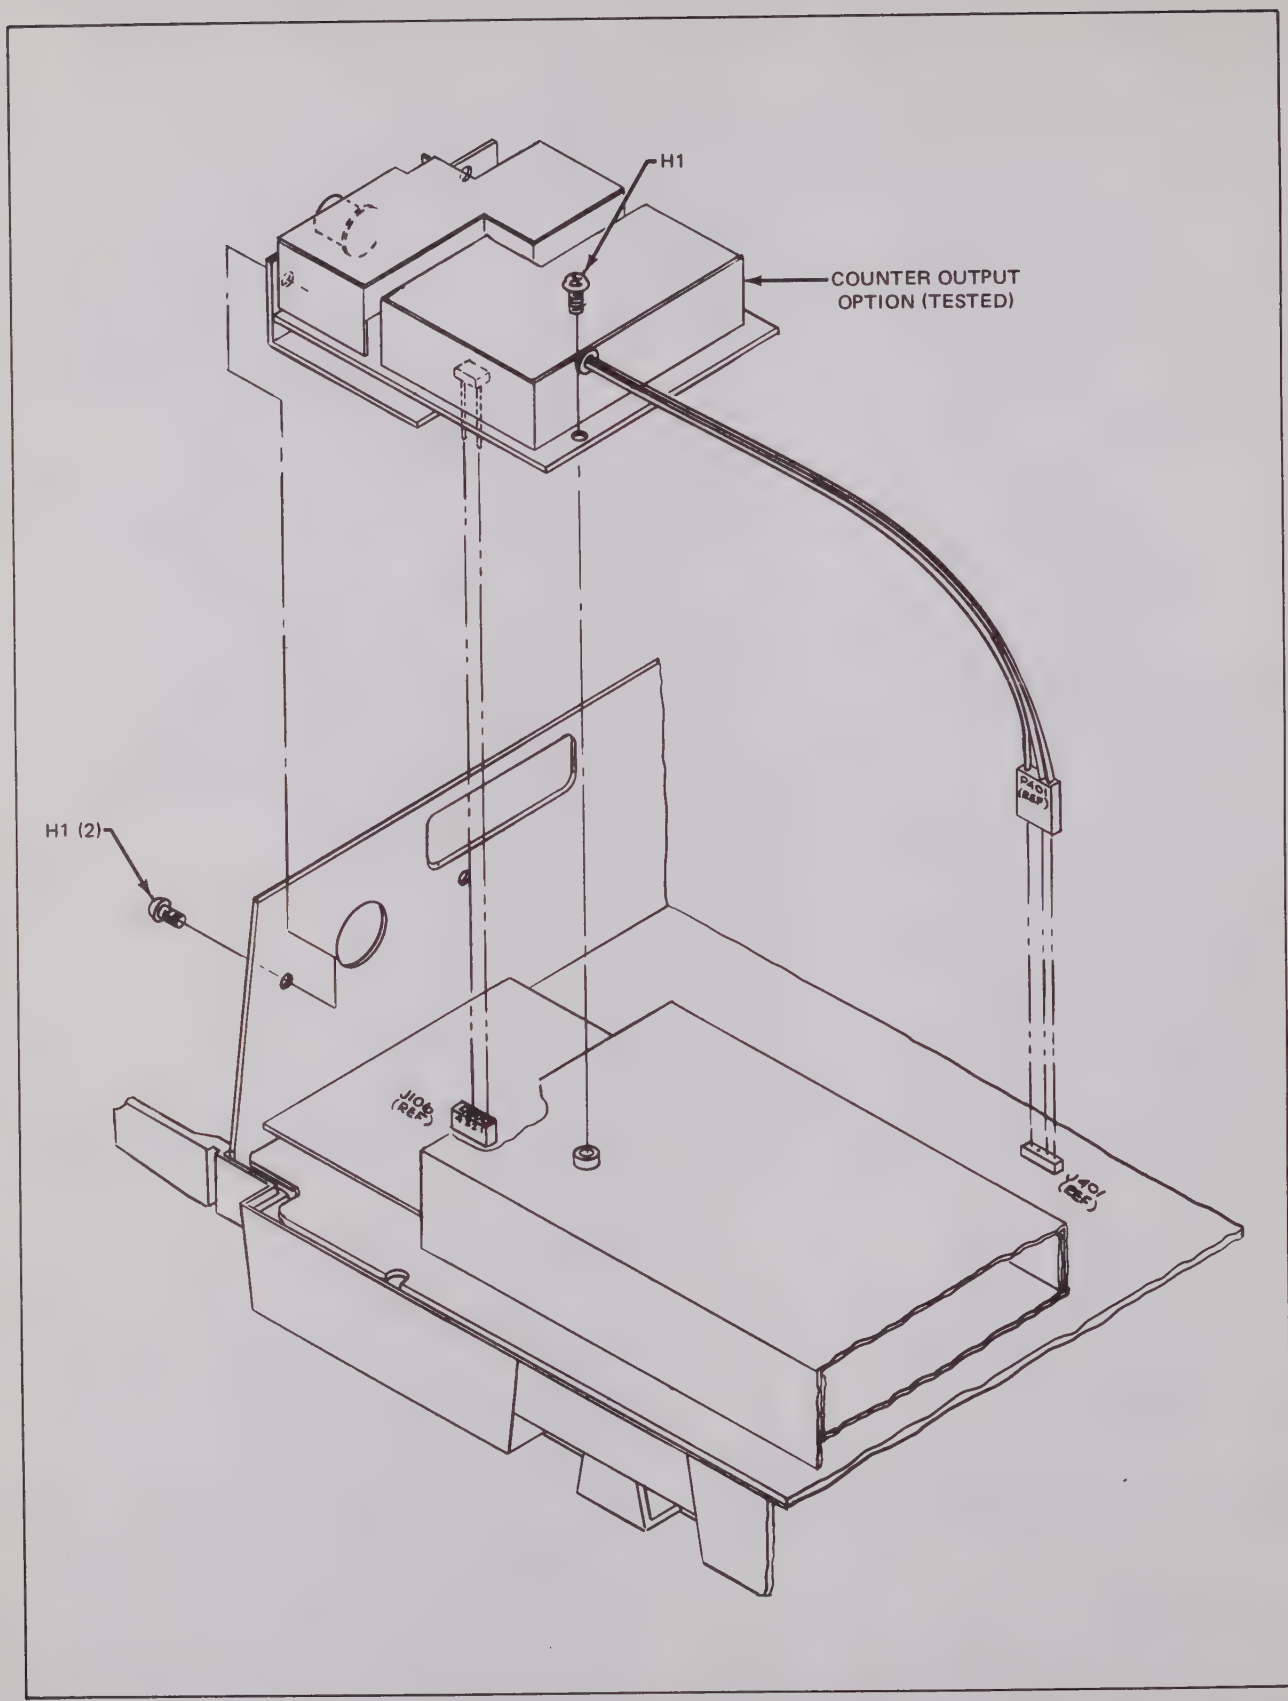


**Figure 603-1. Counter Output Option Installation**

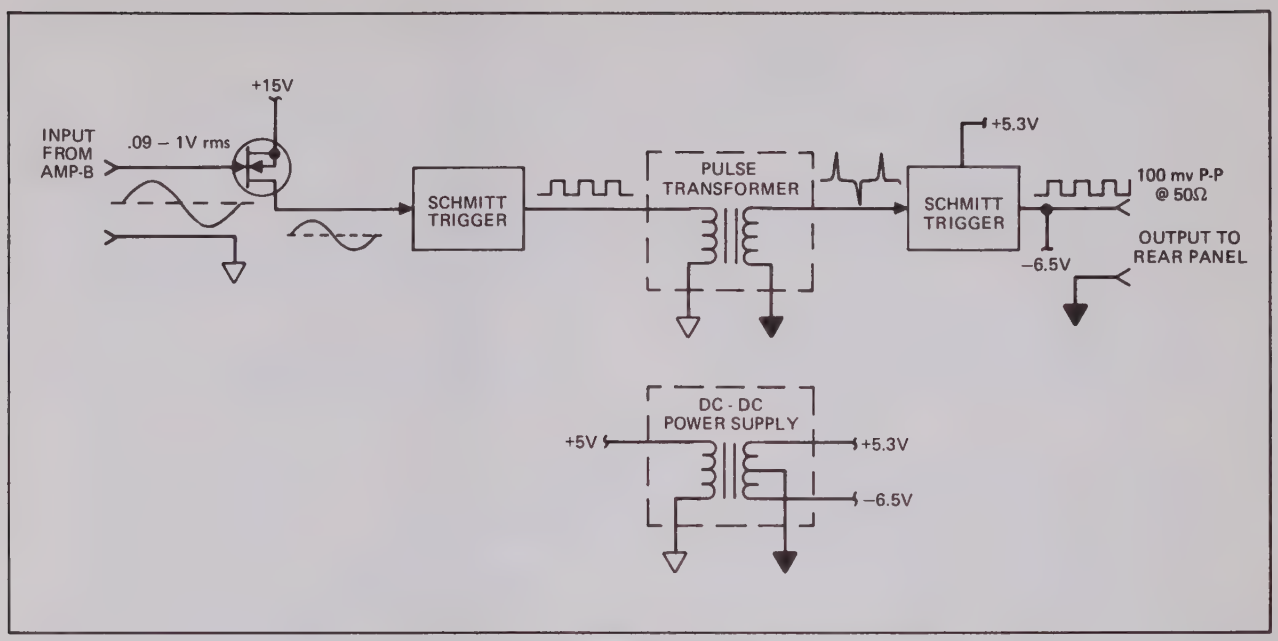


**Figure 603-2. Counter Output Option Simplified Schematic**

## 603-11. MAINTENANCE

603-12. The following maintenance information covers three areas; performance testing, calibration and troubleshooting of the -003 Counter Output Option. However, before any of these procedures can be started, the calibration of the mainframe instrument (8922A) must be successfully completed. The table of recommended test equipment in Section 4 lists all of the equipment necessary to calibrate, adjust, and troubleshoot the mainframe instrument. Any additional equipment required to check and calibrate the -003 Option is listed in Table 603-1. If you are unable to obtain the recommended test equipment, insure that the substitute has equal or better performance specifications.

*NOTE*

*For the following procedures the 8922A will be referred to as the UUT (Unit Under Test).*

**Table 603-1. Recommended Test Equipment**

| QTY | EQUIPMENT NOMENCLATURE | REQUIREMENT | RECOMMENDED EQUIPMENT |
|---|---|---|---|
| 1 | Universal Counter Timer | 100 Hz-20 MHz | Fluke 1953A |
| 2 | Oscilloscope | DC to 200 MHz 1.8 ns | Tektronix 475 |

## 603-13. Performance Test

603-14. The following procedure will verify that the Counter Output Option is operating within the specification limits stated in Section 1.

1. Connect the AC calibrator, UUT, oscilloscope and termination as shown in Figure 603-3.

2. Set the AC calibrator to its 10V range, set the UUT to AC FUNCTION, VOLTS DISPLAY MODE, and 2V range, HOLD and set the oscilloscope's time base to 0.2 sec/div and Vert on 50 mV/div.

3. Referring the Table 603-2, change input to UUT as indicated, and note that display values are within indicated tolerances.

4. Disassemble the setup as shown in Figure 603-3, and connect the SG503, UUT, and Universal Counter-Timer and terminations, as shown in Figure 603-4.

5. Set the SG503 to its 10-25 MHz range, set the Universal Counter-Timer for frequency ratio measurement with 10 sec gate interval, and the UUT set to AC FUNCTION, VOLTS DISPLAY MODE, and 200 MV RANGE HOLD.

6. Referring to Table 603-3, change input to UUT as indicated, and note that display values are within indicated tolerances.

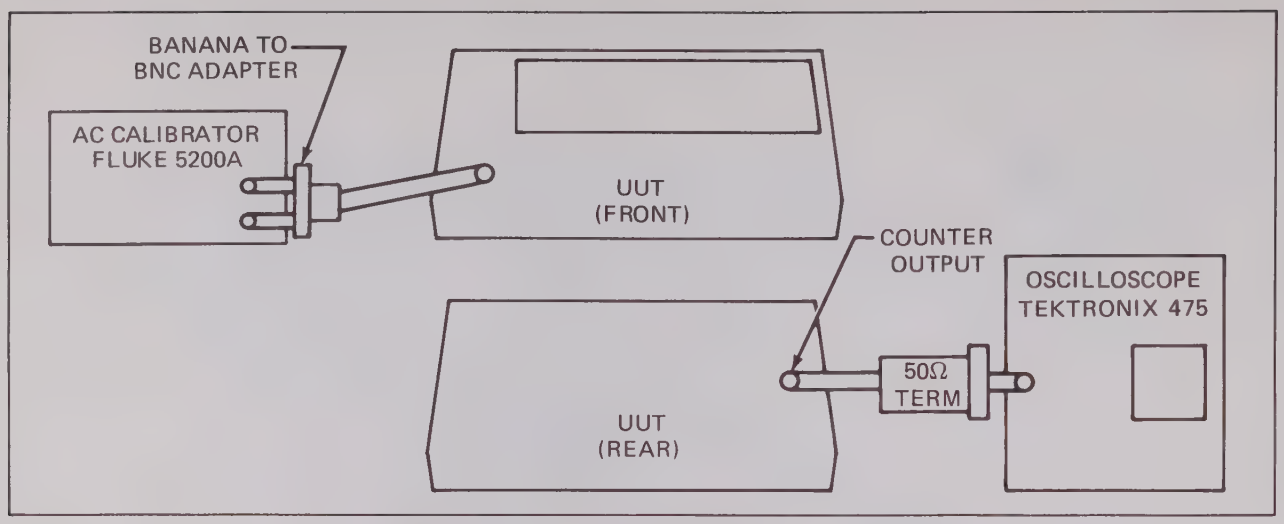


Figure 603-3. Counter Output Performance Set-Up

Table 603-2. Counter Output Amplitude

| AC CALIBRATOR OUTPUT | UUT DISPLAY | OSCILLOSCOPE DISPLAY ±20% | COMMENTS |
|---|---|---|---|
| 1.9V, 1 kHz | 1.900 | Observe 100 mV squarewave | Adjust calibrator output to obtain UUT display. |
| 0.18V, 1 kHz | .180 | Observe 100 mV squarewave | Adjust calibrator output to obtain UUT display. |

Table 603-3. Counter Output Frequency Response

| SG503 OUTPUT | UUT DISPLAY | COUNTER-TIMER DISPLAY ±1 DIGIT | COMMENTS |
|---|---|---|---|
| 18 mV, 20 MHz | 18.0 | 1.00000 | Adjust the SG503 output to obtain UUT display. |
| 180 mV, 20 MHz | 180.0 | 1.00000 | Adjust the SG503 output to obtain UUT display. |

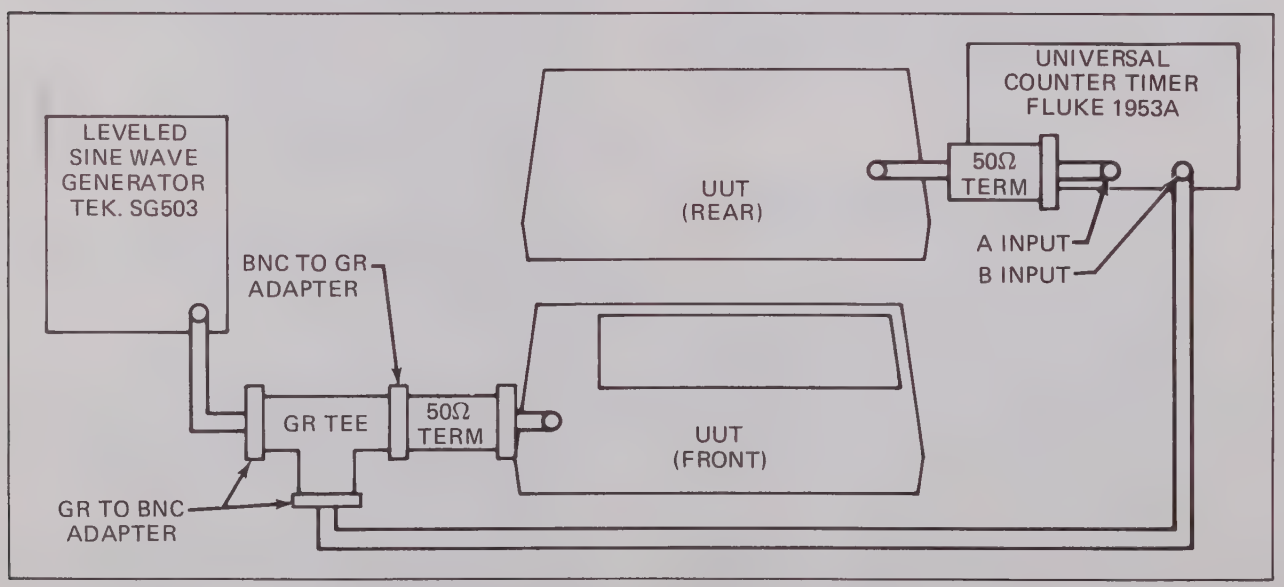


Figure 603-4. Counter Output Performance Test Set-Up

## 603-15. CALIBRATION ADJUSTMENT

603-16. The Counter Output Option should be adjusted when it is first installed or if the limits, as stated in the performance test, cannot be met. Use the following procedure to calibrate the Counter Output Option. If it is not possible to obtain the limits as stated in the following procedure, then the option will require troubleshooting. If, however, the limits are met, then we recommend that the performance test be completed as a check.

1. Remove the UUT's top cover and measure the inverter power supply voltages:

| MEASURE BETWEEN | DVM DISPLAY |
|---|---|
| C413 and Ground | 5.0V, ±0.3V |
| C414 and Ground | -6.2V, ±0.3V |

2. Connect the AC calibrator, UUT, oscilloscope, and terminations as shown in Figure 603-3.

3. Set the AC calibrator to its 1V range at 10 kHz, set the oscilloscope time base to 20 μsec/div. and Vert to 50 mV/div. and set the UUT to AC FUNCTION, VOLTS DISPLAY MODE, and 2V range HOLD.

4. Apply 180 mV/10 kHz from the AC calibrator to the input of the UUT. Using the oscilloscope check the UUT's counter output and adjust R404 until a symmetrical square wave is obtained. The amplitude of the square wave should be 100 mV peak, ±20% and must not change as the input to the UUT is increased up to 18V.

5. Disassemble the set up as shown in Figure 603-3 and connect the SG503, UUT, Universal Counter-Timer, and terminations as shown in Figure 603-5.

6. Set the SG503 to its 11 MHz range, set the Counter-Timer for frequency ratio measurement with a 10 sec gate time and set the UUT to AC FUNCTION, VOLTS DISPLAY MODE, and 200 mV range HOLD.

7. Select an 11 MHz output on the SG503 and adjust its amplitude with the vernier control until the UUT reads 18.0 mV. At this point, the Counter-Timer should display a stable reading of 01.00000 ±1 digit.

8. Reduce the output amplitude of the SG503 until the Counter-Timer display limit of step 7 cannot be met.

9. Adjust R404 until the Counter-Timer display limit of step 7 is met.

10. Repeat steps 8 and 9 until the Counter-Timer display limit can be met at the lowest possible input level.

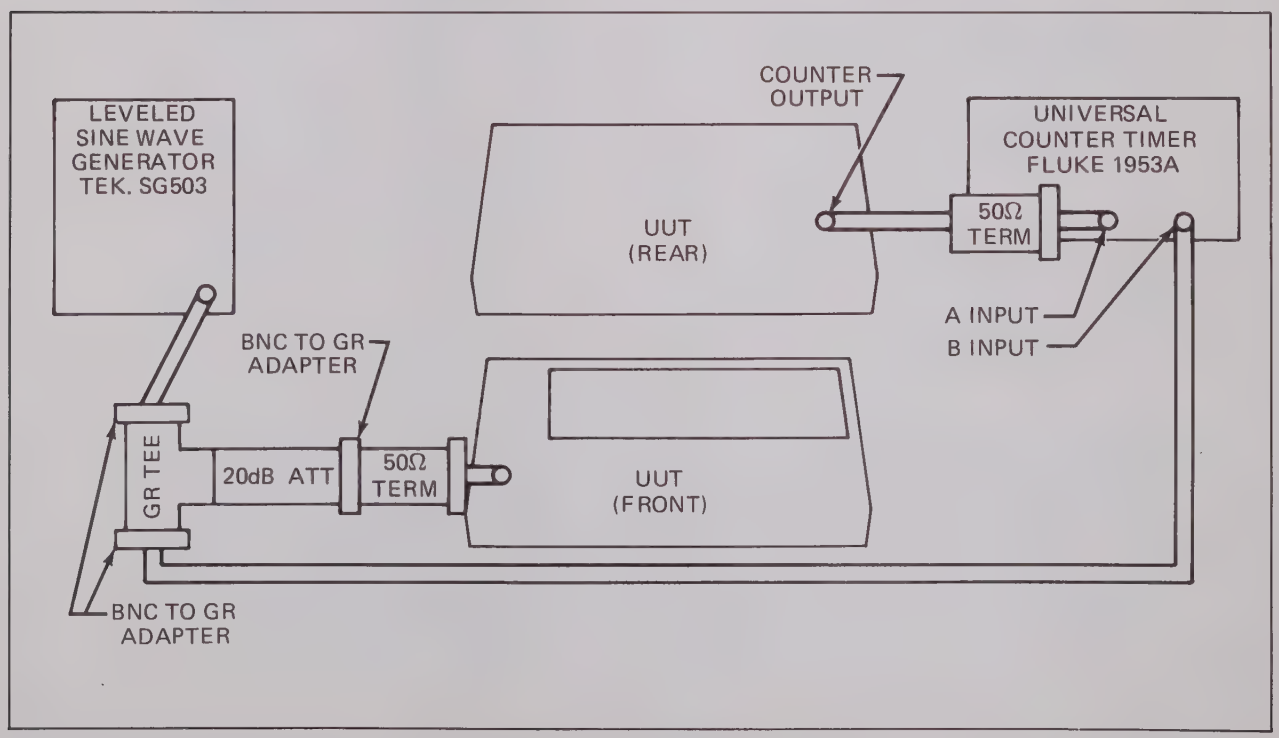


**Figure 603-5. Calibration Set-Up**

## 603-17. TROUBLESHOOTING

603-18. Table 603-4 should be completed ONLY if the performance test and calibration procedure indicate the the -003 Counter Output Option IS NOT operating correctly. This table includes voltage levels and waveforms of a properly functioning -003 Option. If you are unable to obtain any value (±15%) then you should replace the defective component and repeat the entire troubleshooting procedure. However, if all values are obtained then the performance test and calibration procedure must be repeated.

## 603-19. LIST OF REPLACEABLE PARTS

603-20. A list of replaceable parts for the Counter Output Option is given in Table 603-5 and shown in Figure 603-6. Refer to Section 5 of this manual for ordering information.

**Table 603-4. Counter Output Option Troubleshooting**

1. Using the 8020A or any compatible 3 1/2 digit meter, measure the following supply voltages.

| SUPPLY VOLTAGE | MEASURE BETWEEN HIGH TERMINAL AND LOW TERMINAL | DVM DISPLAY (8020A) |
|---|---|---|
| +15 | U401-1 and Input Common* | +15.00, ±0.1V |
| −15 | U401-6 and Input Common* | −15.00 ±0.2V |
| +5 | T402-2 and Input Common* | +5.00 ±0.25V |
| +5.3 | U401-1 and Chassis Ground* | +5.3 ±0.3V |
| −6.5 | U401-6 and Chassis Ground* | −6.5 ±0.3V |

2. Using an oscilloscope (with x10 probe) Tek 475 or equivalent, check the following points for the indicated waveforms.

| MEASURE BETWEEN HIGH TERMINAL - LOW TERMINAL | SCOPE DISPLAY |
|---|---|
| T402-1 and Input Common*<br>T402-3 and Input Common* | 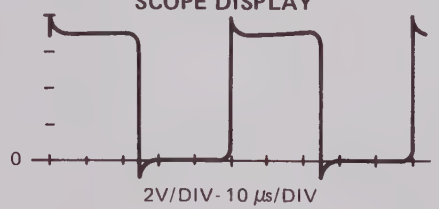 2V/DIV - 10 μs/DIV |
| T402-6 and Input Common*<br>T402-8 and Input Common* | 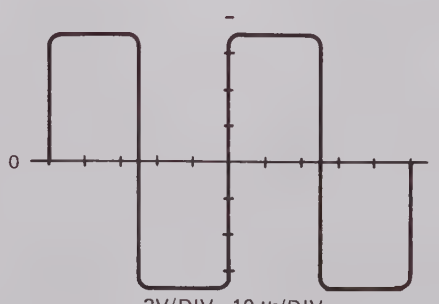 2V/DIV - 10 μs/DIV |

**Table 603-4. Counter Output Option Troubleshooting (cont)**

2a. Using Fluke 5200A or equivalent, apply 1V/10 kHz signal to input of UUT.

| MEASURE BETWEEN HIGH TERMINAL - LOW TERMINAL | SCOPE DISPLAY |
|---|---|
| Gate of Q401A and Input Common* | 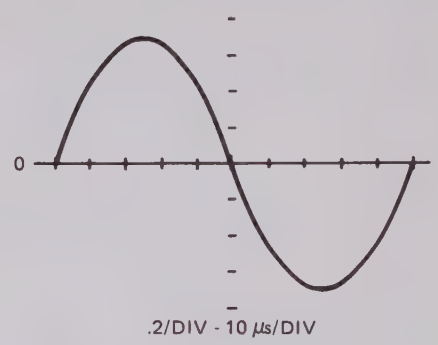 .2/DIV - 10 μs/DIV |
| Drain of Q401B and Input Common*<br>U401-3 and Input Common* | 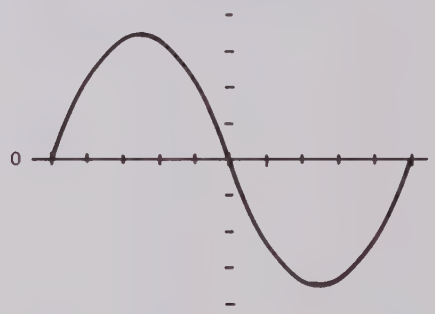 .2V/DIV - 10 μs/DIV |
| U401-4 and Input Common* | 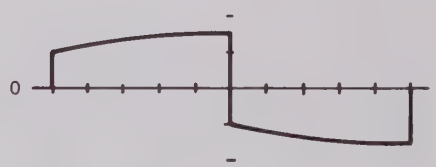 50 mV/DIV - 10 μs/DIV |
| U401-9 and Input Common* | 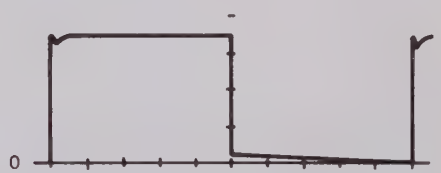 1V/DIV - 10 μs/DIV |
| T401 input and Input Common* | .5V/DIV - 10 μs/DIV |

**Table 603-4. Counter Output Option Troubleshooting (cont)**

| MEASURE BETWEEN HIGH TERMINAL—LOW TERMINAL | SCOPE DISPLAY |
|---|---|
| T401 output and Chassis Ground* | 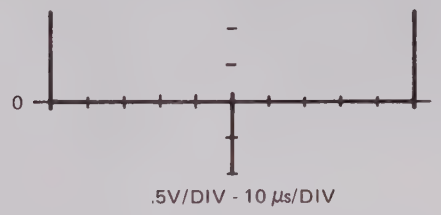 .5V/DIV - 10 μs/DIV |
| U402-4 and Chassis Ground* | 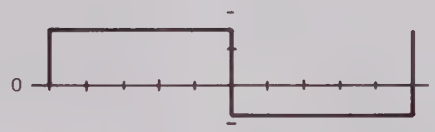 .5V/DIV - 10 μs/DIV |
| U402-9 and Chassis Ground* | 2V/DIV - 10 μs/DIV |
| J402 and Chassis Ground* | 100 mV/DIV - 10 μs/DIV |

*Input Common = ⏚ see schematic at end of this manual, Section 8.

*Chassis Ground = ⏚ see schematic at end of this manual, Section 8.

5. Press the 8922A dB/VOLTS switch to the dB position then the REL/dBm switch to the REL position. The 8922A display will be ±0.00 dB.

6. Select the 20 volt range on the DVM.

7. Use the decade switch on the ac source to increase the 8922A input to the levels indicated in Table 604-1. Nore the DVM and 8922A displays to be within the tolerances given.

Table 603-5. Counter Output Option PCB Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| -003 | COUNTER OUTPUT OPTION FIGURE 603-4 (892X-4013) | ORDER | -003 | OPTION | AR | | |
| C401 | CAP, CER, 0.22 UF +/-20%, 50V | 309849 | 71590 | CW30C2241K | 5 | | |
| C402 | CAP, CER, 430 PF +/-5%, 500V | 177980 | 72136 | DM15F431J | 1 | | |
| C403 | CAP, CER, 0.22 UF +/-20%, 50V | 309849 | 71590 | CW30C2241K | REF | | |
| C404 | CAP, CER, 0.22 UF +/-20%, 50V | 309849 | 71590 | CW30C2241K | REF | | |
| C405 | CAP, INSTALLED AT TEST LEVEL IF REQUIRED | | | | AR | | |
| C406 | CAP, TA, 47 UF +/-20%, 20V | 348516 | 56289 | 196D476X0020TE4 | 1 | | |
| C407 | CAP, CER, 0.005 UF +/-20%, 100V | 175232 | 56289 | C023B101E502M | 1 | | |
| C408 | CAP, CER, 0.22 UF +/-20%, 50V | 309849 | 71590 | CW30C2241K | REF | | |
| C409 | CAP, CER, 0.01 UF +/-20%, 100V | 149153 | 56289 | C023B101F103M | 1 | | |
| C410 | CAP, CER, 0.22 UF +/-20%, 50V | 309849 | 71590 | CW30C2241K | REF | | |
| C411 | CAP, TA, 220 UF +/-20%, 10V | 474288 | 56289 | 196D227X0010TE4 | 2 | | |
| C412 | CAP, TA, 220 UF +/-20%, 10V | 474288 | 56289 | 196D227X0010TE4 | REF | | |
| C413 | CAP, CER, 4.7 UF +/-20%, 50V | 363721 | 56289 | 196D475X0050PE4 | 2 | | |
| C414 | CAP, CER, 4.7 UF +/-20%, 50V | 363721 | 56289 | 196D475X0050PE4 | REF | | |
| C415 | CAP, CER, 300 PF 3 KV | 485250 | 56289 | C028B02E301M | 1 | | |
| C416 | CAP, INSTALLED AT TEST LEVEL IF REQUIRED | | | | AR | | |
| CR401 | DIODE, SI, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | 7 | 2 | |
| CR402 | DIODE, SI, HI-SPEED, SWITCH | 203323 | 07940 | 1N4448 | REF | | |
| CR403 | DIODE, SI, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| CR404 | DIODE, SI, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| CR405 | DIODE, SI, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| CR406 | DIODE, SI, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| CR407 | DIODE, SI, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| H1 | SCREW, FHP, 4-40 X 1/4, SS (NOT SHOWN) | 256156 | 73734 | 23022 | 8 | | 1 |
| J402 | CONNECTOR, BNC, FEMALE | 152033 | 95712 | 30355-1 | 1 | | |
| L401 | CHOKE, 6-TURN | 320911 | 89536 | 320911 | 3 | | |
| L402 | CHOKE, 6-TURN | 320911 | 89536 | 320911 | REF | | |
| L403 | CHOKE, 6-TURN | 320911 | 89536 | 320911 | REF | | |
| L404 | INDUCTOR SHEILDED, 0.27 UH | 313031 | 24859 | MR-0.27 | 1 | | |
| MP1 | SHIELD | 475491 | 89536 | 475491 | 1 | | |
| MP2 | SHIELD | 475483 | 89536 | 475483 | 1 | | |
| MP3 | SHIELD | 475376 | 89536 | 475376 | 1 | | |
| MP4 | COVER | 475509 | 89536 | 475509 | 1 | | |
| MP5 | COVER | 475400 | 89536 | 475400 | 1 | | |
| MP6 | BRACKET | 456723 | 89536 | 456723 | 1 | | |
| MP7 | SHIELD | 475384 | 89536 | 475384 | 1 | | |
| P106 | POST, CONTACT | 474809 | 22526 | 65505-136 | 3 | | |
| P401 | CABLE ASSEMBLY (-003 OPTION) | 486670 | 89536 | 486670 | 1 | | |
| Q401 | XSTR,DUAL FET | 454637 | 89536 | 454637 | 1 | 1 | |
| Q402 | XSTR, SI, NPN | 272237 | 89536 | 272237 | 2 | 1 | |
| Q403 | XSTR, SI, NPN | 272237 | 89536 | 272237 | REF | | |
| R402 | RES, MTL. FILM, 1K +/-1%, 1/8W | 168229 | 91637 | CMF551001F | 2 | | |
| R403 | RES, MTL. FILM, 1K +/-1%, 1/8W | 168229 | 91637 | CMF551001F | REF | | |
| R404 | RES, VAR, 100K +/-10%, 1/2W | 369520 | 89536 | 369520 | 1 | | |
| R405 | RES, COMP, 20K +/-5%, 1/4W | 221624 | 01121 | CB2035 | 1 | | |
| R406 | RES, COMP, 9.1K +/-5%, 1/4W | 193318 | 01121 | CB9125 | 1 | | |
| R407 | RES, COMP, 51, +/-55%, 1/4W | 221879 | 01121 | CB5105 | 2 | | |
| R408 | RES, COMP, 1.2K +/-5%, 1/4W | 190371 | 01121 | CB1225 | 1 | | |

Table 603-5. Counter Output Option PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| R409 | RES, COMP, 15K +/-5%, 1/4W | 148114 | 01121 | CB1535 | 1 | | |
| R410 | RES, COMP, 220 +/-5%, 1/4W | 147959 | 01121 | CB2215 | 1 | | |
| R411 | RES, COMP, 47 +/-5%, 1/4W | 147892 | 01121 | CB4705 | 1 | | |
| R412 | RES, COMP, 680 +/-5%, 1/4W | 148007 | 01121 | CB6815 | 2 | | |
| R413 | RES, COMP, 470 +/-5%, 1/4W | 147983 | 01121 | CB4715 | 1 | | |
| R414 | RES, COMP, 5.1K +/-5%, 1/4W | 193342 | 01121 | CB5125 | 1 | | |
| R415 | RES, COMP, 1K +/-5%, 1/4W | 148023 | 01121 | CB1025 | 1 | | |
| R416 | RES, COMP, 680 +/-5%, 1/4W | 148007 | 01121 | CB6815 | REF | | |
| R417 | RES, COMP, 51 +/-5%, 1/4W | 221879 | 01121 | CB5105 | REF | | |
| T401 | TRANSFORMER | 461863 | 89536 | 461864 | 1 | | |
| T402 | TRANSFORMER | 472798 | 89536 | 472498 | 1 | | |
| U401 | IC, LIN, HI-SPEED ANALOG VOL COMPARATOR | 386920 | 12040 | LM361N | 2 | 1 | |
| U402 | IC, LIN, HI-SPEED ANALOG VOL COMPARATOR | 386920 | 12040 | LM361N | REF | | |

1 Refer to Figure 603-1

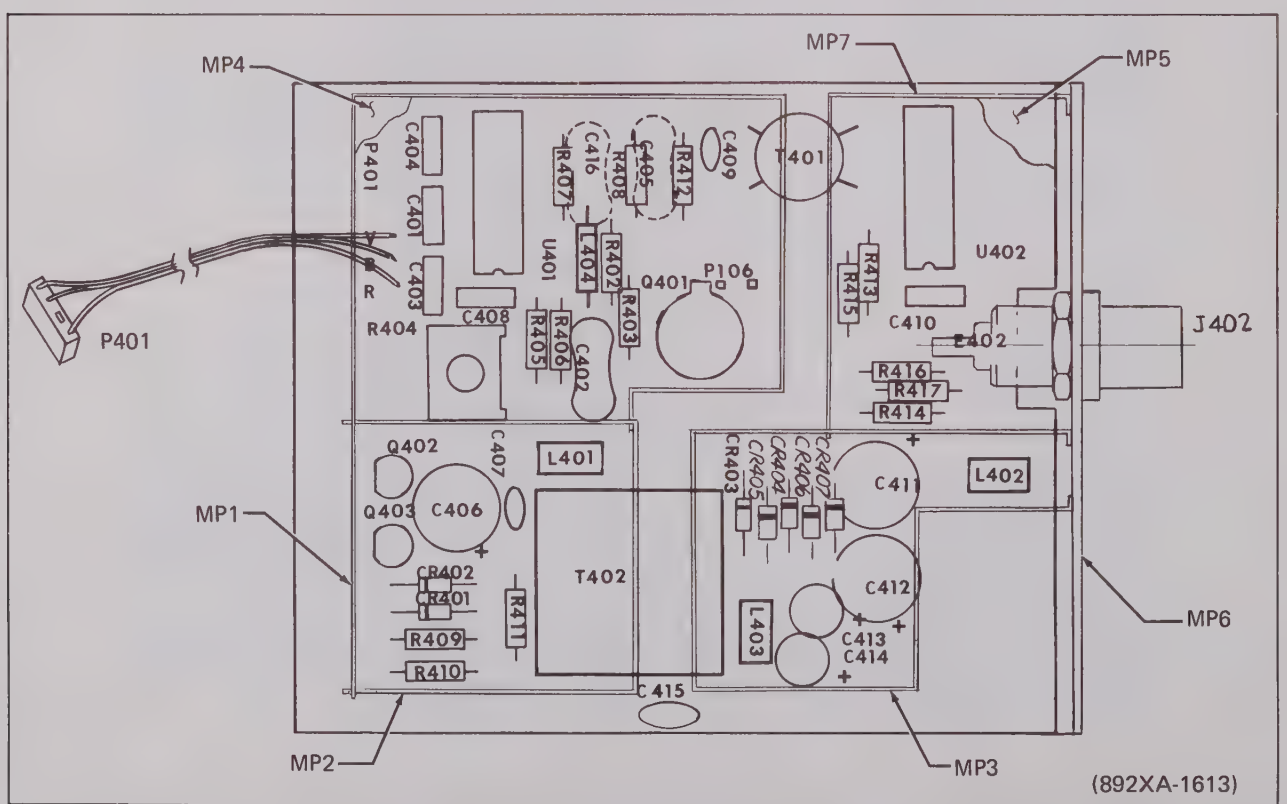


Figure 603-6. Counter Output Option PCB Assembly

# -004 Option
# Logarithmic Analog Output

## 604-1. INTRODUCTION

604-2. The Logarithmic Analog Output Option provides a non-isolated output voltage which varies continuously as the logarithm of the rms input. Scaling is: 0V dc output corresponds to 0 dB which is 200 $\mu$V rms input to the 8922A while 13.1V dc output = 131 dB = 700V rms input. A continuous frequency response of circuits with a wide dynamic output is easily plotted on an XY recorder using this option. The option's output is non-isolated.

## 604-3. SPECIFICATIONS

604-4. Specifications for the Logarithmic Analog Output Option are given in Section 1 of this manual.

## 604-5. INSTALLATION

604-6. Install the option as follows, referring to Figure 604-1.

1. Remove the top cover (see Access Procedures).

2. Remove the plate located at the top of the 8922A's rear panel.

3. Install the banana jack plate with the red banana jack to the right (when viewing the 8922A from the rear).

4. Secure the Logarithmic Analog Output Assembly to the top of the transformer bracket (see Figure 604-1) using the two screws provided.

5. Plug P501 into J501 (located on the Main PCB Assembly).

6. Solder the Logarithmic Analog Output Assembly's red output lead to the red banana jack, and the black lead to the black banana jack.

7. Verify operation using the calibration procedure presented in Section 4 of this manual.

## 604-5. OPERATION

604-6. Once installed, the Logarithmic Analog Output Option requires no operator attention other than ensuring that no voltage is ever applied to the option's output banana jacks.

## 604-7. THEORY OF OPERATION

604-8. The Logarithmic Analog Output Option, illustrated in Figure 604-2, utilizes the logarithmic characteristics of a P-N junction to develop an output proportional to the logarithm of the dc input from the thermal sensor.

604-9. The dc output voltage of the thermal sensor develops a collector current in one-half of a dual transistor. The resulting emitter base voltage is compared to the reference Vbe of the second half and scaled up accordingly. This voltage in turn develops a current which is summed with range information to produce the logarithmic output.

604-10. The output of the sensor covers one decade (.1 to 1V) in any one range. Scaling is such that one decade corresponds to 2V or 20 dB (.1V = 1 dB) at the output. "0" dB corresponds to 200 $\mu$V and each range increase produces an additional 2V at the output. Transients during range changes are eliminated by a sample and hold circuit.

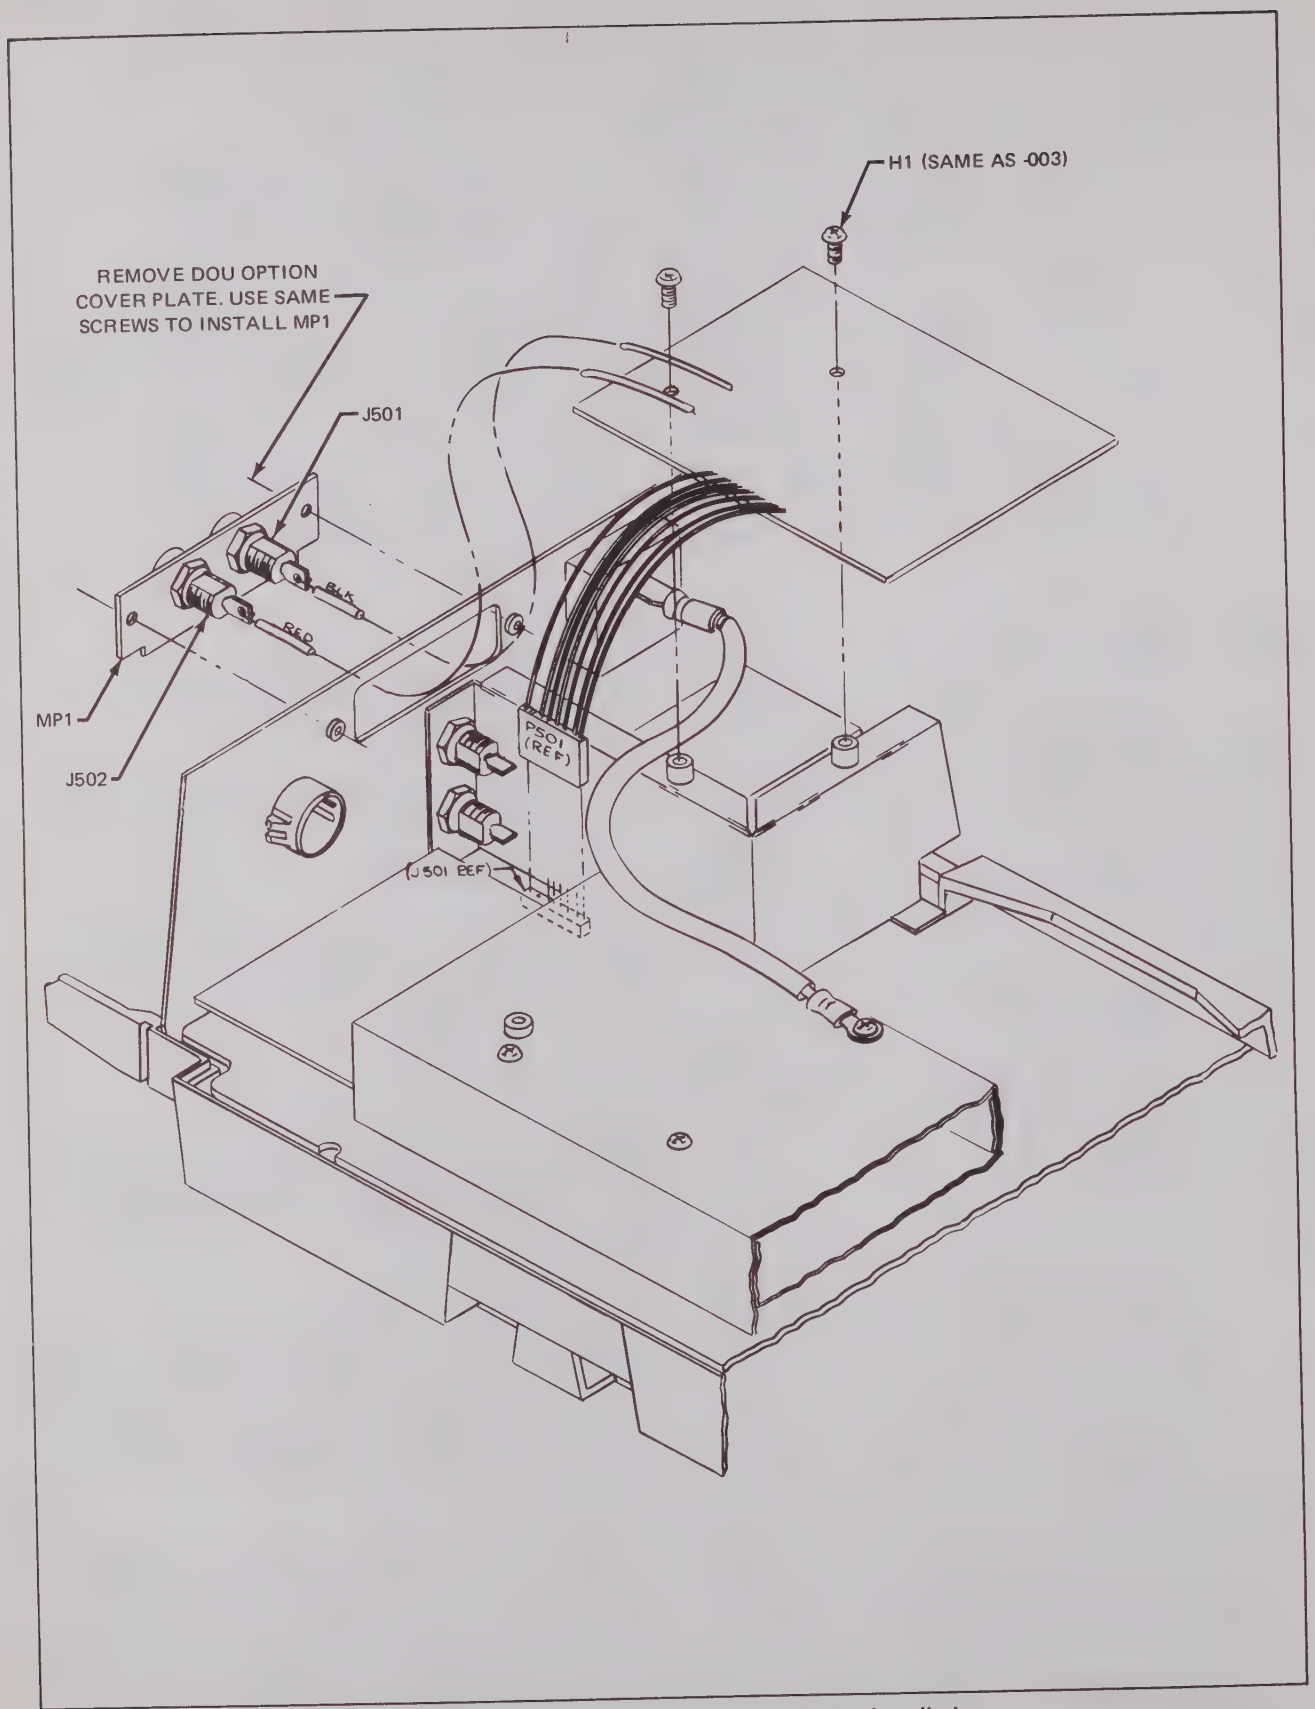


**Figure 604-1. Logarithmic Analog Output Option Installation**

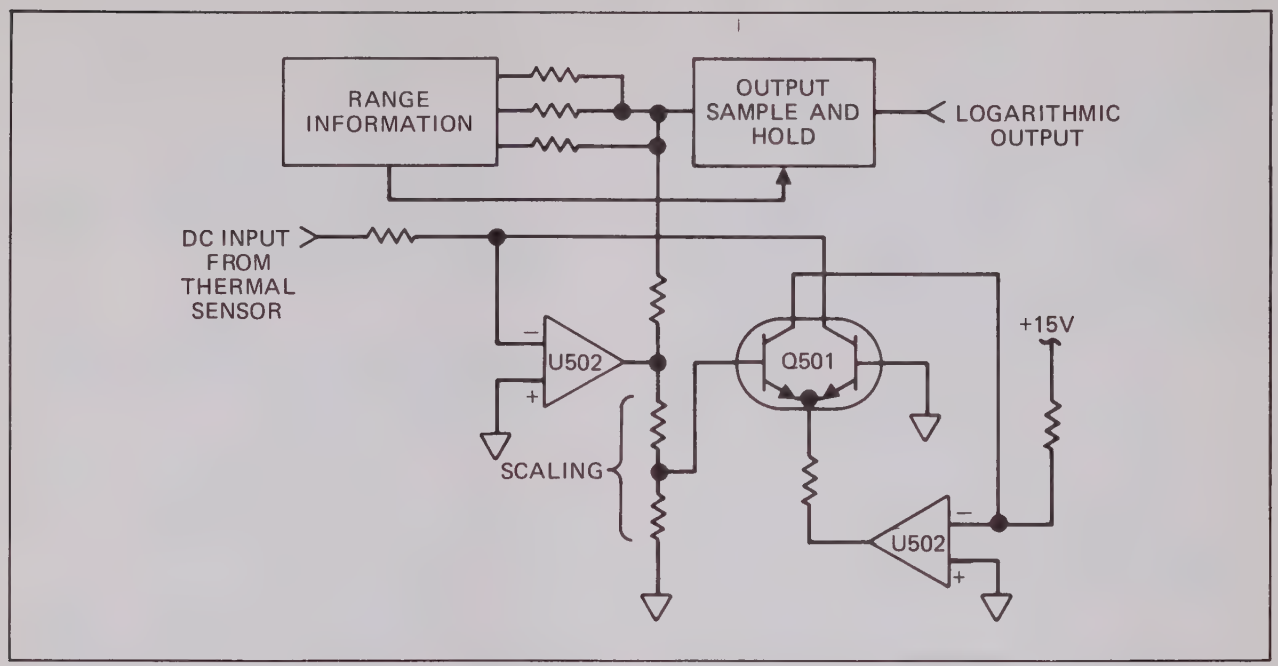


**Figure 604-2. Logarithmic Analog Output Option Simplified Schematic**

## 604-11. MAINTENANCE

604-12. The following maintenance information covers three areas; performance testing, calibration and troubleshooting of the -004 Logarithmic Analog Output Option. However, before any of these procedures can be started, the calibration of the mainframe instrument must be successfully completed. The table of recommended test equipment in Section 4 lists all of the equipment necessary to calibrate the mainframe instrument. No additional equipment is required to check, calibrate, and troubleshoot the -004 Option.

*NOTE*

*For the following procedures, the 8922A will be referred to as the UUT (Unit Under Test).*

## 604-13. PERFORMANCE TEST

604-14. The following procedure will verify that the Logarithmic Analog Output Option is operating within the specification limits stated in Section 1.

1. Select the AC function, LO RANGE ENABLE, and AUTO range on the UUT.

2. Apply 1.0 mV, 500 Hz to the UUT INPUT connector.

3. Select the DC Volts function and 2 volt range on the DVM; connect it to the LOGARITHMIC ANALOG OUTPUT jacks on the rear panel of the UUT.

4. Adjust the vernier control on the AC source of a voltage reading on the DVM of 1.400 ±.002V dc.

5. Press the UUT dB/VOLTS switch to the dB position then the REL/dBm switch to the REL position. The UUT display will be ±0.00 dB.

6. Select the 20 volt range on the DVM.

7. Use the decade switch on the ac source to increase the 8922A input to the levels indicated in Table 604-1. Note the DVM and 8922A display to be within the tolerances given.

**Table 604-1. Performance Test**

| 8922A INPUT | 8922A DISPLAY | DVM DISPLAY* |
|---|---|---|
| 10 mV, 500 Hz | 20.00 ±0.25 dB | 3.4 ±0.24V |
| 100 mV, 500 Hz | 40.00 ±0.25 dB | 5.4 ±0.24V |
| 1V, 500 Hz | 60.00 ±0.25 dB | 7.4 ±0.24V |
| 10V, 500 Hz | 80.00 ±0.25 dB | 9.4 ±0.24V |
| 100V, 500 Hz | 100.00 ±0.25 dB | 11.4 ±0.24V |

* The tolerance limit represents total system inaccuracies.

## 604-15. CALIBRATION

604-16. The Logarithmic Analog Option should be calibrated when it is first installed or if the limits as stated in the performance test cannot be met. Use the following procedure to calibrate the Logarithmic Analog Option. If it is not possible to obtain the limits as stated in the following procedure then the option will require troubleshooting. If, however, the limits are met then we recommend that the performance test be completed as a check.

1. Remove the 8922A's top cover, and set up the test equipment as shown in Figure 604-3.

2. Set the 8922A at AC, AUTO. Now apply 1.0 mV ac, 500 Hz. Observe the option's output to be approximately 1.4 ±0.2V dc. (TP504 is Ground, TP503 is the option's output.)

3. Apply 20.0 mV, 500 Hz to the UUT and select its HOLD RANGE. Monitor the voltage TP502 and adjust R501 for a 0 ±0.0005V dc on the DVM.

4. Monitor TP501 and note the magnitude and polarity of the offset from 0V to the nearest 0.01V.

5. While still monitoring TP501 adjust R512 for a reading of –10V +OFFSET of step 3 ±0.01V.
Example:

| Initial Offset | Final Reading |
|---|---|
| –.03V | –10 –.03 = 10.03 ±.01V |
| +.14V | –10 +.14 = –9.86 ±.01V |

6. Monitor TP503 and note the offset from +6.00V to the nearest 0.01V.

7. Decrease the input to 100 mV, 500 Hz and observe that the DMM reads +5.4V ±0.01V plus the offset noted in step 5.

8. Decrease the input to 20 mV, 500 Hz and observe that the DMM reads +4.00V ±0.01V plus the offset noted in step 5.

## 604-17. TROUBLESHOOTING

604-18. To troubleshoot the -004 Option read the theory of operation for this option and then check the actual voltage levels against those indicated on the -004 schematic, located in Section 8. If there are any descrepancies, simply replace the defective component and repeat the performance test and calibration procedure.

## 604-19. LIST OF REPLACEABLE PARTS

604-20. A list of replaceable parts for the Logarithmic Analog Output Option is given in Table 604-2 and shown in Figure 604-4. Refer to Section 5 of this manual for ordering information.

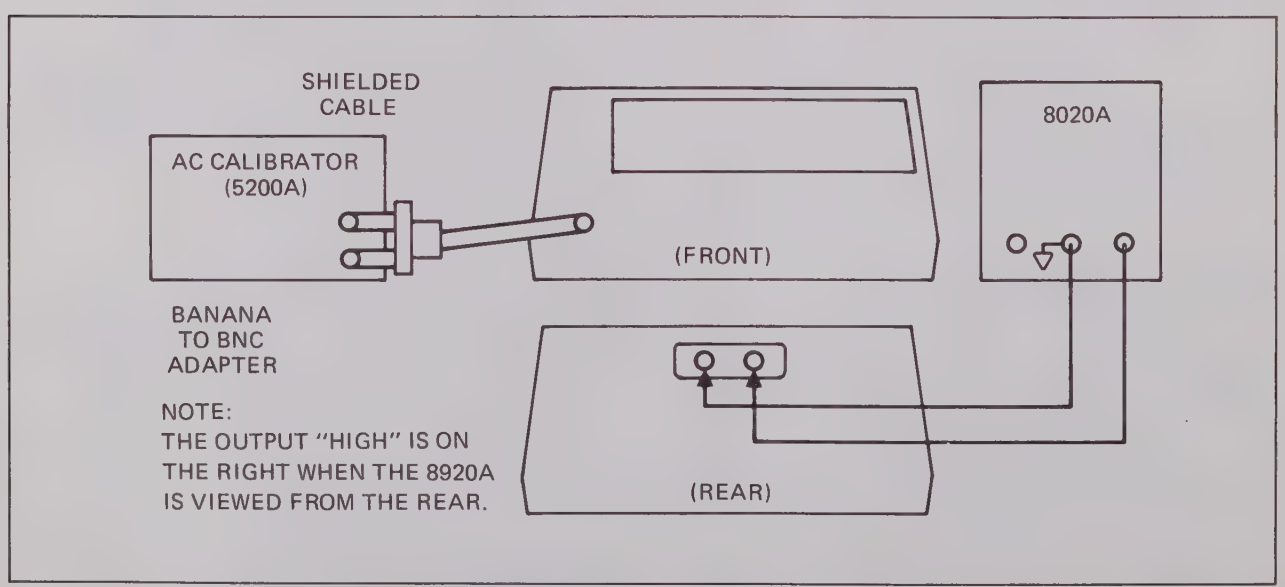


**Figure 604-3. Logarithmic Analog Output Option Test Set-Up**

Table 604-2. Logarithmic Analog Output Option PCB Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. OR TYPE | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| -004 | LOGARITHMIC ANALOG OUTPUT OPTION FIGURE 606-4 (8920A-4014) | ORDER | -004 | OPTION | AR | | |
| C501 | CAP, CER, 1000 PF +/-10%, 500V | 357806 | 56289 | C016B102G102K | 1 | | |
| C502 | CAP, CER, 100 PF +/-10%, 1000V | 105593 | 71590 | DD-101 | 1 | | |
| C503 | CAP, MYLAR, 2.0 UF +/-20%, 100V | 334185 | 14752 | 230B1B105 | 1 | | |
| C504 | CAP, TA, 22 UF +/-20%, 15V | 423012 | 56289 | 196D226X00154A1 | 1 | | |
| C505 | CAP, ELECT, TA, 2.2 UF +/-10%, 20V | 160226 | 56289 | 150D225X9020A | 2 | 1 | |
| C506 | CAP, ELECT, TA, 2.2 UF +/-10%, 20V | 160226 | 56289 | 150D225X9020A | REF | | |
| CR501 | DIODE, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | 3 | 1 | |
| CR502 | DIODE, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| CR503 | DIODE, HI-SPEED, SWITCH | 203323 | 07910 | 1N4448 | REF | | |
| J501 | BANANA JACK, BLACK | 162073 | 74970 | 108-0903-001 | 1 | | |
| J502 | BANANA JACK, RED | 162065 | 74970 | 108-0902-001 | 1 | | |
| MP1 | COVER PLATE, LOG ANALOG OPTION | 456772 | 89536 | 456772 | 1 | | |
| P501 | CABLE, LOGARITHMIC ANALOG OUTPUT | 486688 | 89536 | 486688 | 1 | | |
| Q501 | XSTR, DUAL, SI, NPN | 295717 | 24355 | AD811-00/17 | 1 | 1 | |
| Q502 | XSTR, FET, JNCT, N-CHANNEL | 376475 | 89536 | 376475 | 1 | 1 | |
| R501 | RES, VAR, 100K +/-10%, 1/2W | 369520 | 89536 | 369520 | 1 | 1 | |
| R502 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | 7 | | |
| R503 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R504 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R505 | RES, MTL. FILM, 10K +/-1%, 1/8W | 168260 | 91637 | CMF551002F | 1 | | |
| R506 | RES, COMP, 15M +/-5%, 1/4W | 381491 | 01121 | CB1565 | 1 | | |
| R507 | RES, COMP, 10K +/-5%, 1/4W | 148106 | 01121 | CB1035 | 1 | | |
| R508 | RES, MTL. FILM, 37.5K +%, 1/8W | 442947 | 91637 | CMF553752B | 1 | | |
| R509 | RES,MF,75K +/-0.1%,1/8W | 370916 | 91637 | CMF557502B | 1 | | |
| R510 | RES, MTL. FILM, 150K +/-0.25%, 1/8W | 442707 | 91637 | CMF551503C | 2 | | |
| R511 | RES, MTL. FILM, 100K +/-0.1%, 1/8W | 370775 | 91637 | CMF551003B | 1 | | |
| R512 | RES, VAR, 20K +/-10%, 1/2W | 335760 | 89536 | 335760 | 1 | 1 | |
| R513 | RES, MTL. FILM, 150K +/-0.25%, 1/8W | 442707 | 91637 | CMF551503C | REF | | |
| R514 | RES, COMP, 45%, 1/4W | 148163 | 01121 | CB4735 | 1 | | |
| R515 | RES, MTL. FILM, 158K +/-1%, 1/8W | 237214 | 91637 | CMF551583F | 1 | | |
| R516 | RES, WW, 994 +/-2%, 1/2W | 477018 | 89536 | 477018 | 1 | 1 | |
| R517 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R518 | RES, MTL. FILM, 20K +/-0.1%, 1/8W | 446443 | 91637 | CMF552002B | 1 | | |
| R519 | RES, MTL. FILM, 1.5M +/-1%, 1/2W | 284976 | 91637 | CMF651504F | 1 | | |
| R520 | RES, COMP, 1K +/-5%, 1/4W | 148023 | 01121 | CB1025 | 1 | | |
| R521 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R522 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R523 | RES, COMP, 1M +/-5%, 1/4W | 182204 | 01121 | CB1055 | REF | | |
| R524 | RES, MTL. FILM, 100K +/-5%, 1/8W | 248807 | 91637 | CMF551003F | 1 | | |
| R525 | RES, MTL. FILM, 143K +/-1%, 1/8W | 291336 | 91637 | CMF551433F | 1 | | |
| TP501 | CONNECTOR POST | 379438 | 00779 | 1-87022-0 | 4 | | |
| TP502 | CONNECTOR POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP503 | CONNECTOR POST | 379438 | 00779 | 1-87022-0 | REF | | |
| TP504 | CONNECTOR POST | 379438 | 00779 | 1-87022-0 | REF | | |
| U501 | IC, C-MOS, HEX BUFFER/INVERTER | 381848 | 02735 | CD4049UBE | 1 | 1 | |
| U502 | IC, LINEAR, OP AMP | 402669 | 02735 | CA324E | 1 | 1 | |
| W502 | WIRE ASSEMBLY | 488163 | 89536 | 488163 | 1 | | |

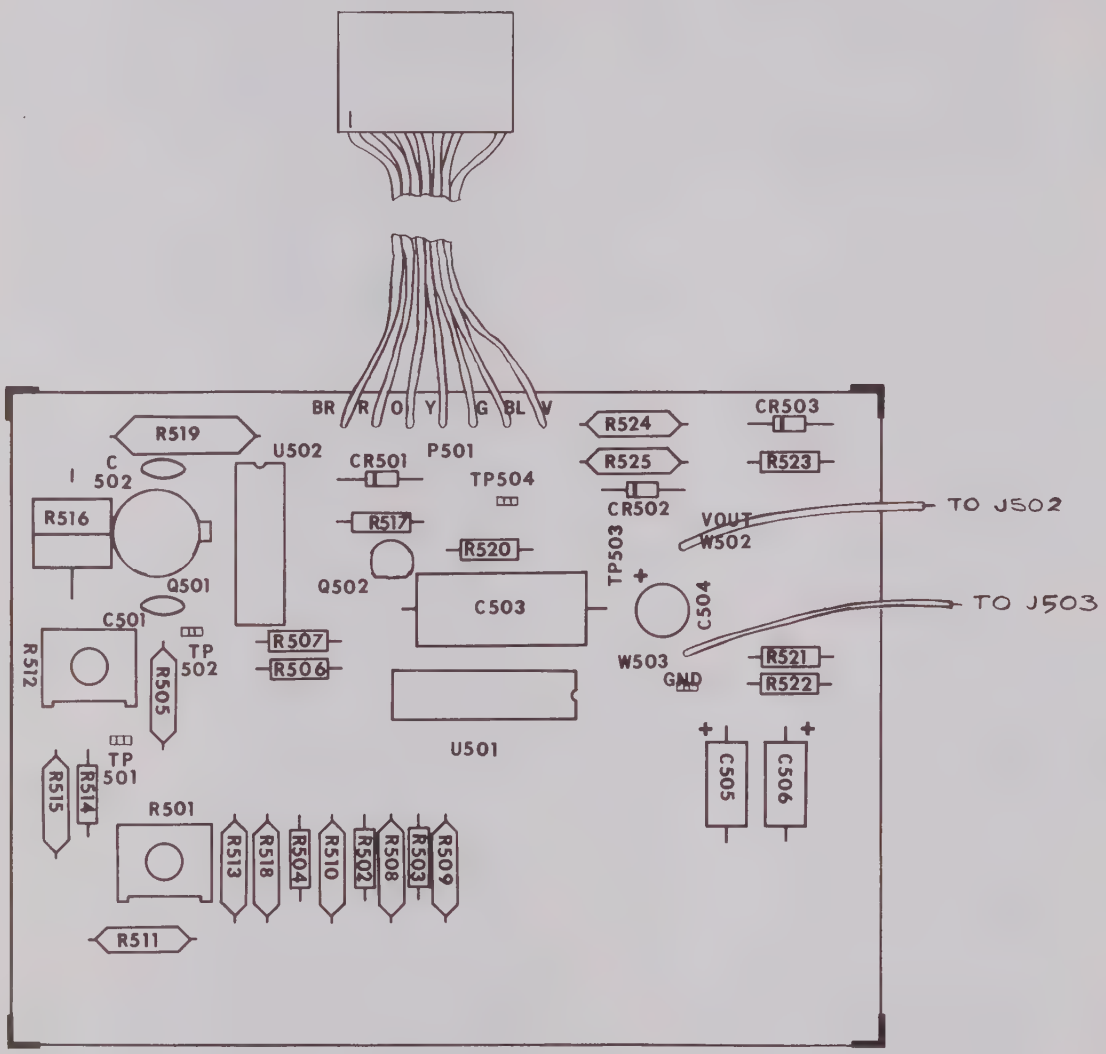


(8920A-1614)

Figure 604-4. Logarithmic Analog Output Option PCB Assembly

# -521 Option
# DMM Digital Interface

## 6521-1. INTRODUCTION

6521-2. The DMM Digital Interface provides optically isolated DMM data to a compatible external unit -- such as the DMM-1120A Interface PCB. (Note: The DMM Digital Interface connected to the DMM-1120A Interface PCB mounted in an 1120A Translator is the -529 Option.) Compatability requirements for the external unit are presented below. All additional information -- such as theory of operation, installation, operation, etc. -- is presented in supplemental documentation. If you order the DMM Digital Interface, either as an installed option or as a field installable kit, a copy of this manual will be provided. Order the 892XA-521K when ordering this option at the same time you order your 8922A. Order the 892XA-521 if you want a field installable kit.

## 6521-3. THE EXTERNAL UNIT

6521-4. The compatibility requirements for the external unit are listed below. Pin assignment on the interface cable is shown in Figure 6521-1. The cable connector type is a male 36-pin AMP "Blue Ribbon Type" series.

1. The external unit must provide:

   a. Operating Power: GND and +5V dc at 10 mA.

   b. DMM address: When reading DMM data the proper DMM address must be sent continuously on the A0 through A3 address lines. Resistive termination is 100 kΩ tied to +5V only. Logic high is 3.5 to 5.0V. Logic level low is 0 to 1.5V. Negative true logic.

2. The external unit must be able to accept:

   a. Not Address Valid (AV): Signal line goes from logic high (3.5 to 5V) to a logic level low (0 to 1.0V) to indicate that the DMM has received the correct DMM address.

   b. DMM data: BCD DMM data presented nibble serial -- 4-bit parallel -- on the W, X, Y, Z lines in the same sequence that data is presented to the DMM display. The format of this data is presented in Table 6521-1. The external unit must be capable of using the DMM data in this format. Logic high level is 4.6 to 5V at –0.14 mA. Logic level low is 0 to 0.7V at +0.36 mA.

   c. Not Data Valid (DV): The external unit must accept data only when DV goes to a logic level low (0 to 1.0V) from a logic level high (3.5 to 5V). If the DMM is not autoranging and if the data is valid and new, then DV will go low in the middle of each data nibble to indicate to the external unit that this nibble is valid and settled.

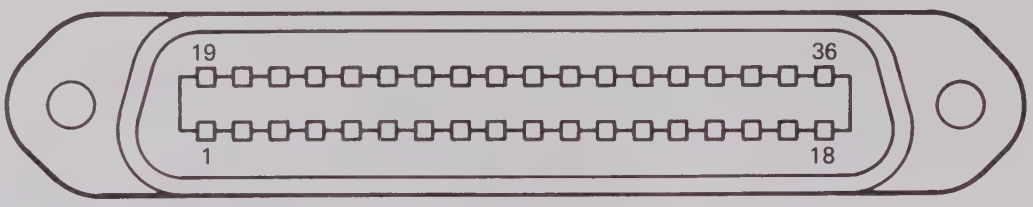


| PIN NO. | MNEMONIC | SOURCE | | DESCRIPTION |
|---|---|---|---|---|
| | | DMM | EXT UNIT | |
| 1 | $\overline{AV}$ | X | | Not Address Valid - Low indicates DMM is responding to a valid address. |
| 2 | $\overline{DV}$ | X | | Not Data Valid - Low indicates that DMM data on the W, X, Y, Z lines is valid, new and settled. |
| 3 | A0 | | X | LSB |
| 4 | A1 | | X | DMM ADDRESS |
| 5 | A2 | | X | |
| 6 | A3 | | X | MSB |
| 7 & 8 | | NOT USED | | |
| 9 | Z | X | | LSB |
| 10 | Y | X | | |
| 11 | X | X | | BCD DMM data transmitted nibble serial. |
| 12 | W | X | | MSB |
| 13-16 | | NOT USED | | |
| 17 | GND | | X | Operating voltages for the interface side of the DMM Digital Interface PCB circuitry. |
| 18 | +5V | | X | |
| 19-36 | | NOT USED | | |

Figure 6521-1. Interface Cable Pin Assignment

Table 6521-1. DMM Data Format on the DMM Digital Interface

dB Reference Table

| J | 0 | 1 |
|---|---|---|
| LMN | IMPEDANCE | |
| 000 | REL | REL |
| 001 | 72 | 52 |
| 010 | 150 | 50 |
| 011 | 300 | 75 |
| 100 | 600 | 93 |
| 101 | 900 | 110 |
| 110 | 1000 | 124 |
| 111 | 1200 | 135 |

Range Table

| abc | RANGE |
|---|---|
| 000 | 2 mV |
| 001 | 20 mV |
| 010 | 200 mV |
| 011 | 2V |
| 100 | 20V |
| 101 | 200V |
| 110 | 700V |
| 111 | Not Used |

Table 6521-1. DMM Data Format on the DMM Digital Interface (cont)

| SEQUENCE NO. | W | X | Y | Z | MEANING |
|---|---|---|---|---|---|
| 1 | J | L | M | N | dB Reference/Status |
| 2 | K | a | b | c | Range/Status |
| 3 | 0 | dB | OL | UL | Status |
| 4 | B | B | B | B | LSD |
| 5 | B | B | B | B | 4SD |
| 6 | B | B | B | B | 3SD |
| 7 | B | B | B | B | 2SD |
| 8 | $\overline{P}$ | 1 | 0 | Z1 | Polarity/MSD |

| | | |
|---|---|---|
| 0 | Binary bit: | Logic 0, low |
| 1 | Binary bit: | Logic 1, high |
| B | Binary data bit: | 0 or 1 |
| abc | Binary range code: | See inset Range Table |
| dB | If dB = 1: | DMM reading is in dB |
| | If dB = 0: | DMM reading is in volts |
| $\overline{DV}$ | Not Data Valid: | Low indicates valid data on WXYZ |
| J LMN | If dB = 0: | J indicates the number of display digits<br>J = 0 is 3½ digits<br>J = 1 is 4½ digits |
| | If dB = 1: | J LMN indicate dB reference selected -- see inset 892XA dB Reference Table |
| K | If K = 1: | DVM will flash decimal point for underload and flash all digits for inputs greater than 700V |
| MSD | Most Siginificant Digit | |
| LSD | Least Dignificant Digit (2SD follows MSD in sequence) | |
| OL | If OL = 1: | Overload: DMM input has exceeded DMM capacity for that range |
| UL | If UL = 1: | Underload: DMM input is below optimum for that range -- reading may not be accurate |
| P | Polarity bit | |
| Z1 | Z1 = 1: | Most Significant Digit is 1 |
| | Z1= 0: | Most Significant Digit is 0 |

# -519 Option
# DMM-IEEE-488 Interface

## 6529-1. INTRODUCTION

6529-2. The DMM-IEEE-488 Interface Translates between the 8922A and the General Purpose Interface Bus (GPIB) as defined by the IEEE 488-1978. The interface is composed of one DMM-1120A Interface PCB -- mounted in and 1120A Translator -- and one or more DMM Digital Interface(s) (-521K Option). The interface implements the following IEEE functions: SH1, AH1, T3, TE3. All additional information is contained in supplemental literature. If you order the DMM-IEEE-488 Interface either as an installed option or as a field installable kit, a copy of this manual will be provided. Order the 892XA-529 when ordering this option at the same time you order your 8922A. Order 892X-A529 if you already have an 8922A and want a field installable kit.

# Section 7
# General Information

7-1. This section of the manual contains generalized user information as well as supplemental information to the List of Replaceable Parts contained in Section 5.

## List of Abbreviations and Symbols

| | |
|---|---|
| **A or amp** | ampere |
| **ac** | alternating current |
| **af** | audio frequency |
| **a/d** | analog-to-digital |
| **assy** | assembly |
| **AWG** | american wire gauge |
| **B** | bel |
| **bcd** | binary coded decimal |
| **°C** | Celsius |
| **cap** | capacitor |
| **ccw** | counterclockwise |
| **cer** | ceramic |
| **cermet** | ceramic to metal(seal) |
| **ckt** | circuit |
| **cm** | centimeter |
| **cmrr** | common mode rejection ratio |
| **comp** | composition |
| **cont** | continue |
| **crt** | cathode-ray tube |
| **cw** | clockwise |
| **d/a** | digital-to-analog |
| **dac** | digital-to-analog converter |
| **dB** | decibel |
| **dc** | direct current |
| **dmm** | digital multimeter |
| **dvm** | digital voltmeter |
| **elect** | electrolytic |
| **ext** | external |
| **F** | farad |
| **°F** | Fahrenheit |
| **FET** | Field-effect transistor |
| **ff** | flip-flop |
| **freq** | frequency |
| **FSN** | federal stock number |
| **g** | gram |
| **G** | giga ($10^9$) |
| **gd** | guard |
| **Ge** | germanium |
| **GHz** | gigahertz |
| **gmv** | guaranteed minimum value |
| **gnd** | ground |
| **H** | henry |
| **hd** | heavy duty |
| **hf** | high frequency |
| **Hz** | hertz |
| **IC** | integrated circuit |
| **if** | intermediate frequency |
| **in** | inch(es) |
| **intl** | internal |
| **I/O** | input/output |
| **k** | kilo ($10^3$) |
| **kHz** | kilohertz |
| **kΩ** | kilohm(s) |
| **kV** | kilovolt(s) |
| **lf** | low frequency |
| **LED** | light-emitting diode |
| **LSB** | least significant bit |
| **LSD** | least significant digit |
| **M** | mega ($10^6$) |
| **m** | milli ($10^{-3}$) |
| **mA** | milliampere(s) |
| **max** | maximum |
| **mf** | metal film |
| **MHz** | megahertz |
| **min** | minimum |
| **mm** | millimeter |
| **ms** | millisecond |
| **MSB** | most significant bit |
| **MSD** | most significant digit |
| **MTBF** | mean time between failures |
| **MTTR** | mean time to repair |
| **mV** | millivolt(s) |
| **mv** | multivibrator |
| **MΩ** | megohm(s) |
| **n** | nano ($10^{-9}$) |
| **na** | not applicable |
| **NC** | normally closed |
| **(-) or neg** | negative |
| **NO** | normally open |
| **ns** | nanosecond |
| **opnl ampl** | operational amplifier |
| **p** | pico ($10^{-12}$) |
| **para** | paragraph |
| **pcb** | printed circuit board |
| **pF** | picofarad |
| **pn** | part number |
| **(+) or pos** | positive |
| **pot** | potentiometer |
| **p-p** | peak-to-peak |
| **ppm** | parts per million |
| **PROM** | programmablle read-only memory |
| **psi** | pound-force per square inch |
| **RAM** | random-access memory |
| **rf** | radio frequency |
| **rms** | root mean square |
| **ROM** | read-only memory |
| **s or sec** | second (time) |
| **scope** | oscilloscope |
| **SH** | shield |
| **Si** | silicon |
| **serno** | serial number |
| **sr** | shift register |
| **Ta** | tantalum |
| **tb** | terminal board |
| **tc** | temperature coefficient or temperature compensating |
| **tcxo** | temperature compensated crystal oscillator |
| **tp** | test point |
| **u or μ** | micro ($10^{-6}$) |
| **uhf** | ultra high frequency |
| **us or μs** | microsecond(s) ($10^{-6}$) |
| **uut** | unit under test |
| **V** | volt |
| **v** | voltage |
| **var** | variable |
| **vco** | voltage controlled oscillator |
| **vhf** | very high frequency |
| **vlf** | very low frequency |
| **W** | watt(s) |
| **ww** | wire wound |
| **xfmr** | transformer |
| **xstr** | transistor |
| **xtal** | crystal |
| **xtlo** | crystal oscillator |
| **Ω** | ohm(s) |
| **μ** | micro ($10^{-6}$) |

## Federal Supply Codes for Manufacturers

00213
Nytronics Comp. Group Inc.
Subsidiary of Nytronics Inc.
Formerly Sage Electronics
Rochester, New York

00327
Welwyn International, Inc.
Westlake, Ohio

00656
Aerovox Corp.
New Bedford, Massachusetts

00686
Film Capacitors, Inc.
Passaic, New Jersey

00779
AMP Inc.
Harrisburg, Pennsylvania

01121
Allen-Bradley Co.
Milwaukee, Wisconsin

01281
TRW Electronic Comp.
Semiconductor Operations
Lawndale, California

01295
Texas Instruments, Inc.
Semiconductor Group
Dallas, Texas

01537
Motorola Communications &
Electronics Inc.
Franklin Park, Illinois

01686
RCL Electronics Inc.
Manchester, New Hampshire

01730
Replaced by 73586

01884
Use 56289
Sprague Electric Co.
Dearborn Electronic Div.
Lockwood, Florida

02114
Ferroxcube Corp.
Saugerties, New York

02131
General Instrument Corp.
Harris ASW Div.
Westwood, Maine

02395
Rason Mfg. Co.
Brooklyn, New York

02533
Snelgrove, C.R. Co., Ltd.
Don Mills, Ontario, Canada
M3B 1M2

02606
Fenwal Labs
Div. of Travenal Labs.
Morton Grove, Illinois

02660
Bunker Ramo Corp., Conn Div.
Formerly Amphenol-Borg
Electric Corp.
Broadview, Illinois

02799
Areo Capacitors, Inc.
Chatsworth, California

03508
General Electric Co.
Semiconductor Products
Syracuse, New York

03614
Replaced by 71400

03651
Replaced by 44655

03797
Eldema Div.
Genisco Technology Corp.
Compton, California

03877
Transistron Electronic Corp.
Wakefield, Massachusetts

03888
KDI Pyrofilm Corp.
Whippany, New Jersey

03911
Clairex Electronics Div.
Clairex Corp.
Mt. Vernon, New York

03980
Muirhead Inc.
Mountainside, New Jersey

04009
Arrow Hart Inc.
Hartford, Connecticut

04062
Replaced by 72136

04202
Replaced by 81312

04217
Essex International Inc.
Wire & Cable Div.
Anaheim, California

04221
Aemco, Div. of
Midtex Inc.
Mankato, Minnesota

04222
AVX Ceramics Div.
AVX Corp.
Myrtle Beach, Florida

04423
Telonic Industries
Laguna Beach, California

04645
Replaced by 75376

04713
Motorola Inc. Semiconductor
Products
Phoenix, Arizona

04946
Standard Wire & Cable
Los Angeles, California

05082
Replaced by 94988

05236
Jonathan Mfg. Co.
Fullerton, California

05245
Components Corp. now
Corcom, Inc.
Chicago, Illinois

05277
Westinghouse Electric Corp.
Semiconductor Div.
Youngwood, Pennsylvania

05278
Replaced by 43543

05279
Southwest Machine &
Plastic Co.
Glendora, California

05397
Union Carbide Corp.
Materials Systems Div.
New York, New York

05571
Use 56289
Sprague Electric Co.
Pacific Div.
Los Angeles, California

05574
Viking Industries
Chatsworth, California

05704
Replaced by 16258

05820
Wakefield Engineering Inc.
Wakefield, Massachusetts

06001
General Electric Co.
Electronic Capacitor &
Battery Products Dept.
Columbia, South Carolina

06136
Replaced by 63743

06383
Panduit Corp.
Tinley Park, Illinois

06473
Bunker Ramo Corp.
Amphenol SAMS Div.
Chatsworth, California

06555
Beede Electrical Instrument Co.
Penacook, New Hampshire

06739
Electron Corp.
Littleton, Colorado

06743
Clevite Corp.
Cleveland, Ohio

06751
Components, Inc. Semcor Div.
Phoenix, Arizona

06860
Gould Automotive Div.
City of Industry, California

06961
Vernitron Corp., Piezo
Electric Div.
Formerly Clevite Corp., Piezo
Electric Div.
Bedford, Ohio

06980
Eimac Div.
Varian Associates
San Carlos, California

07047
The Ross Milton Co.
South Hampton, Pennsylvania

07115
Replaced by 14674

07138
Westinghouse Electric Corp.,
Electronic Tube Div.
Horsehead, New York

07233
TRW Electronic Components
Cinch Graphic
City of Industry, California

07256
Silicon Transistor Corp.
Div. of BBF Group Inc.
Chelmsford, Massachusetts

07261
Aumet Corp.
Culver City, California

07263
Fairchild Semiconductor
Div. of Fairchild Camera
& Instrument Corp.
Mountain View, California

07344
Bircher Co., Inc.
Rochester, New York

07597
Burndy Corp.
Tape/Cable Div.
Rochester, New York

07792
Lerma Engineering Corp.
Northampton, Massachusetts

07910
Teledyne Semiconductor
Formerly Continental Device
Hawthorne, California

07933
Use 49956
Raytheon Co.
Semiconductor Div. HQ
Mountain View, California

08225
Industro Transistor Corp.
Long Island City, New York

## Federal Supply Codes for Manufacturers (cont)

08261
Spectra Strip Corp.
Garden Grove, California

08530
Reliance Mica Corp.
Brooklyn, New York

08806
General Electric Co.
Miniature Lamp Products Dept
Cleveland, Ohio

08863
Nylomatic Corp.
Norrisville, Pennsylvania

08988
Use 53085
Skottie Electronics Inc.
Archbald, Pennsylvania

09214
G.E. Co. Semi-Conductor
Products Dept.
Power Semi-Conductor
Products OPN Sec.
Auburn, New York

09353
C and K Components
Watertown, Massachusetts

09423
Scientific Components, Inc.
Santa Barbara, California

09922
Burndy Corp.
Norwalk, Connecticut

09969
Dale Electronics Inc.
Yankton, S. Dakota

10059
Barker Engineering Corp.
Formerly Amerace, Amerace
ESNA Corp.
Kenilworth, New Jersey

11236
CTS of Berne
Berne, Indiana

11237
CTS Keene Inc.
Paso Robles, California

11358
CBS Electronic Div.
Columbia Broadcasting System
Newburyport, Minnesota

11403
Best Products Co.
Chicago, Illinois

11503
Keystone Columbia Inc.
Warren, Michigan

11532
Teledyne Relays
Hawthorne, California

11711
General Instrument Corp.
Rectifier Division
Hicksville, New York

11726
Qualidyne Corp.
Santa Clara, California

12014
Chicago Rivet & Machine Co.
Bellwood, Illinois

12040
National Semiconductor Corp.
Danburry, Connecticut

12060
Diodes, Inc.
Chatsworth, California

12136
Philadelphia Handle Co.
Camden, New Jersey

12300
Potter-Brumfield Div.
AMF Canada LTD.
Guelph, Ontario, Canada

12323
Presin Co., Inc.
Shelton, Connecticut

12327
Freeway Corp. formerly
Freeway Washer & Stamping Co.
Cleveland, Ohio

12443
The Budd Co. Polychem Products
Plastic Products Div.
Bridgeport, Pennsylvania

12615
U.S. Terminals Inc.
Cincinnati, Ohio

12617
Hamlin Inc.
Lake Mills, Wisconsin

12697
Clarostat Mfg. Co.
Dover, New Hampshire

12749
James Electronics
Chicago, Illinois

12856
Micrometals
Sierra Madre, California

12954
Dickson Electronics Corp.
Scottsdale, Arizona

12969
Unitrode Corp.
Watertown, Massachusetts

13103
Thermalloy Co., Inc.
Dallas, Texas

13327
Solitron Devices Inc.
Tappan, New York

13511
Amphenol Cadre Div.
Bunker-Ramo Corp.
Los Gatos, California

13606
Use 56289
Sprague Electric Co.
Transistor Div.
Concord, New Hampshire

13839
Replaced by 23732

14099
Semtech Corp.
Newbury Park, California

14140
Edison Electronic Div.
Mc Gray-Edison Co.
Manchester, New Hampshire

14193
Cal-R-Inc. formerly
California Resistor, Corp.
Santa Monica, California

14298
American Components, Inc.
an Insilco Co.
Conshohocken, Pennsylvania

14655
Cornell-Dublier Electronics
Division of Federal Pacific
Electric Co. Govt. Control Dept.
Newark, New Jersey

14752
Electro Cube Inc.
San Gabriel, California

14869
Replaced by 96853

14936
General Instrument Corp.
Semi Conductor Products Group
Hicksville, New York

15636
Elec-Trol Inc.
Saugus, California

15801
Fenwal Electronics Inc.
Div. of Kidde Walter and Co., Inc.
Framingham, Massachusetts

15818
Teledyne Semiconductors,
formerly Amelco Semiconductor
Mountain View, California

15849
Litton Systems Inc. Useco Div.
formerly Useco Inc.
Van Nuys, California

15898
International Business
Machines Corp.
Essex Junction, Vermont

15909
Replaced by 14140

16258
Space-Lok Inc.
Burbank, California

16299
Corning Glass
Electronic Components Div.
Raleigh, North Carolina

16332
Replaced by 28478

16473
Cambridge Scientific Ind.
Div. of Chemed Corporation
Cambridge, Maryland

16742
Paramount Plastics
Fabricators, Inc.
Downey, California

16758
Delco Electronics
Div. of General Motors Corp.
Kokomo, Indiana

17001
Replaced by 71468

17069
Circuit Structures Lab.
Burbank, California

17338
High Pressure Eng. Co., Inc.
Oklahoma City, Oklahoma

17545
Atlantic Semiconductors, Inc.
Asbury Park, New Jersey

17856
Siliconix, Inc.
Santa Clara, California

17870
Replaced by 14140

18178
Vactec Inc.
Maryland Heights, Missouri

18324
Signetics Corp.
Sunnyvale, California

18612
Vishay Resistor Products Div.
Vishay Intertechnology Inc.
Malvern, Pennsylvania

18736
Voltronics Corp.
Hanover, New Jersey

18927
GTE Sylvania Inc.
Precision Material Group
Parts Division
Titusville, Pennsylvania

19451
Perine Machinery & Supply Co.
Seattle, Washington

19701
Electro-Midland Corp.
Mepco-Electra Inc.
Mineral Wells, Texas

20584
Enochs Mfg. Inc.
Indianapolis, Indiana

## Federal Supply Codes for Manufacturers (cont)

20891
Self-Organizing Systems, Inc.
Dallas, Texas

21604
Bucheye Stamping Co.
Columbus, Ohio

21845
Solitron Devices Inc.
Transistor Division
Riveria Beach, Florida

22767
ITT Semiconductors
Palo Alto, California

23050
Product Comp. Corp.
Mount Vernon, New York

23732
Tracor Inc.
Rockville, Maryland

23880
Stanford Applied Engrng.
Santa Clara, California

23936
Pamotor Div., Wm. J. Purdy Co.
Burlingame, California

24248
Replaced by 94222

24355
Analog Devices Inc.
Norwood, Massachusetts

24655
General Radio
Concord, Massachusetts

24759
Lenox-Fugle Electronics Inc.
South Plainfield, New Jersey

25088
Siemen Corp.
Isilen, New Jersey

25403
Amperex Electronic Corp.
Semiconductor &
Micro-Circuits Div.
Slatersville, Rhode Island

27014
National Semiconductor Corp.
Santa Clara, California

27264
Molex Products
Downers Grove, Illinois

28213
Minnesota Mining & Mfg. Co.
Consumer Products Div.
St. Paul, Minnesota

28425
Serv-/-Link formerly
Bohannan Industries
Fort Worth, Texas

28478
Deltrol Controls Div.
Deltrol Corporation
Milwaukee, Wisconsin

28480
Hewlett Packard Co.
Corporate HQ
Palo Alto, California

28520
Heyman Mfg. Co.
Kenilworth, New Jersey

29083
Monsanto, Co., Inc.
Santa Clara, California

29604
Stackpole Components Co.
Raleigh, North Carolina

30148
AB Enterprise Inc.
Ahoskie, North Carolina

30323
Illinois Tool Works, Inc.
Chicago, Illinois

31091
Optimax Inc.
Colmar, Pennsylvania

32539
Mura Corp.
Great Neck, New York

32767
Griffith Plastic Corp.
Burlingame, California

32879
Advanced Mechanical
Components
Northridge, California

32897
Erie Technological Products, Inc.
Frequency Control Div.
Carlisle, Pennsylvania

32997
Bourns Inc.
Trimpot Products Division
Riverside, California

33173
General Electric Co.
Products Dept.
Owensboro, Kentucky

34333
Silicon General
Westminister, California

34335
Advanced Micro Devices
Sunnyvale, California

34802
Electromotive Inc.
Kenilworth, New Jersey

37942
P.R. Mallory & Co., Inc.
Indianapolis, Indiana

42498
National Radio
Melrose, Massachusetts

43543
Nytronics Inc.
Transformer Co. Div.
Geneva, New York

44655
Ohmite Mfg. Co.
Skokie, Illinois

49671
RCA Corp.
New York, New York

49956
Raytheon Company
Lexington, Massachusetts

50088
Mostek Corp.
Carrollton, Texas

50579
Litronix Inc.
Cupertino, California

51605
Scientific Components Inc.
Linden, New Jersey

53021
Sangamo Electric Co.
Springfield, Illinois

54294
Cutler-Hammer Inc. formerly
Shallcross, A Cutter-Hammer Co.
Selma, North Carolina

55026
Simpson Electric Co.
Div. of Am. Gage and Mach. Co.
Elgin, Illinois

56289
Sprague Electric Co.
North Adams, Massachusetts

58474
Superior Electric Co.
Bristol, Connecticut

60399
Torin Corp. formerly
Torrington Mfg. Co.
Torrington, Connecticut

63743
Ward Leonard Electric Co., Inc.
Mount Vernon, New York

64834
West Mfg. Co.
San Francisco, California

65092
Weston Instruments Inc.
Newark, New Jersey

66150
Winslow Tele-Tronics Inc.
Eaton Town, New Jersey

70485
Atlantic India Rubber Works
Chicago, Illinois

70563
Amperite Company
Union City, New Jersey

70903
Belden Corp.
Geneva, Illinois

71002
Birnback Radio Co., Inc.
Freeport, New York

71400
Bussmann Mfg.
Div. of McGraw-Edison Co.
Saint Louis, Missouri

71450
CTS Corp.
Elkhart, Indiana

71468
ITT Cannon Electric Inc.
Santa Ana, California

71482
Clare, C.P. & Co.
Chicago, Illinois

71590
Centrelab Electronics
Div. of Globe Union Inc.
Milwaukee, Wisconsin

71707
Coto Coil Co., Inc.
Providence, Rhode Island

71744
Chicago Miniature Lamp Works
Chicago, Illinois

71785
TRW Electronics Components
Cinch Connector Operations Div.
Elk Grove Village
Chicago, Illinois

72005
Wilber B. Driver Co.
Newark, New Jersey

72092
Replaced by 06980

72136
Electro Motive Mfg. Co.
Williamantic, Connecticut

72259
Nytronics Inc.
Pelham Manor, New Jersey

72619
Dialight Div.
Amperex Electronic Corp.
Brooklyn, New York

72653
G.C. Electronics
Div. of Hydrometals, Inc.
Brooklyn, New York

72665
Replaced by 90303

72794
Dzus Fastener Co., Inc.
West Islip, New York

72928
Gulton Ind. Inc.
Gudeman Div.
Chicago, Illinois

## Federal Supply Codes for Manufacturers (cont)

72982
Erie Tech. Products Inc.
Erie, Pennsylvania

73138
Bechman Instrument Inc.
Helipot Division
Fullerton, California

73293
Hughes Aircraft Co.
Electron Dynamics Div.
Torrance, California

73445
Amperex Electronic Corp.
Hicksville, New York

73559
Carling Electric Inc.
West Hartford, Connecticut

73586
Circle F Industries
Trenton, New Jersey

73734
Federal Screw Products, Inc.
Chicago, Illinois

73743
Fischer Special Mfg. Co.
Cincinnati, Ohio

73899
JFD Electronics Co.
Components Corp.
Brooklyn, New York

73949
Guardian Electric Mfg. Co.
Chicago, Illinois

74199
Quan Nichols Co.
Chicago, Illinois

74217
Radio Switch Corp.
Marlboro, New Jersey

74276
Signalite Div.
General Instrument Corp.
Neptune, New Jersey

74306
Piezo Crystal Co.
Carlisle, Pennsylvania

74542
Hoyt Elect. Instr. Works
Penacook, New Hampshire

74970
Johnson E.F., Co.
Waseca, Minnesota

75042
TRW Electronics Components
IRC Fixed Resistors
Philadelphia, Pennsylvania

75376
Kurz-Kasch Inc.
Dayton, Ohio

75378
CTS Knights Inc.
Sandwich, Illinois

75382
Kulka Electric Corp.
Mount Vernon, New York

75915
Littlefuse Inc.
Des Plaines, Illinois

76854
Oak Industries Inc.
Switch Div.
Crystal Lake, Illinois

77342
AMF Inc.
Potter & Brumfield Div.
Princeton, Indiana

77638
General Instrument Corp.
Rectifier Division
Brooklyn, New York

77969
Rubbercraft Corp. of CA. LTD.
Torrance, California

78189
Shakeproof
Div. of Illinois Tool Works Inc.
Elgin, Illinois

78277
Sigma Instruments, Inc.
South Braintree, Massachusetts

78488
Stackpole Carbon Co.
Saint Marys, Pennsylvania

78553
Eaton Corp. Engineered
Fastener Div.
Tinnerman Plant
Cleveland, Ohio

79136
Waldes Kohinoor Inc.
Long Island City, New York

79497
Western Rubber Company
Goshen, Indiana

79963
Zierick Mfg. Corp.
Mt. Kisko, New York

80031
Electro-Midland Corp.
Mepco Div.
A North American Phillips Co.
Norristown, New Jersey

80145
LFE Corp., Process Control Div.
formerly API Instrument Co.
Chesterland, Ohio

80183
Use 56289
Sprague Products
North Adams, Massachusetts

80294
Bourns Inc., Instrument Div.
Riverside, California

80583
Hammarlund Mfg. Co., Inc.
Red Bank, New Jersey

80640
Arnold Stevens, Inc.
South Boston, Massachusetts

81073
Grayhill, Inc.
La Grange, Illinois

81312
Winchester Electronics
Div. of Litton Industries Inc.
Oakville, Connecticut

81483
Therm-O-Disc Inc.
Mansfield, Ohio

81483
International Rectifier Corp.
Los Angeles, California

81590
Korry Mfg. Co.
Seattle, Washington

81741
Chicago Lock Co.
Chicago, Illinois

82305
Palmer Electronics Corp.
South Gate, California

82389
Switchcraft Inc.
Chicago, Illinois

82415
North American Phillips
Controls Corp.
Frederick, Maryland

82872
Roanwell Corp.
New York, New York

82877
Rotron Inc.
Woodstock, New York

82879
ITT Royal Electric Div.
Pawtucket, Rhode Island

83003
Varo Inc.
Garland, Texas

83058
The Carr Co., United Can Div.
of TRW
Cambridge, Massachusetts

83298
Bendix Corp.
Electric Power Div.
Eatontown, New Jersey

83330
Herman H. Smith, Inc.
Brooklyn, New York

83478
Rubbercraft Corp.
of America, Inc.
West Haven, Connecticut

83594
Burroughs Corp.
Electronic Components Div.
Plainfield, New Jersey

83740
Union Carbide Corp.
Battery Products Div.
formerly Consumer Products Div.
New York, New York

84171
Arco Electronics
Great Neck, New York

84411
TRW Electronic Components
TRW Capacitors
Ogallala, Nebraska

84613
Fuse Indicator Corp.
Rockville, Maryland

84682
Essex International Inc.
Industrial Wire Div.
Peabody, Massachusetts

86577
Precision Metal Products
of Malden Inc.
Stoneham, Massachusetts

86684
Radio Corp. of America
Electronic Components Div.
Harrison, New Jersey

86928
Seastrom Mfg. Co., Inc.
Glendale, California

87034
Illuminated Products Inc.
Subsidiary of Oak Industries Inc.
Anahiem, California

88219
Gould Inc.
Industrial Div.
Trenton, New Jersey

88245
Litton Systems Inc.
Useco Div.
Van Nuys, California

88419
Cornell-Dubilier Electronic Div.
Federal Pacific Co.
Fuquay-Varian, North Carolina

88486
Plastic Wire & Cable
Jewitt City, Connecticut

88690
Replaced by 04217

89536
John Fluke Mfg. Co., Inc.
Seattle, Washington

89730
G.E. Co., Newark Lamp Works
Newark, New Jersey

90201
Mallory Capacitor Co.
Div. of P.R. Mallory Co., Inc.
Indianapolis, Indiana

90211
Use 56365
Square D Co.
Chicago, Illinois

90215
Best Stamp & Mfg. Co.
Kansas City, Missouri

90303
Mallory Battery Co.
Div. of Mallory Co., Inc.
Tarrytown, New York

91094
Essex International Inc.
Suglex/IWP Div.
Newmarket, New Hampshire

91293
Johanson Mfg. Co.
Boonton, New Jersey

91407
Replaced by 58474

91502
Associated Machine
Santa Clara, California

91506
Augat Inc.
Attleboro, Massachusetts

91637
Dale Electronics Inc.
Columbus, Nebraska

91662
Elco Corp.
Willow Grove, Pennsylvania

91737
Use 71468
Gremar Mfg. Co., Inc.
ITT Cannon/Gremar
Santa Ana, California

91802
Industrial Devices, Inc.
Edgewater, New Jersey

91833
Keystone Electronics Corp.
New York, New York

91836
King's Electronics Co., Inc.
Tuckahoe, New York

91929
Honeywell Inc.
Micro Switch Div.
Freeport, Illinois

91934
Miller Electric Co., Inc.
Div. of Aunet
Woonsocket, Rhode Island

92194
Alpha Wire Corp.
Elizabeth, New Jersey

93332
Sylvania Electric Products
Semiconductor Products Div.
Woburn, Massachusetts

94145
Replaced by 49956

94154
Use 94988
Wagner Electric Corp.
Tung-Sol Div.
Newark, New Jersey

94222
Southco Inc. formerly
South Chester Corp.
Lester, Pennsylvania

95146
Alco Electronic Products Inc.
Lawrence, Massachusetts

95263
Leecraft Mfg. Co.
Long Island City, New York

95264
Replaced by 98278

95275
Vitramon Inc.
Bridgeport, Connecticut

95303
RCA Corp.
Receiving Tube Div.
Cincinnati, Ohio

95348
Gordo's Corp.
Bloomfield, New Jersey

95354
Methode Mfg. Corp.
Rolling Meadows, Illinois

95712
Bendix Corp.
Electrical Components Div.
Microwave Devices Plant
Franklin, Indiana

95987
Weckesser Co. Inc.
Chicago, Illinois

96733
San Fernando Electric Mfg. Co.
San Fernando, California

96853
Gulton Industries Inc.
Measurement and Controls Div.
formerly Rustrak Instruments Co.
Manchester, New Hampshire

96881
Thomson Industries, Inc.
Manhasset, New York

97540
Master Mobile Mounts, Div. of
Whitehall Electronics Corp.
Ft. Meyers, Florida

97913
Industrial Electronic
Hardware Corp.
New York, New York

97945
Penwalt Corp.
SS White Industrial Products Div.
Piscataway, New Jersey

97966
Replaced by 11358

98094
Replaced by 49956

98159
Rubber-Teck, Inc.
Gardena, California

98278
Malco A Microdot Co., Inc.
Connector & Cable Div.
Pasadena, California

98291
Sealectro Corp.
Mamaroneck, New York

98388
Royal Industries
Products Div.
San Diego, California

98743
Replaced by 12749

98925
Replaced by 14433

99120
Plastic Capacitors, Inc.
Chicago, Illinois

99217
Bell Industries Elect.
Comp. Div.
formerly Southern Elect. Div.
Burbank, California

99392
STM
Oakland, California

99515
ITT Jennings Monrovia Plant
Div. of ITT Jennings formerly
Marshall Industries Capacitor Div.
Monrovia, California

99779
Use 29587
Bunker-Ramo Corp.
Barnes Div.
Landsdowne, Pennsylvania

99800
American Precision Industries Inc.
Delevan Division
East Aurora, New York

99942
Centrelab Semiconductor
Centrelab Electronics Div. of
Globe-Union Inc.
El Monte, California

Toyo Electronics
(R-Ohm Corp.)
Irvine, California

National Connector
Minneapolis, Minnesota

# U.S. SALES OFFICES for all Fluke products

**AK, Anchorage**
Harry Lang & Associates
1371 Hillcrest Drive #303
Anchorage, AK 99503
(907) 279-5741

**AL, Huntsville**
John Fluke Mfg. Co., Inc.
3322 Memorial Parkway
Huntsville, AL 35801
(205) 881-6220
(404) 396-3224 (Atlanta)

**AZ, Tempe**
John Fluke Mfg. Co., Inc.
2125 S. 48th Street
Suite 104
Tempe, AZ 85282
(602) 967-8724
(602) 790-9881 (Tucson)

**CA, Los Angeles**
John Fluke Mfg. Co., Inc.
20902 South Bonita St.
Carson, CA 90746
(213) 538-3900 or
(714) 761-2449

**CA, Santa Clara**
John Fluke Mfg. Co., Inc.
2300 Walsh Ave., Bldg. K
Santa Clara, CA 95050
(408) 727-0513

**CA, Tustin**
John Fluke Mfg. Co., Inc.
15445 Red Hill Ave., Suite F
Tustin, CA 92680
(714) 838-8863
(714) 226-1254 (San Diego)

**CO, Denver**
John Fluke Mfg. Co., Inc.
1980 South Quebec St. #4
Denver, CO 80231
(303) 750-1222

**CT, Hartford**
John Fluke Mfg. Co., Inc.
124 Hebron Ave.
Glastonbury, CT 06033
(203) 633-0777

**FL, Orlando**
John Fluke Mfg. Co.,Inc.
940 N. Fern Creek Ave.
Orlando, FL 32803
(305) 896-4881

**HI, Honolulu**
EMC Corporation
2979 Ualena St.
Honolulu, HI 96819
(808) 836-1138

**IA, Iowa City**
John Fluke Mfg. Co., Inc.
1027 Hollywood Blvd., #309
Iowa City, IA 52240
(319) 354-2811

**IL, Chicago**
John Fluke Mfg. Co., Inc.
1400 Hicks Road
Rolling Meadows, IL 60008
(312) 398-0850

**IN, Indianapolis**
John Fluke Mfg. Co., Inc.
5610 Crawfordsville Rd.
Suite 802
Indianapolis, IN 46224
(317) 244-2456

**KA, Kansas City**
John Fluke Mfg. Co., Inc.
4550 West 109th St.
Suite 130
Shawnee Mission, KA 66211
(913) 381-9800

**MA, Burlington**
John Fluke Mfg. Co., Inc.
25 "B" Street
Burlington MASS
(617) 273-4674

**MD, Rockville**
John Fluke Mfg. Co., Inc.
5640 Fishers Lane
Rockville, MD 20852
(301) 770-1570
(301) 792-7060 (Baltimore)

**MI, Detroit**
John Fluke Mfg. Co., Inc.
13955 Farmington Rd.
Livonia, MI 48154
(313) 522-9140

**MN, Minneapolis**
John Fluke Mfg. Co., Inc.
7373 West 147th Street
Suite 196
Apple Valley, MN 55124
(612) 432-9400

**MO, St. Louis**
John Fluke Mfg. Co., Inc.
300 Brookes Dr., Suite 100
Hazelwood, MO 63042
(314) 731-3388

**NC, Greensboro**
John Fluke Mfg. Co., Inc.
1310 Beaman Place
Greensboro, NC 27408
(919) 273-1918

**NJ, Paramus**
John Fluke Mfg. Co., Inc.
P.O. Box 930
West 75 Century Road
Paramus, NJ 07652
(201) 262-9550

**NM, Albuquerque**
John Fluke Mfg. Co., Inc.
1108 Alvarado Drive N.E.
Albuquerque, NM 87110
(505) 265-8431

**NY, Rochester**
John Fluke Mfg. Co., Inc.
4515 Culver Road
Rochester, NY 14622
(716) 266-1400

**OH, Cleveland**
John Fluke Mfg. Co., Inc.
7830 Freeway Circle
Middleburg Heights, OH 44130
(216) 234-4540

**OH, Dayton**
John Fluke Mfg. Co., Inc.
4756 Fishburg Rd.
Dayton, OH 45424
(513) 233-2238

**OR, Portland**
John Fluke Mfg. Co., Inc.
18360 S.W. Springfield Lane
Aloha, OR 97007
(503) 642-1342

**PA, Philadelphia**
John Fluke Mfg. Co., Inc.
1010 West 8th Ave., Suite H
King of Prussia, PA 19406
(215) 265-4040
(412) 261-5171 (Pittsburgh)

**TX, Austin**
John Fluke Mfg. Co., Inc.
111 W. Anderson Lane
Suite 213
Austin, TX 78752
(512) 478-9901
(512) 340-2621 (San Antonio)

**TX, Dallas**
John Fluke Mfg. Co., Inc.
14400 Midway Road
Dallas, TX 75234
(214) 233-9990

**TX, Houston**
John Fluke Mfg. Co., Inc.
1014 Wirt Road, Suite 270
Houston, TX 77055
(713) 683-7913

**UT, Salt Lake City**
John Fluke Mfg. Co., Inc.
782 East 8325 Street
Sandy, UT 84070
(801) 566-4864

**WA, Seattle**
John Fluke Mfg. Co., Inc.
975 Industry Drive
Seattle, WA 98188
(206) 575-3765

**For more information on Fluke products or Sales Offices you may dial (800) 426-0361 toll-free in most of U.S. From Alaska, Hawaii, or Washington, phone (206) 774-2481. From other countries phone (206) 774-2398.**

John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, WA 98206. Phone (206) 342-6300
Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands. Phone (013) 673973
Litho in U.S.A. 3/81

FLUKE®

# INTERNATIONAL SALES OFFICES

**Argentina** ●
Coasin, S.A.
Virrey del Pino 4071
Buenos Aires, Argentina
Tel: 525130, TLX: 390122284

**Australia** ●
Elmeasco Instruments Pty Ltd.
P.O. Box 30, Concord, N.S.W.
Australia 2137
Tel: (2) 736-2888, TLX: 79025887

Elmeasco Instruments Pty Ltd.
P.O. Box 107
Mt. Waverly, VIC. 3149
Australia
Tel: 233-4044
TLX: 36206 (ELMVIC)

Elmeasco Instruments Pty Ltd.
Professional Suite's Bldg.
B.P.O. Box 2360
Brisbane, 4001, Australia
Tel: (07) 229-3161

Elmeasco Instruments Pty Ltd.
P.O. Box 1240
G.P.O. Adelaide 5001
South Australia

Elmeasco Instruments Pty. Ltd.
P.O.Box 95, Gosnells
West Australia 6110
Tel: (09) 348-3362

**Austria** ■
Walter Rekirsch
Elektronische Gerate GmbH & Co.
Vertriebs-KG., Obachgasse 28
A-1220 Vienna, Austria
Tel: (0222) 23555 TLX: 134759

**Belgium** ■
Fluke (Belgium) S.A./N.V.
6, Rue de Geneve
1140 Brussels, Belgium
Tel: (2) 2164090, TLX: 26312

**Bolivia** ●
Coasin Bolivia S.R.L.
Casilla 7295, La Paz, Bolivia
Tel: 40962

**Brazil** ●
Arotec S.A.
Industria e Comercio
Av. Pacaembu 811
01234 Sao Paulo S.P., Brazil
Tel:(011) 826-2266, TLX: 1122207

Arotec S.A.
Rua Araguari, 1705 s/402
30.000 Belo Horizonte M.G., Brazil

Tel: 335-7735

Arotec S.A.
Av. Rio Branco, 277, Grupo 1309
02000 Rio de Janeiro, R.J., Brazil
Tel: (021) 242-9776

**Brunei** ●
Rank O'Connor's (PTE) Limited
No. 8, BK.D
Surfri Shop House Complex
Mile 1, Jalong Tutong
Bandar Seri Begawan, Brunei
Tel: 26680

**Bulgaria** ■
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**Canada** ●
Allan Crawford Assoc., Ltd.
#14 1935 30th Ave. N.E.
Calgary, Alberta T2E 6Z5
Tel: (403) 230-1341

Allan Crawford Assoc., Ltd.
3795 William Street
Burnaby, British Columbia V5C 3H3
Tel: (604) 294-1326

Allan Crawford Assoc., Ltd.
192 Joseph Zatzman Dr.
Suite 4
Burnside Industrial Park
Dartmouth, Nova Scotia B3B 1N4
Tel: (902) 463-9360

Allan Crawford Assoc., Ltd.
881 Lady Ellen Place
Ottawa, Ontario K1Z 5L3
Tel: (613) 722-7682

Allan Crawford Assoc., Ltd.
6503 Northam Drive
Mississauga, Ontario L4V 1J5
Tel: (416) 678-1500

Allan Crawford Assoc., Ltd.
7018 cote de Liesse
St. Laurent, Quebec H4T 1E7
Tel: (514) 731-8564

**Chad** ■
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**Chile** ●
Intronica Chile Ltda.
Manuel Montt 024 - Of. D
Casilla 16228, Santiago 9, Chile
Tel: 44940
TLX: No 40301 Cab. Publ.,
Attn: Intronica Chile

**China, People's Republic of** ●
Fluke International Corporation
P.O. Box 43210
Mountlake Terrace, WA 98043
Tel: (206) 774-2398
TLX: 152662 JOHNFLUKE MTLT

**Colombia** ●

Coasin Ltda.
Carrera 13, No. 37-37, Of. 401
Ap. Aero 29583
Bogota DE, Colombia
Tel: 232-45-32, TLX: 45787

**Cyprus** ■
Chris Radiovision Ltd.
P.O. Box 1989, Nicosia, Cyprus
Tel: 66121, TLX: 2395

**Czechoslovakia** ■
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**Denmark** ■
Tage Olsen A/S
Ballerup Byvej 222
DK - 2750 Ballerup, Denmark
Tel: (2) 658111, TLX: 35293

**Ecuador** ●
Proteco Coasin Cia., Ltda.
Edificio "Jerico"
Ave. 12 de Octubre #2285 y
Ave. Orellana (Planta Baja)
Quito, Ecuador
Tel: 529684, TLX: 2865 Protec Ed

Proteco Coasin Cia., Ltda.
Calderon 103Y Malecon
Casilla #9733
Guayaquil, Ecuador
Tel: 526093

**Egypt and Sudan** ■
Lotus Engineering Organisation
P.O. Box 1252
22, Kaft El Nil
Cairo, Egypt
Tel: 971617, TLX: 92504

**Eire (Republic of Ireland)** ■
EURO Electronics
32 Brews Hill
Naven, County Meath, Ireland
Tel: 46-23577, TLX: 3182

**Ethiopia** ■
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**Finland** ■
Oy Findip AB, Teollisuustie 7
02700 Kauniainen, Finland
Puh: (0) 5052255
TLX: 123129

**France** ■
M.B. Electronique S.A.
Rue Fourny 606, Z1 Centre
78530 BUC
B.P. No. 31
78530 BUC, France
Tel: (3) 9568131, TLX: 695414

**German Democratic Republic** ■
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**German Federal Republic** ■
Fluke (Deutschland) GmbH
Max-Hueber StraBe 8
8045 Ismaning, West Germany
Tel: (089) 96251, TLX: 522472
Rapifax: (089) 966718

Fluke (Deutschland) GmbH
MeineckestraBe 53
4000 Dusseldorf 30, West Germany
Tel: (0211) 450831, TLX: 8585576

Fluke (Deutschland) GmbH
Oberer Kirchhaldenweg 135
7000 Stuttgart 1, West Germany
Tel: (0711) 694091, TLX: 722518

Fluke (Deutschland) GmbH
Hubertusallee 46
1000 Berlin-33, West Germany
Tel: (030) 8911090
TLX: 0184978

**Greece** ■
Hellenic Scientific Representations Ltd.
11, Vrasside Street
Athens 615, Greece
Tel: (1) 711140, TLX: 219330

**Hong Kong** ●
Schmidt & Co. (H.K.) Ltd.
28th F1. Wing on Centre
111 Connaught Road
Central Hong Kong
Tel: 5-455644
TLX: 74766 SCHMC HX

**Hungary** ■
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**Iceland** ●
Kristjan O. Skagfjord Ltd.
P.O. Box 906
Reykjavik, Iceland
Tel: 24120, TLX: 2133

**India** ●
Hinditron Services Pvt. Ltd.
69/A.L. Jagmohandas Marg
Bombay 400 006, India
Tel: 811316,
TLX: 953-112326 Hspl In

Hinditron Services Pvt. Ltd.
33/44-A 8th Main Road
Raj Mahl Vilas Extension
Bangalore 560 080, India
Tel: 33139
TLX: 0845741

Hinditron Services Pvt. Ltd.
Shantiniketan, Office No.6
6th Floor, 8 Camac Street
Calcutta 700 017, India
Tel: 434032, 447541

Hinditron Services Pvt. Ltd.
15 Community Centre, Panchshila Park
New Delhi 110 017, India
Tel: 619118

Hinditron Services Pvt. Ltd.
Srinath Complex, 5th Floor
1-1-58/1 to 1-1-58/11
Sarojini Devi Road
Secunderabad 500 003, India
Tel: 61705

**Indonesia** ●
P.T. Dwi Tunggal Jaya Sakti
Sangga Buana Bldg., 1st Floor
Jl. Senen Raya 44, P.O. Box 4435
Jakarta, Indonesia
Tel: 367390-9, TLX: 46624

**Iran** ■
Irantronics Company Ltd.
20, Salm Road
Roosevelt Avenue, Tehran, Iran
Tel: 828294/831564
TLX: 212956

**Iraq** ■
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**Ireland** ■
Euro Electronics
32 Brews Hill
Naven County Meath, Ireland
Tel: (46) 23577, TLX: 3182

**Israel** ■
R.D.T. Electronics Engineering Ltd.
P.O. Box 75
46, Sokolov Street
Ramat Hasharon 47235, Israel
Tel: (3) 483212, TLX: 32143

FLUKE®
John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, WA 98206. Phone (206) 342-6300
Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands. Phone (013) 673973
Litho in U.S.A. 3/81

**Italy ■**
Sistrel S.p.A.
Via Giuseppe Armellini No. 37
00143 Rome, Italy
Tel: (6) 5915551, TLX: 68356

Sistrel S.p.A.
Via Pelizza da Volpedo 59
20092 Cinisello besamo
Milan, Italy
Tel: (2) 6181893, TLX: 334643

Sistrel S.p.A.
Via Cintia Parco S. Paolo 35
80126 Naples, Italy
Tel: (81) 7679700

**Japan ●**
John Fluke Mfg. Co., Inc.
Japan Branch
(PC Board Testers only)
1 Higashikata-machi
Midori-ku
Yokohama 226, Japan
Tel: (045) 473-5425
TLX: 3823-666 FLKJPJ

Tokyo Electron Ltd.
38 FL Shinjuko Nomura Bldg.
1-26-2, Nishi-Shinjuku
Shinjuku-ku
Tokyo 160, Japan
Tel: 03-343-4411, TLX: 2322220

**Kenya ●**
ADCOM Ltd.
P.O. Box 30070
Nairobi, Kenya, East Africa
Tel: 331955, TLX: 22639

**Korea ●**
Electro-Science Korea Co.
C.P.O. Box 8446
Rm. 501, Boondo Bldg.
56-12 Jangchung-IKa
Jung-ku
Seoul, Korea
Tel: 261-7702, TLX: K25381

**Kuwait ■**
Tareq Company
P.O. Box Safat 20506
Kuwait, Arabian Gulf
Tel: 436100/436045
TLX: 2315

**Lebanon and Jordan ■**
Mabek (Electronics Division)
P.O. Box 11-3823
Beirut, Lebanon
Tel: 252631/348728
TLX: 22889

**Libya ■**
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**Malaysia ●**
Rank O'Connor's (PTE) Limited
P.O. Box 91, Petaling Jaya
Selangor, West Malaysia
Tel: 566599
TLX: OCONOR MA37649

Rank O'Connor's (PTE) Limited
Lot No. 5 Taman Mesra
Mile 3, Jalan Penampang
Kota Kinabulu, East Malaysia
Tel: 55322, TLX: MA80286

**Mexico ●**
Christensen S.A. De C.V.
Instrumentos Electronicos de Medicion
Melchor Ocampo 150-8
Mexico 4 D.F., Mexico
Tel: (905) 535-2258
TLX: 1775612

**Morocco ■**
Mainvest
Residence Moulay Ismail, Bat. C.
12, Place des Alaouites
Rabat, Morocco
Tel: (7) 23990, TLX: 31036

**Netherlands ■**
Fluke (Nederland) B.V.
Zonneban 39
3606 CH Maarssen
P.O. Box 225
3600 AE Maarssen
Tel: (030) 436514, TLX: 47128

**New Zealand ●**
W & K McLean Ltd.
P.O. Box 18065, Glen Innes
Auckland, New Zealand
Tel: 587-037
TLX: N.Z. 7912763

W & K McLean Ltd.
P.O. Box 2421
Christchurch, New Zealand
Tel: 851-450

W & K McLean Ltd.
P.O. Box 496
Wellington, New Zealand
Tel: 851-450

**Nigeria ●**
Mofat Engineering Co., Ltd.
P.O. Box 6369
Lagos, Nigeria
TLX: 21353, Attn: MOFAT

**Norway ■**
Morgenstierne & Co A/S
Konghellegate 3/5
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: (2) 356110, TLX: 11719

**Pakistan ●**
Pak International Operations
505 Muhammadi House
I.I. Chundrigar Road
P.O. Box 5323, Karachi, Pakistan
Tel: 221127, TLX: 24494

**PDR Yemen ■**
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**Peru ●**
Importaciones Y Representaciones
Electronicas S.A.
Avda. Franklin D. Roosevelt 105
Lima 1, Peru
Tel: 288650, TLX: 37425663

**Phillipines ●**
Spark Radio & Electric Supply
P.O. Box 610, Greenhills, San Juan
M. Manila, Phillipines
Tel: 78-78-16
TLX: 27901 RLA PH

**Poland ■**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**Portugal ■**
Decada-Equipamentos
de Electronica, Lda.
P.O. Box 1128, 1003
Lisbon Codex, Portugal
Tel: (1) 574984, TLX: 18469

**Qatar ■**
Technology Organisation
P.O. Box 5549, Doha, Qatar
Tel: 321431, TLX: 4581

**Romania ■**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**Saudi Arabia ■**
Electronic Equipment Marketing Co.Ltd.
P.O. Box 3750
Riyadh, Saudi Arabia
Tel: 4032761, TLX: 201120

**Singapore ●**
Rank O'Connor's (PTE) Limited
98 Pasir Panjang Road
Singapore 0511
Republic of Singapore
Tel: 637944
TLX: OCONSIN RS21023.

**Somalia ■**
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**South Africa ●**
Fluke S.A. (Pty) Ltd.
P.O. Box 39797, Bramley 2018
Republic of South Africa
Tel: (011) 786-3170, TLX: 424328

**Spain ■**
Hispano Electronca S.A.
Piligono Industrial Urtinsa
Apartado de Correos 48
Alcorcon (Madrid), Spain
Tel: (1) 6194108
TLX: 22404/42634

**Sweden ■**
Teleinstrument AB
P.O. Box 4490
162 04 Vallingby, Sweden
Tel: (8) 380370, TLX: 11347

**Switzerland ■**
Traco Electronic Company Ltd.
Jenatschstrasse 1
8002 Zurich, Switzerland
Tel: (1) 2010711, TLX: 54318

**Syria ■**
Mabek (Electronics Division)
P.O. Box 4238
Damascus, Syria

**Taiwan ●**
CCT Associates, Inc.
P.O. Box 32-79
Taipei, Taiwan, Republic of China
Tel: (02) 391-6894,
TLX: 24263 Longgulf

**Thailand ●**
Dynamic Supply Engineering R.O.P.
12 SOI, Pasana 1, Ekami Sukhumvit 63
Bangkok-11, Thailand
Tel: 3925313
TLX: TH 82938 MONTIEN TH

**Tunesia ■**
Selep S.A.R.L.
6, Rue de Sparte
Tunis - 1000 RP, Tunesia
Tel: (1) 248093, TLX: 13030

**Turkey ■**
Erkman Elektronik Aletler
Ticaret Anonim Sirketi
Necatiby Cad 92/3
Karakoy, Istanbul, Turkey
Tel. (1) 5461
TLX: 23353

**United Arab Emirates & Oman ■**
Haris A1-Afag Ltd.
P.O. Box 545
Sharajah, United Arab Emirates
Tel: 35912/359121/359122/359123
TLX: 23966

**United Kingdom ■**
Fluke (G B) Ltd.
Colonial Way
Watford, Herts, WD2 4TT
United Kingdom
Tel: (0923) 40511, TLX: 934583
Rapifax: (0923) 25067

**Uruguay ●**
Coasin Uruguaya S.R.L.
Cuareim 2196
Casilla de Correos 1400
Correo Central
Montevideo, Uruguay
Tel: 29-31-95, TLX: 37425663

**U.S.S.R. ■**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**Venezuela ●**
Coasin, C.A.
Calle 9 Con Calle 4, Edif. Edinurbi
Piso 3, La Urbina
Apartado De Correos NR-70.136 Los Ruices
Caracus 1070A, Venezuela
Tel: 38-78-42, TLX: 2102

**Yemen ■**
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**Yugoslavia ■**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT 15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**■ Supplied and Supported by —**
Fluke (Holland) B.V.
P.O. Box 5053, Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973, TLX: 52237

**● Supplied and Supported by —**
Fluke International Corporation
P.O. Box C9090
Everett, WA 98206
Tel: (206) 356-6300
TLX: 152662 JOHNFLUKE MTLT

**● Latin America also supported by —**
Sr. Benewaldo Padovani
c/o AROTEC S.A.
Industria e Comercio
Av. Pacaembu 811
01234 Sao Paulo S.P., Brazil
Tel: (011) 826-2266
TLX: 1122207 AROT BR

John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, WA 98206. Phone (206) 342-6300
Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands. Phone (013) 673973

Litho in U.S.A. 3/81

FLUKE®

# TECHNICAL SERVICE CENTERS

## U.S. & Canada

**CA, Burbank**
Fluke Technical Center
2020 N. Lincoln Street
Burbank, CA 91504
(213) 849-4641

**CA, Santa Clara**
Fluke Technical Center
1980 S. Quebec St., Unit 4
Denver, CO 80231
(303) 750-1228

**FL, Orlando**
Fluke Technical Center
940 N. Fern Creek Avenue
Orlando, FL 32803
(305) 896-2296

**IL, Rolling Meadows**
Fluke Technical Center
1400 Hicks Road
Rolling Meadows, IL 60008
(312) 398-5800

**MA, Waltham**
Fluke Technical Center
25 "B" Street
Burlington, MA 01803
(617) 273-4678

**MD, Rockville**
Fluke Technical Center
5640 Fishers Lane
Rockville, MD 20852
(301) 770-1576

**MN, Apple Valley**
Fluke Technical Center
Suite 196
7373 West 147th Street
Apple Valley, MN 55124
(612) 432-7050

**NC, Greensboro**
Fluke Technical Center
1310 Beaman Place
Greenboro, NC 27408
(919) 273-1918

**NJ, Paramus**
Fluke Technical Center
West 75th Century Road
Paramus, NJ 07652
(201) 262-9550

**TX, Dallas**
Fluke Technical Center
14400 Midway Road
Dallas, TX 75240
(214) 233-9945

**WA, Mountlake Terrace**
Fluke Technical Center
21707 66th Avenue West
Suite 1
Mountlake Terrace, WA 98043
(206) 774-2206

**ALB, Calgary**
Allan Crawford Assoc., Ltd.
#14 1935 30th Ave. N.E.
Calgary, Alberta T2E 6Z5
(403) 230-1341

**ONT, Mississauga**
Allan Crawford Assoc., Ltd.
6503 Northam Drive
Mississauga, Ontario 1.4V 1J2
(416) 678-1500

**QUE, Montreal**
All Crawford Assoc., Ltd.
7918 Cote de Liesse
Montreal, Quebec H4I 1E7
(514) 731-8564

**B.C., Burnaby**
All Crawford Assoc. Ltd.
795 William St.
Burnaby, B.C. V5C 3H3
(604) 294-1326

## Other Areas

**Argentina**
Fluke Latin American
Service Headquarters
Virrey del Pino 4071
Buenos Aires, Argentina
Tel: 523185

**Australia**
Elmeasco Instruments Pty Ltd.
P.O. Box 30
Concord, N.S.W.
Australia 2137
Tel: (02) 736-2888

**Australia**
Elmeasco Instruments Pty. Ltd.
P.O. Box 107
Mr. Waverly, VIC 3149
Australia
Tel: (03) 2334044

**Australia**
Elmeasco Instruments Pty. Ltd.
GPO Box 2360
Brisbane, Queensland 4001
Australia
Tel: (07) 229-3161

**Austria**
Walter Rekirsch
Elektronische Gerate GmbH & Co.
Vertriebs-KG.
LiechtensteinstraBe 97/6
A-1090 Vienna, Austria
Tel: 09-43-222-347646

**Belgium**
Fluke (Belgium) S.A./N.V.
6, Rue de Geneve
1140 Brussels, Belgium
Tel: 09-32-2-2164090

**Brazil**
Arotec S.A.
Industria e Comercio
Av. Pacaembu 811
01234 Sao Paulo S.P., Brazil
Tel: 826-2266

**Chile**
Intronica Chile Ltda.
Casilla 16228
Santiago 9, Chile
Tel: 44940

**Colombia**
Coasin Ltda.
Carrera 13, No. 37-43, Of. 401
Ap. Aero 29583
Bogota DE, Colombia
Tel: 285-0230

**Denmark**
Tage Olson A/S
Ballerup Byvej 222
DK-2750 Ballerup
Denmark
Tel: (01)2-65 81 11

**Ecuador**
Proteco Coasin Cia., Ltda.
Edificia "Jerico"
Ave. 12 de Octubre #2285 y
Ave. Orellana (Planta Baja)
Quito, Ecuador
Tel: 526759

**Egypt**
Lotus Engineering Organisation
P.O. Box 1252
Cairo, Egypt
Tel: 971617

**Finland**
Oy Findip AB
Teollisuustie 7
02700 Kauniainen
Finland
Tel: 09-358-0-502255

**France**
M.B. Electronique S.A.
Rue Fourny
ZAC de BUC
B.P. No. 31
78530 BUC, France
Tel: 09-33-1-9568131

**Greece**
Hellenic Scientific
Representations Ltd.
11, Vrassida Street
Athens 615, Greece
Tel: 09-30-1-711140

**Hong Kong**
Schmidt & Co (H.K.) Ltd.
28th Fl. Wing On Centre
111 Connaught Road
Central Hong Kong
Tel: 5-455644

**India**
Hinditron Services Pvt. Ltd.
Field Service Centre
33/44-A, 8th Main Road
Rajmahal Vilas Extn.
Bangalore 560 080, India

**India**
Hinditron Services Pvt. Ltd.
69/A.L. Jagmohandas Marg
Bombay 400 006, India
Tel: 365344

**India**
Hinditron Services Pvt. Ltd.
15, Community Centre
Panchashila Park
Delhi 110 010, India

**Israel**
R.D.T. Electronics Engineering Ltd.
P.O. Box 75
46, Sokolov Street
Ramat Hasharon 47235
Israel
Tel: 09-972-3-483211

**Italy**
Sistrel S.p.A.
Via Pelizza da Volpedo 59
20092 Cinisello Besamo
Milan, Italy
Tel: (2) 6181893

**Italy**
Sistrel S.p.A.
Via Guiseppe Armellini No. 37
00143 Rome, Italy
Tel: 09-39-6-5915551

**Japan**
John Fluke Mfg. Co., Inc.
Japan Branch
1 Higashikata-machi
Midori-ku
Yokohama 226, Japan
Tel: (045) 473-5428

**Korea**
Electro-Science Korea Co.
C.P.O. Box 8446
Rm. 707 Bowon Bldg.
490 Chongro - 5 Ka
Chongro-ku
Seoul, Korea
Tel: 261-7702

**Malasia**
Rank O'Connor's (Malasia) SDN. BHD.
P.O. Box 91
Petaling Jaya, Selangor
West Malaysia
Tel: 566599

**Mexico**
C.J. Christensen S.A. De C.V.
Melchor Ocampo 150-8
Mexico 4 D.F., Mexico
Tel: (905) 535-2258

**Netherlands**
Fluke (Nederland) B.V.
P.O. Box 5053
5004 EB Tilburg
The Netherlands
Tel: 684971

**New Zealand**
W & K McLean Ltd.
P.O. Box 18065
Glen Innes
Auckland, New Zealand
Tel: 587-037

**Norway**
Morgenstierne & Co. A/A
Konghellegate 3
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: 09-47-2-356110

**Pakistan**
Pak International Operations
505 Mohammadi House
I.I. Chundrigar Road
Karachi-2 Pakistan
Tel: 221127/239052

**Peru**
Importaciones Y Representaciones
Electronicas S.A.
Avda. Franklin D. Roosevelt 105
Lima 1, Peru
Tel: 288650

**Peru**
Spark Radio and Electric Supply
P.O. Box 610
Greenhills, San Juan
Metro Manila, Philippines
Tel: 78-78-16

**Portugal**
Equipamentos de Laboratorio, Ltda.
P.O. Box 1100
Lisbon 1002, Portugal
Tel: 09-351-1-578936/547512

**Republic of Singapore**
Rank O'Connor's (PTE) Ltd.
98 Pasir Panjang Road
Singapore 0511
Republic of Singapore
Tel: 637944

**Republic of South Africa**
Fluke S.A. (Pty) Ltd.
P.O. Box 39797
Bramley 2018
Republic of South Africa
Tel: (011) 786-3170

**Spain**
Hispano Electronica S.A.
Apartado de Correos 48
Alcorcon (Madrid)
Spain
Tel: 09-341694108

**Sweden**
Teleinstrument AB
P.O. Box 490
S-162 Vallingby 4
Sweden
Tel: -09-46-8-380370

**Switzerland**
Traco Electronic AG
Jenatschstrasse 1
8002 Zurich
Switzerland
Tel: 09-41-1-2010711

**Taiwan**
CCT Associates, Inc.
P.O. Box 32-79
Taipei, Taiwan
Republic of China
Tel: (02) 391-6894, 393-5760

**Thailand**
Dynamic Supply Engineering R.O.P.
12, Soi Pasana 1, Ekami
Sukhumvit 63
Bangkok 11, Thailand
Tel: 3925313

**Turkey**
Erkman Elektronik Aletler
Ticaret Anonim Sirketi
Necatiby Cad 92/3
Karakoy, Istanbul, Turkey
Tel: 09-44-1-5461

**United Kingdom**
Fluke (GB) Ltd.
Colonial Way
Watford, Herts, WD2 4TT
United Kingdom
Tel: 09-4492340511

**Uruguay**
Coasin Uruguaya S.R.L.
Cassilla de Correos 1400
Correo Central
Montevideo, Uruguay
Tel: 29-31-95

**Venezuela**
Coasin C.A.
Calle 9 Con Calle 4
Edif. Edinurbi
Piso 3, La Urbina
Apartado de Correos Nr-70. 136
Los Ruices
Caracas 1070-A, Venezuela
Tel: 387842

**West Germany**
Fluke (Deutschland) GmbH
Krausstrabe 32
8045 Ismaning
West Germany
Tel: (089) 96251

FLUKE®

John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, WA 98206. Phone (206) 342-6300
Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands. Phone (013) 673973

Litho in U.S.A. 3/81

# Appendix 7A
# Manual Change Information

## INTRODUCTION

This appendix contains information necessary to backdate the manual to conform with earlier pcb configurations. To identify the configuration of the pcb's used in your instrument, refer to the revision letter (marked in ink) on the component side of each pcb assembly. Table 7A-1 defines the assembly revision levels documented in this manual.

## NEWER INSTRUMENTS

As changes and improvements are made to the instrument, they are identified by incrementing the revision letter marked on the affected pcb assembly. These changes are documented on a supplemental change/errata sheet which, when applicable, is inserted at the front of the manual.

## OLDER INSTRUMENTS

To backdate this manual to conform with earlier assembly revision levels, perform the changes indicated in Table 7A-1.

## CHANGES

There are no backdating changes at this printing. All pcb assemblies are documented at their original revision level.

Table 7A-1. Manual Status and Backdating Information

| Ref Or Option No. | Assembly Name | Fluke Part No. | *To adapt manual to earlier rev configurations perform changes in descending order (by no.), ending with change under desired rev letter | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | — | A | B | C | D | E | F | G | H | J | K | L | M | N | P | | | | | | | | | |
| A1 | Main PCB Assembly | 510594 | X | | | | | | | | | | | | | | | | | | | | | | |
| A1A1 | Display PCB Assembly | 456921 | | | | | X | | | | | | | | | | | | | | | | | | |
| A2 | AC PCB Assembly | 510602 | X | | | | | | | | | | | | | | | | | | | | | | |
| -003 | Counter Output PCB Assembly | 471672 | | | | | X | | | | | | | | | | | | | | | | | | |
| -004 | Logarithmic Analog Output PCB Assembly | 471680 | | X | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |

* X = The PCB revision levels documented in this manual.
● = These revision letters were never used in the instrument.
—= No revision letter on the PCB.

# Section 8
# Schematic Diagrams

## TABLE OF CONTENTS


| FIGURE | TITLE | PAGE |
|---|---|---|
| 8-1. | A1 Main PCB Assembly | 8-2 |
| 8-2. | A1A1 Display PCB Assembly | 8-4 |
| 8-3. | A2 AC PCB Assembly | 8-6 |
| 8-4. | -003 Counter Output Option Assembly | 8-9 |
| 8-5. | -004 Logarithmic Analog Output Option | 8-10 |

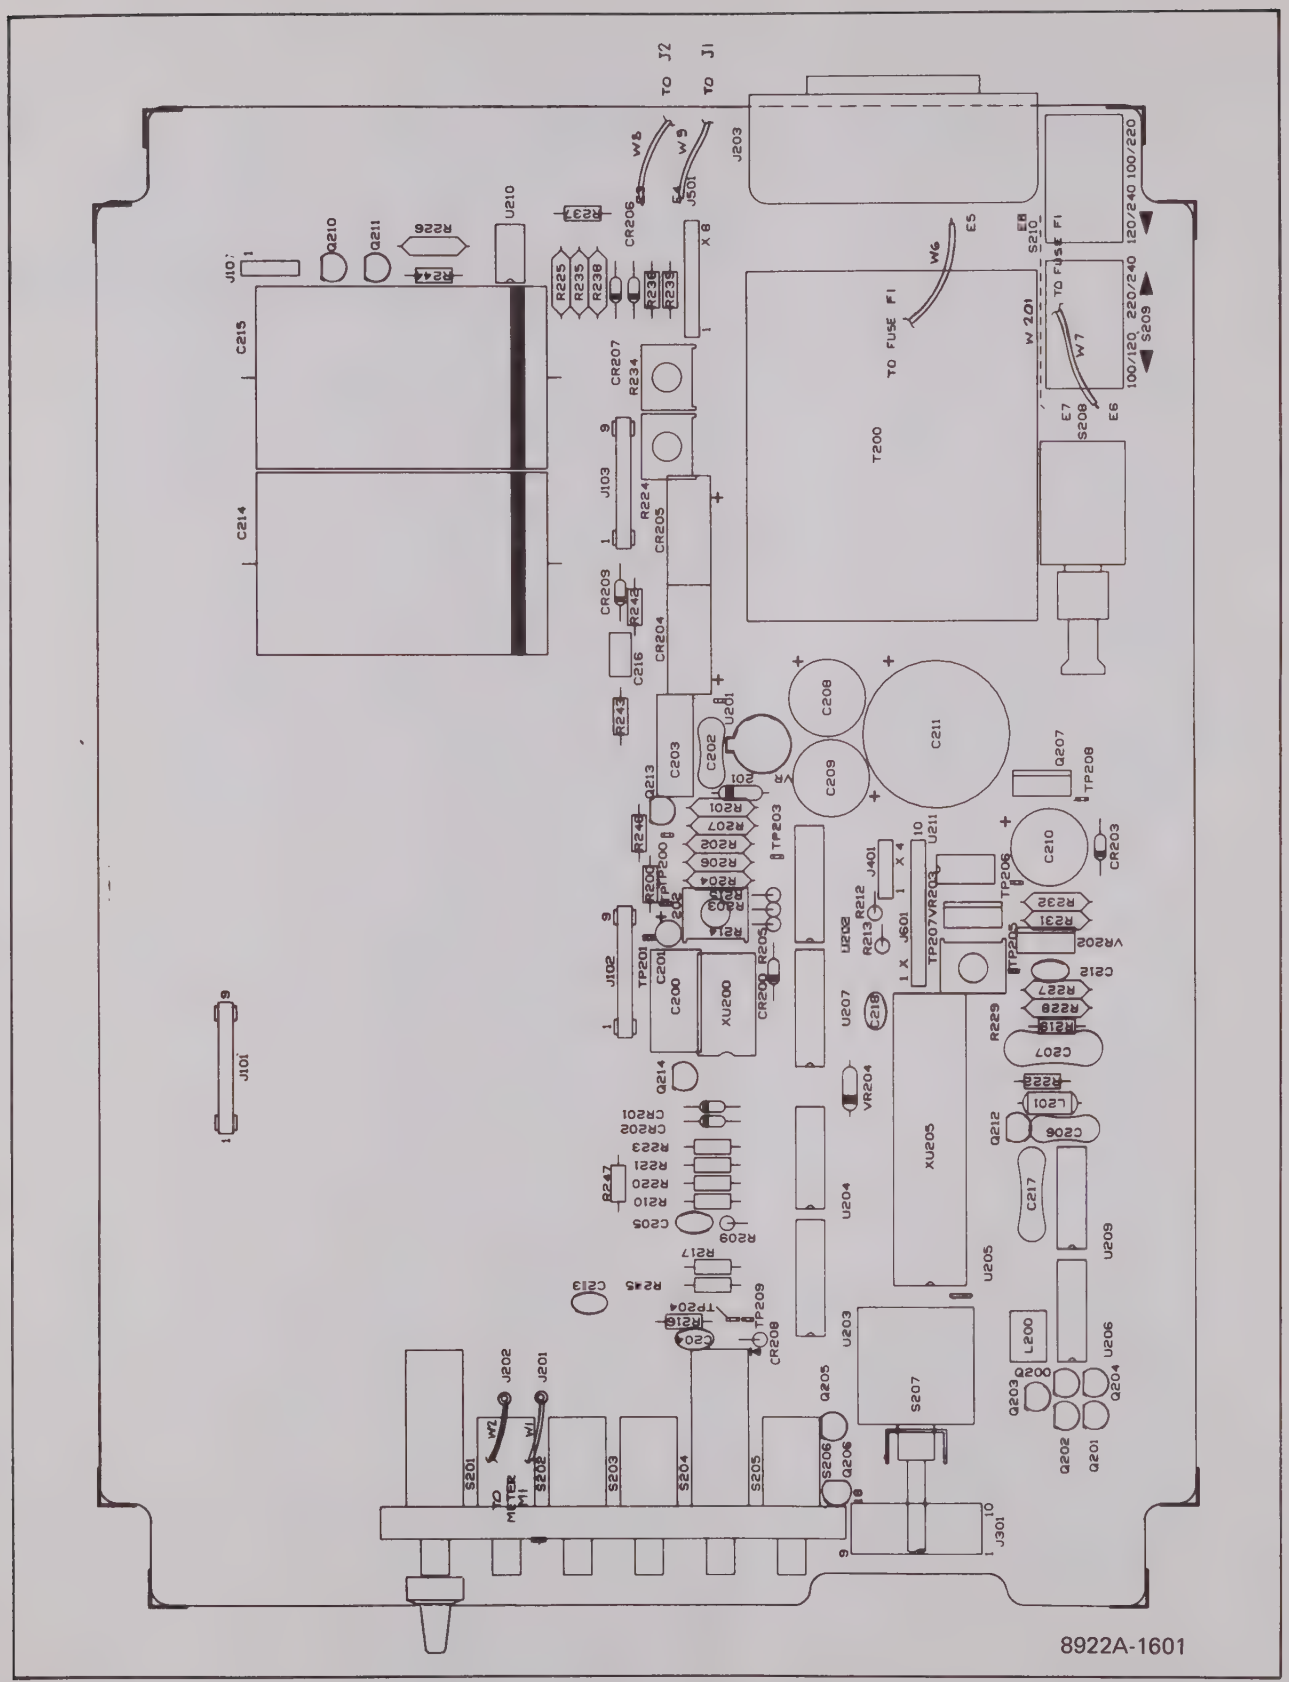


Figure 8-1. A1 Main PCB Assembly

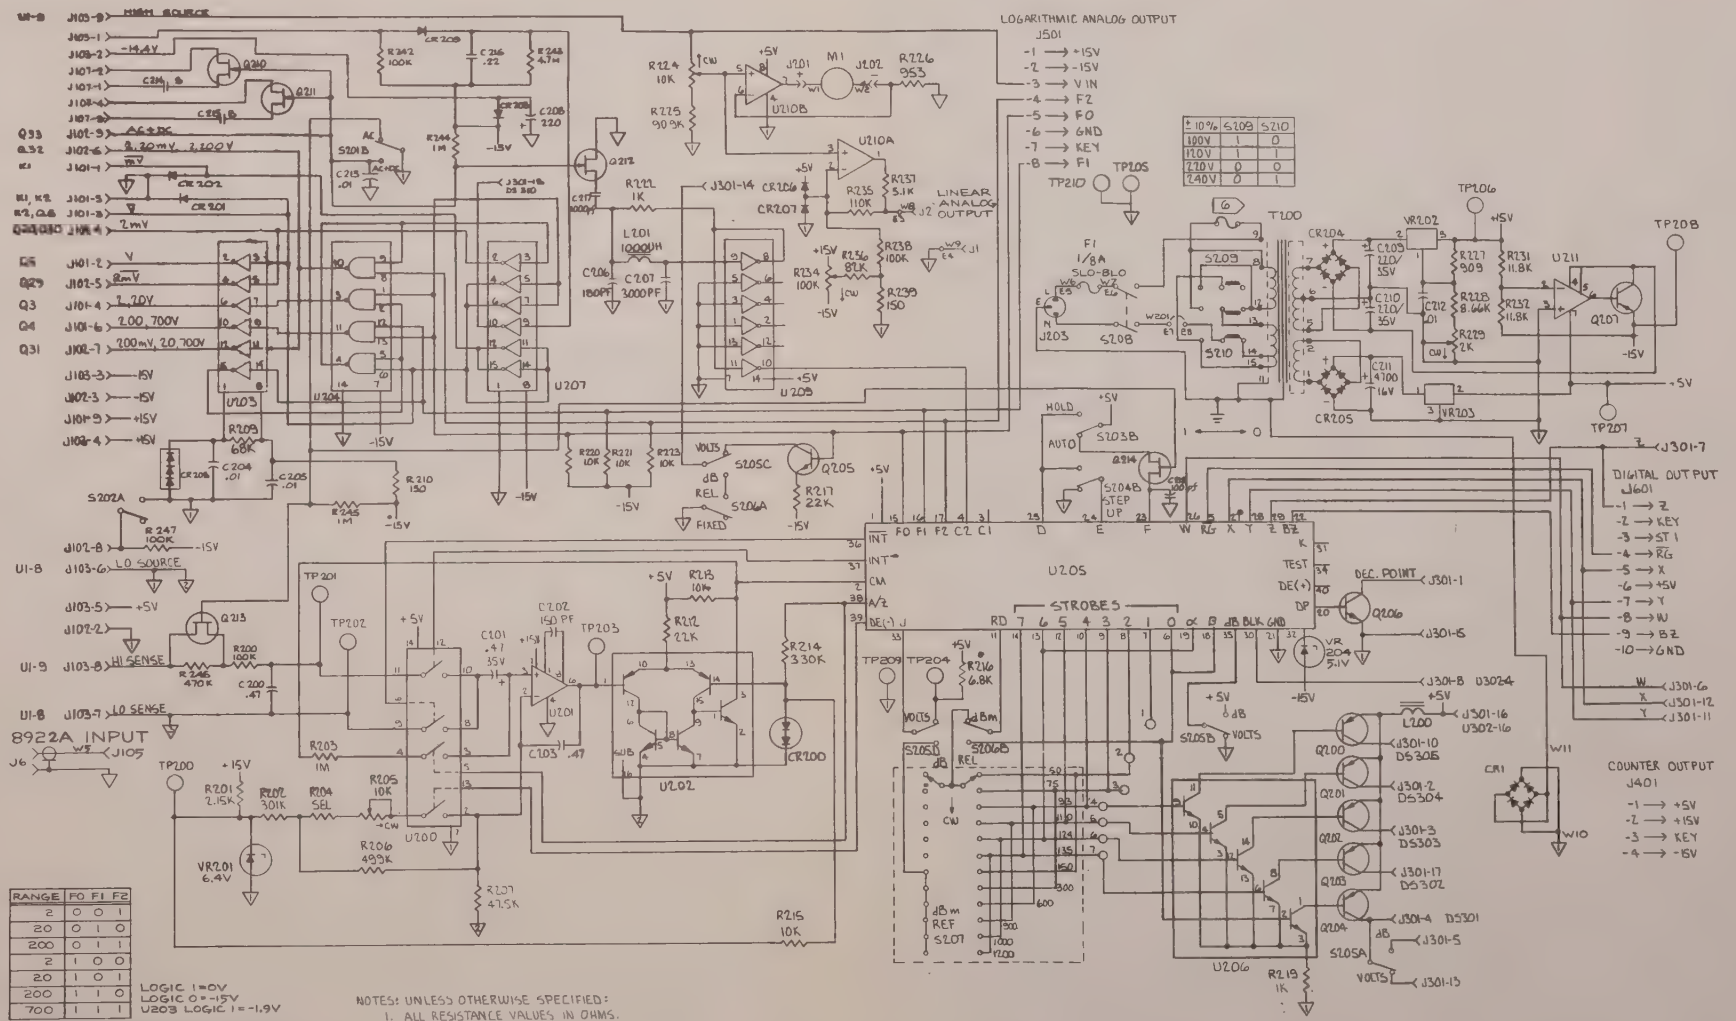


Figure 8-1. A1 Main PCB Assembly (cont)

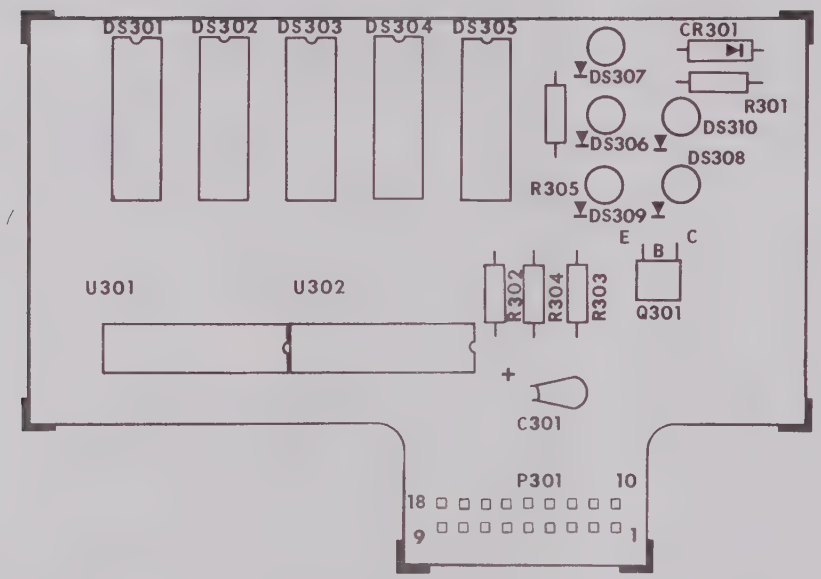


8920A-1602

Figure 8-2. A1A1 Display PCB Assembly

NOTES: UNLESS OTHERWISE SPECIFIED:
1. ALL RESISTANCE VALUES IN OHMS.
2. ALL CAPACITANCE VALUES IN MICROFARADS.

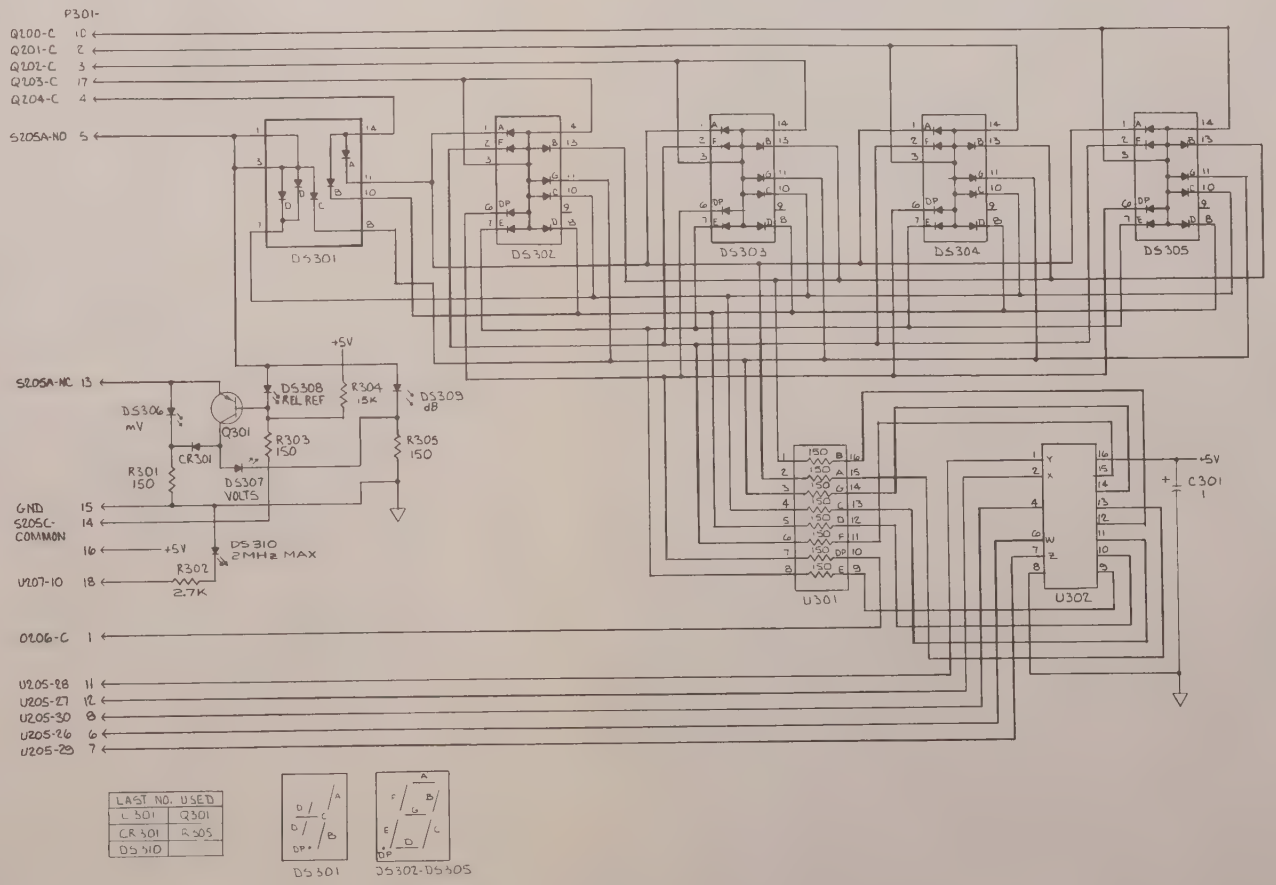


8920A-1002

Figure 8-2. A1A1 Display PCB Assembly (cont)

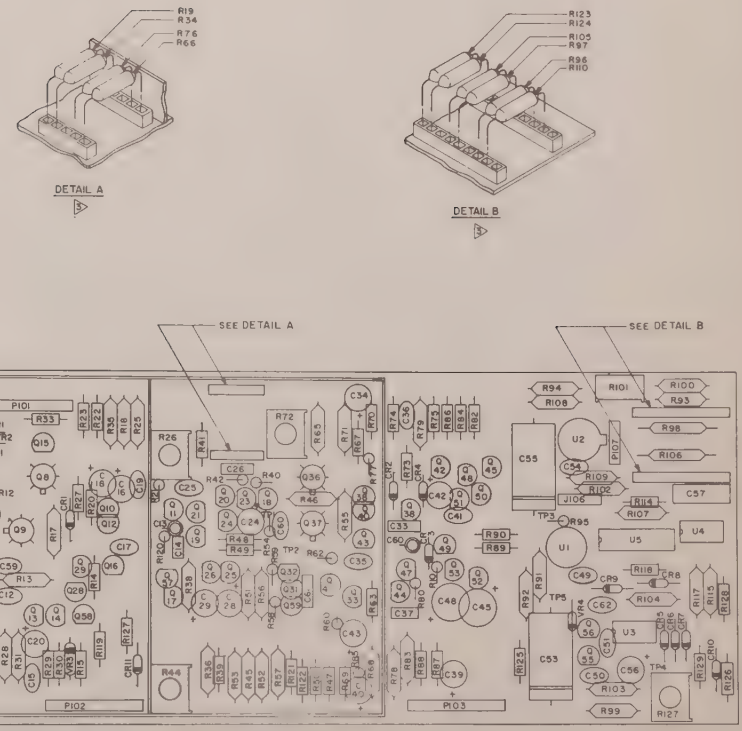


NOTES

3 INSTALLED IN FINAL ASSEMBLY

8922A-1603

Figure 8-3. A2 AC PCB Assembly

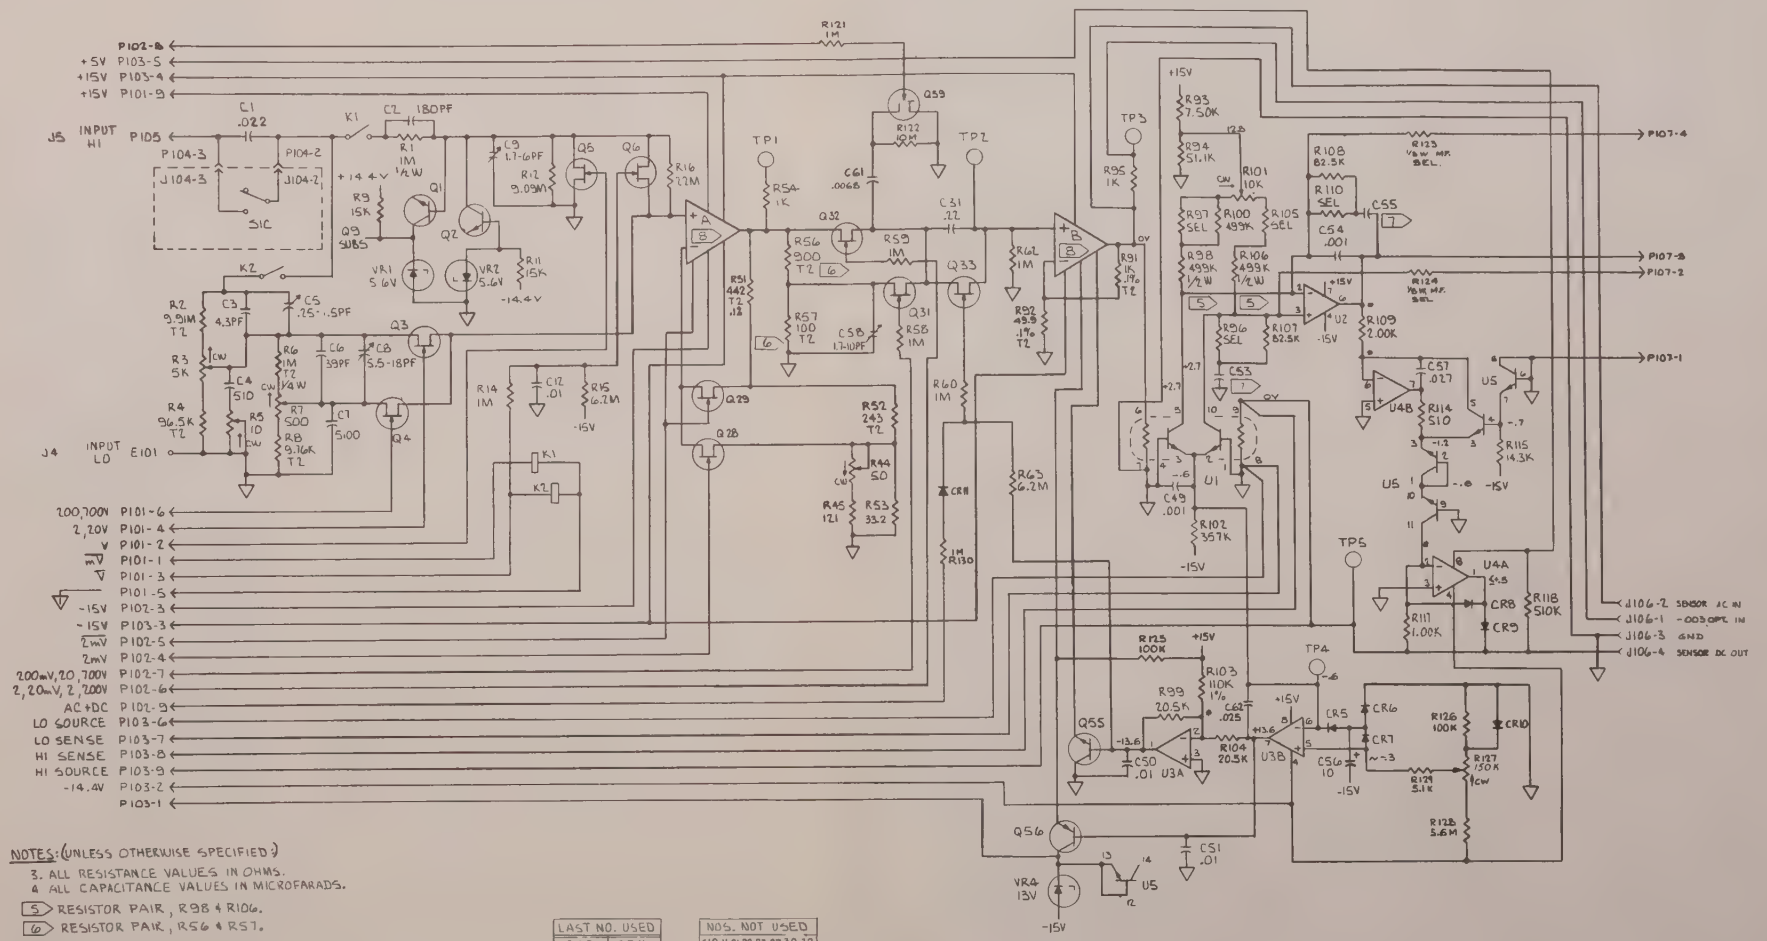


NOTES: (UNLESS OTHERWISE SPECIFIED)

3. ALL RESISTANCE VALUES IN OHMS.
4. ALL CAPACITANCE VALUES IN MICROFARADS.
5. RESISTOR PAIR, R98 & R106.
6. RESISTOR PAIR, R56 & R57.
7. CAPACITOR PAIR, C53 & C55.
8. REPRESENTS AMPLIFIERS A & B. SEE SH 2 FOR DETAILS.
9. VOLTAGES MEASURED WITH 8922A INPUT SHORTED, 1 VAC RANGE.
10. VOLTAGES ARE TYPICAL, MAY VARY ± 10%. # VOLTAGES PRESENT UNDER QUIESCENT CONDITIONS ARE OFFSET DEPENDENT.
11. ANALOG COMMON, LOGIC COMMON.

[NOTES CONTINUED ON SHEET 2]

| LAST NO. USED | |
|---|---|
| C62 | CR11 |
| K2 | Q59 |
| R129 | TP5 |
| U5 | VR4 |

| NOS. NOT USED |
|---|
| C10,11,21,22,23,27,30,32, 38,44,46,47,52 |
| Q7,22,27,34,35, 46, 54 & 30 |
| R24, 32, 61, 64, 81, 37, 43, 111, 112, 113 & 116 |

8922A-1003 (Sheet 1 of 2)

Figure 8-3. A2 AC PCB Assembly (cont)

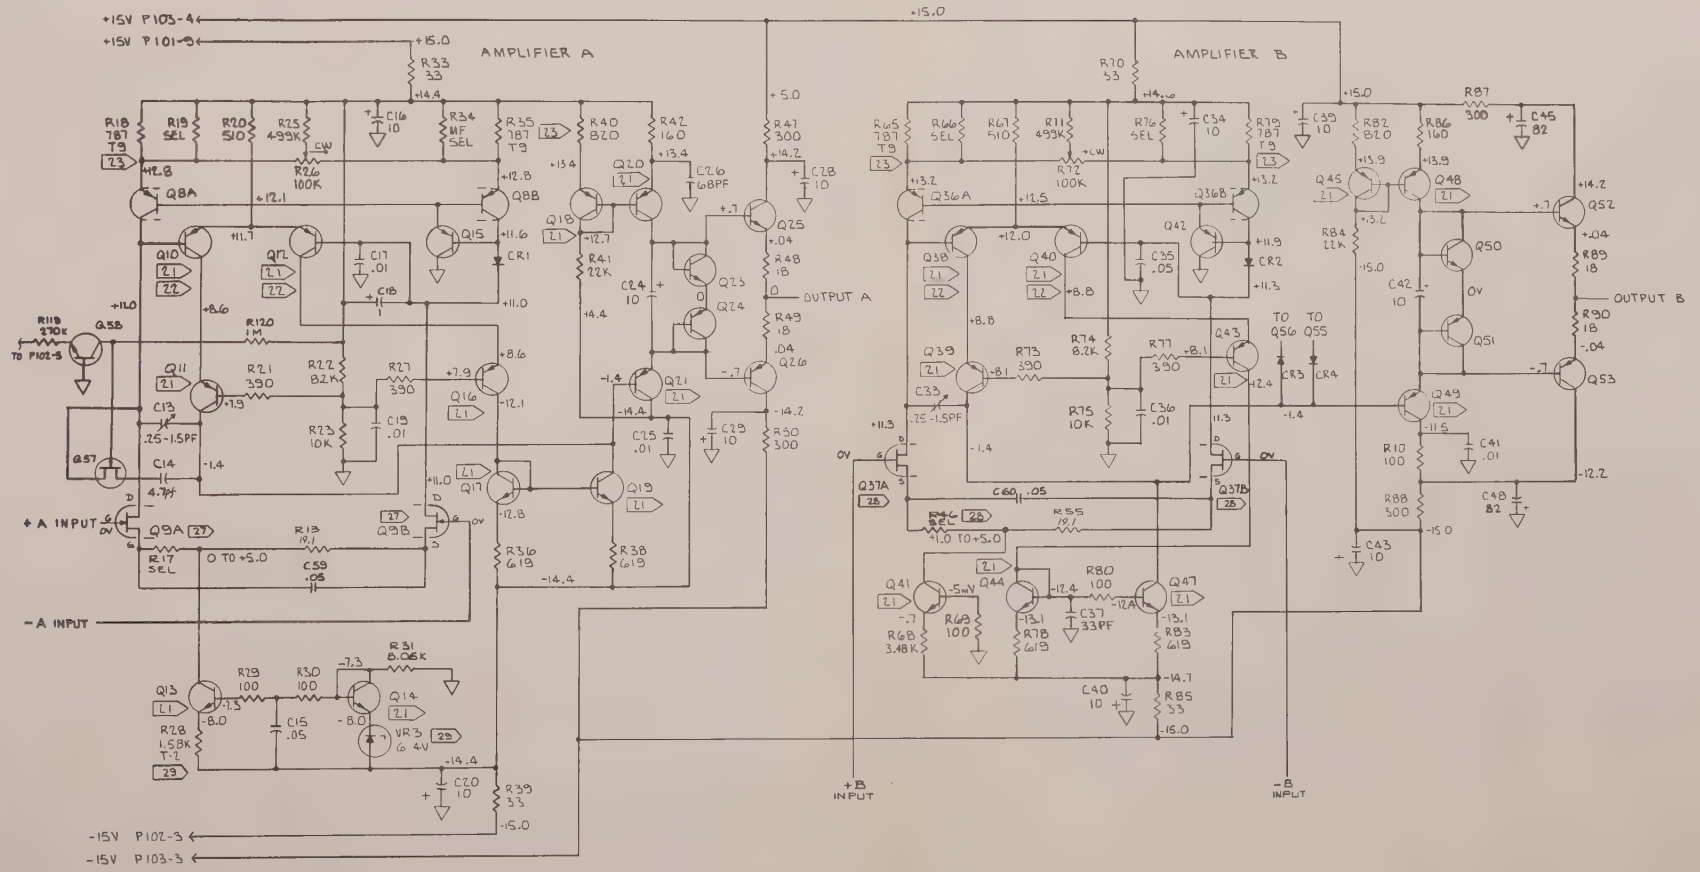


NOTES. UNLESS OTHERWISE SPECIFIED

21 NON-STANDARD PIN-OUT; EMITTER & BASE LEGS REVERSED.

22 TRANSISTOR SET: Q10, 12, 38 & 40.

23 RESISTOR SET: R18, 35, 65 & 79.

24. VOLTAGES MEASURED WITH 8922A INPUT SHORTED, 1 VAC RANGE.

25. ALL VOLTAGES MEASURED WITH A HIGH IMPEDANCE (100 MΩ) VOLTMETER WITH A 10K RESISTOR ISOLATING THE HIGH TEST PROBE. VOLTAGES ARE TYPICAL, MAY VARY ±10%.

27 Q9 & R17 ARE SELECTED AS A SET.

28 Q37 & R46 ARE SELECTED AS A SET

29 VR3 & R28 ARE SELECTED AS A SET.

8922A-1003 (Sheet 2 of 2)

Figure 8-3. A2 AC PCB Assembly (cont)

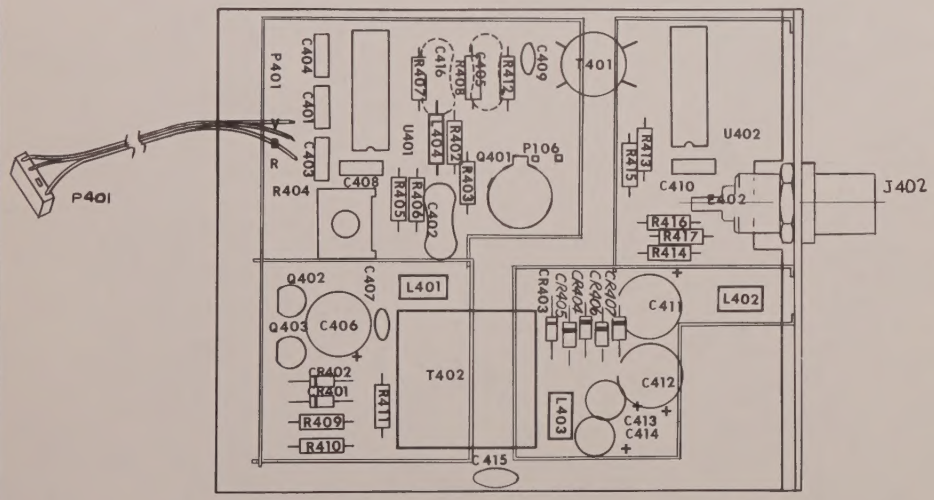


892XA-1613

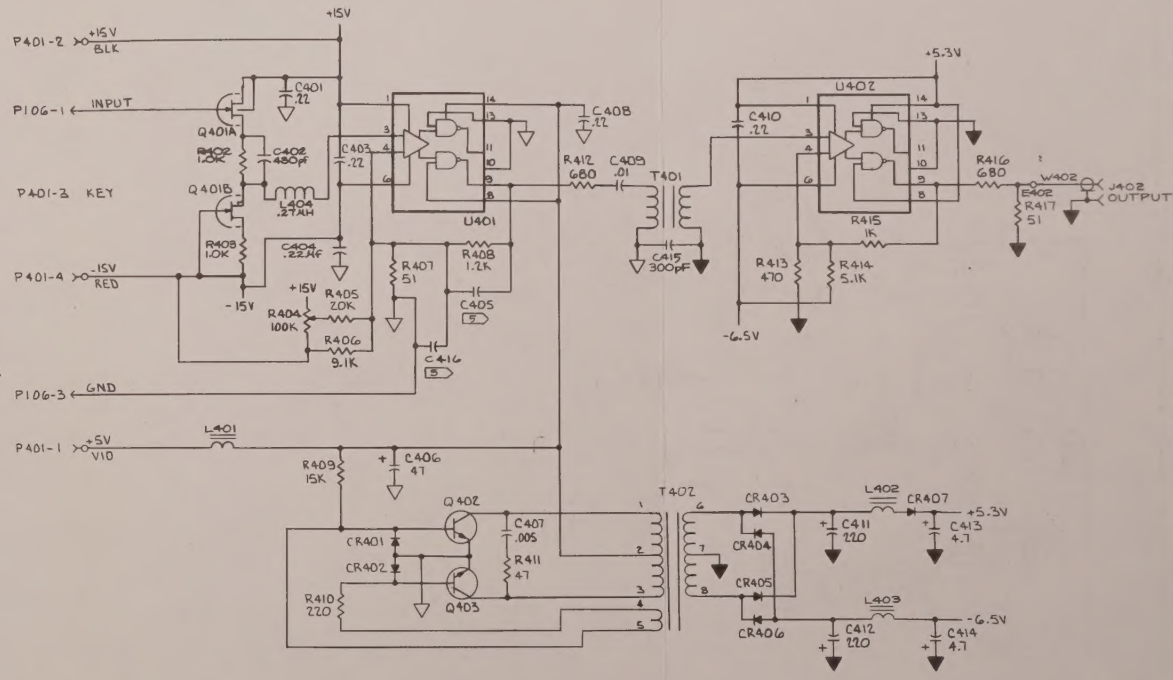


892XA-1013

NOTES- UNLESS OTHERWISE SPECIFIED:
1. ALL RESISTOR VALUES ARE IN OHMS.
2. ALL CAPACITANCE VALUES ARE IN MICROFARADS.
5. C405 & C416 VALUES ARE SELECTED AND ARE USUALLY OPEN (NOT INSTALLED)

| REFERENCE DESIGNATIONS | | |
|---|---|---|
| HIGHEST USED | | NOT USED |
| C416 | R417 | R401 |
| CR407 | T402 | |
| L404 | U402 | |
| Q403 | E402 | E401 |
| W402 | | W401 |

Figure 8-4. -003 Counter Output Option Assembly

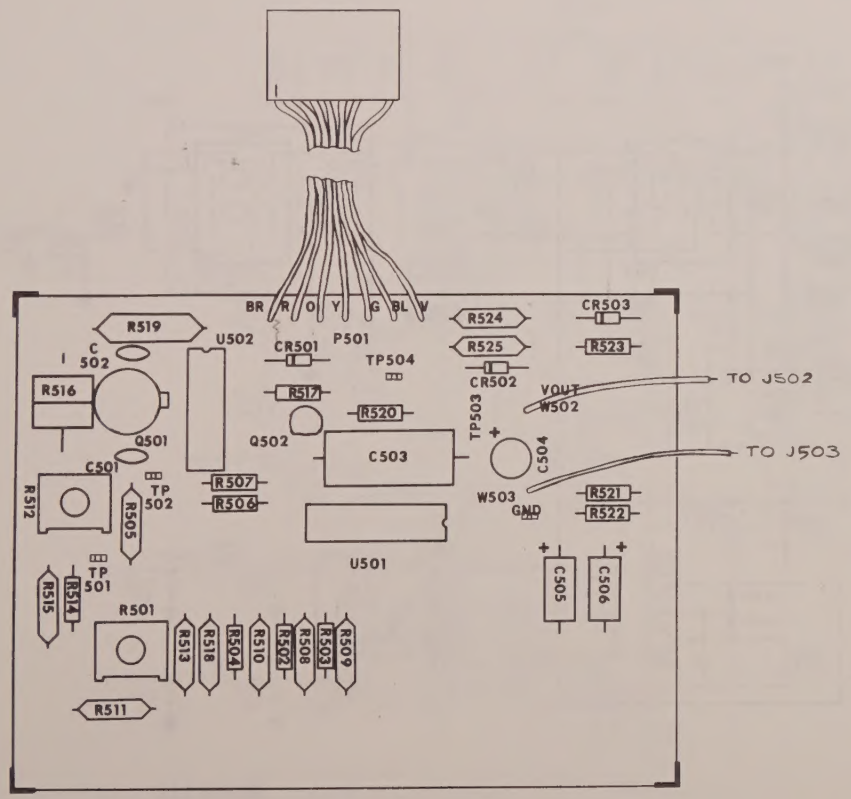


8920A-1614

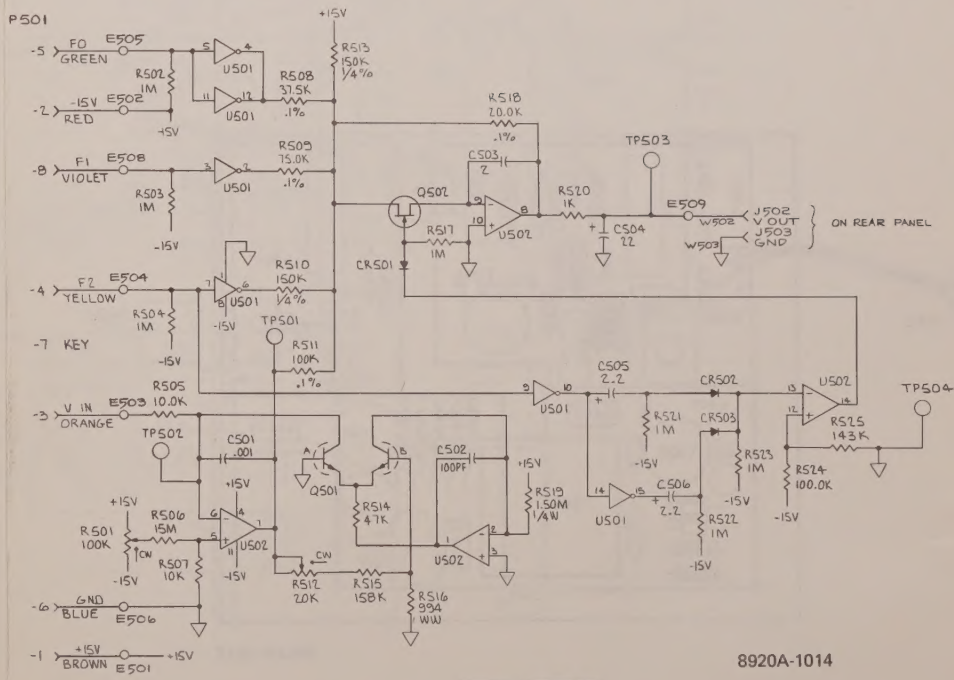


8920A-1014

| LAST NO. USED | |
|---|---|
| C506 | R525 |
| CR503 | TP503 |
| Q502 | U502 |

| RANGE | F0 | F1 | F2 |
|---|---|---|---|
| 2mV | 0 | 0 | 1 |
| 20mV | 0 | 1 | 0 |
| 200mV | 0 | 1 | 1 |
| 2V | 1 | 0 | 0 |
| 20V | 1 | 0 | 1 |
| 200V | 1 | 1 | 0 |
| 700V | 1 | 1 | 1 |

LOGIC 1 = 0V
LOGIC 0 = -15V

NOTES: UNLESS OTHERWISE SPECIFIED:
1. ALL RESISTANCE VALUES IN OHMS.
2. ALL CAPACITANCE VALUES IN MICROFARADS

**Figure 8-5. -004 Logarithmic Analog Output Option**

www.manualsplus.com
1020635